

[Manuals.plus](#) /

› [MECHEN](#) /

› MECHEN 64GB Clip MP3 Player Bluetooth 5.3 User Manual

MECHEN M3-64GB

MECHEN 64GB Clip MP3 Player Bluetooth 5.3 User Manual

Model: M3-64GB (A11)

1. INTRODUCTION

Thank you for choosing the MECHEN 64GB Clip MP3 Player. This portable music player is designed for convenience and high-quality audio on the go. Featuring Bluetooth 5.3, a built-in clip, and a range of functions including FM radio, voice recording, and a pedometer, it is an ideal companion for sports, travel, and daily listening. This manual provides detailed instructions to help you get the most out of your device.

2. PRODUCT FEATURES

- **64GB Large Memory Capacity:** Built-in 64GB storage, expandable up to 128GB via TF card, capable of storing over 16,000 songs. Can also function as a flash drive.
- **Updated Bluetooth 5.3 Chip:** Offers faster transfer speeds, stable performance, and high noise reduction. Pairs with Bluetooth headsets, headphones, and speakers. *Note: Does not pair with mobile phones or computers.*
- **Compact & Portable for Sports:** Measures 2.95*1.56*0.5 inches and weighs only 30g. Equipped with a clip for easy attachment to clothing, ideal for active use.
- **HIFI Sound Quality:** Utilizes a professional digital DAC audio decoding and noise reduction chip for high-definition audio. Supports multiple formats: MP3, WMA, APE, FLAC, WAV, OGG, AAC. *Note: Does not directly support audiobooks or iTunes.*
- **Lots of Additional Functions:** Includes music playback, voice recorder, FM radio, E-book reader, picture viewer, alarm, calendar, and pedometer. Features a highlight Line-in recording function.

3. PACKAGE CONTENTS

Please check the box for the following items:

- MECHEN 64GB Clip MP3 Player (M3-64GB)
- USB-C Charging Cable
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your MECHEN MP3 player.



Figure 4.1: Front and Side View of the MECHEN Clip MP3 Player. Shows the screen, control buttons, and side buttons including power, volume, and card slot.



Figure 4.2: Back View with Integrated Clip. The clip allows for easy attachment to clothing or bags.

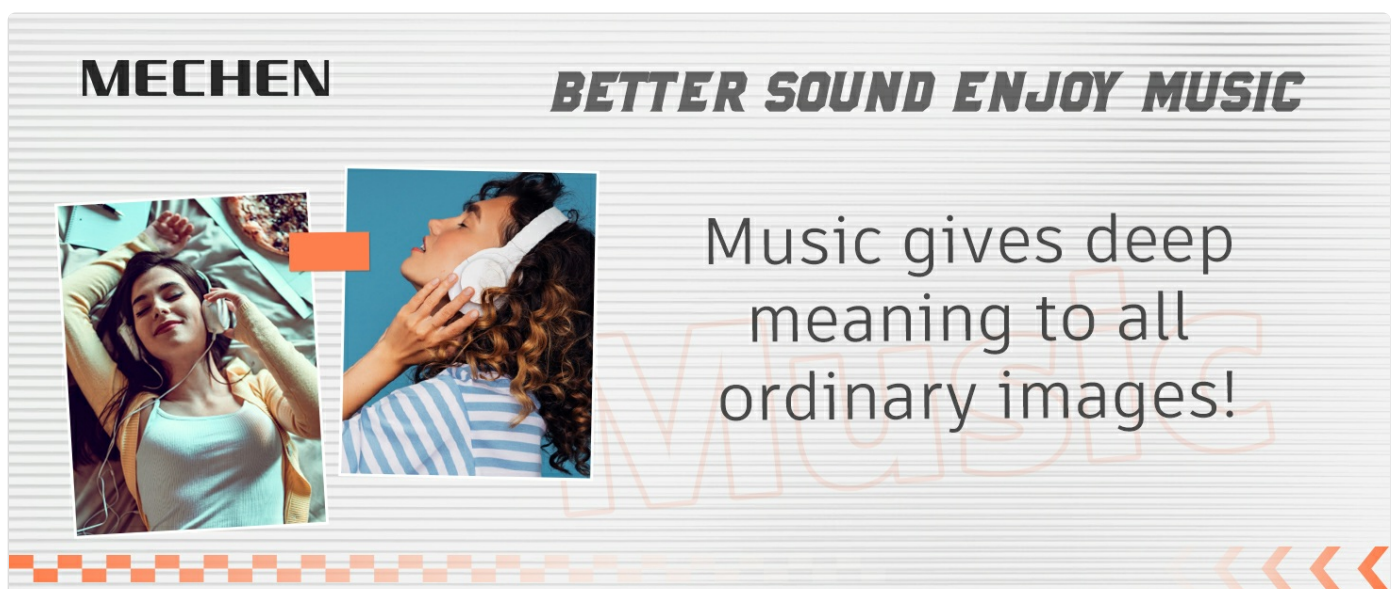 


Figure 4.3: Compact Design and Clip Feature. Highlights the small size and the utility of the clip for portability.

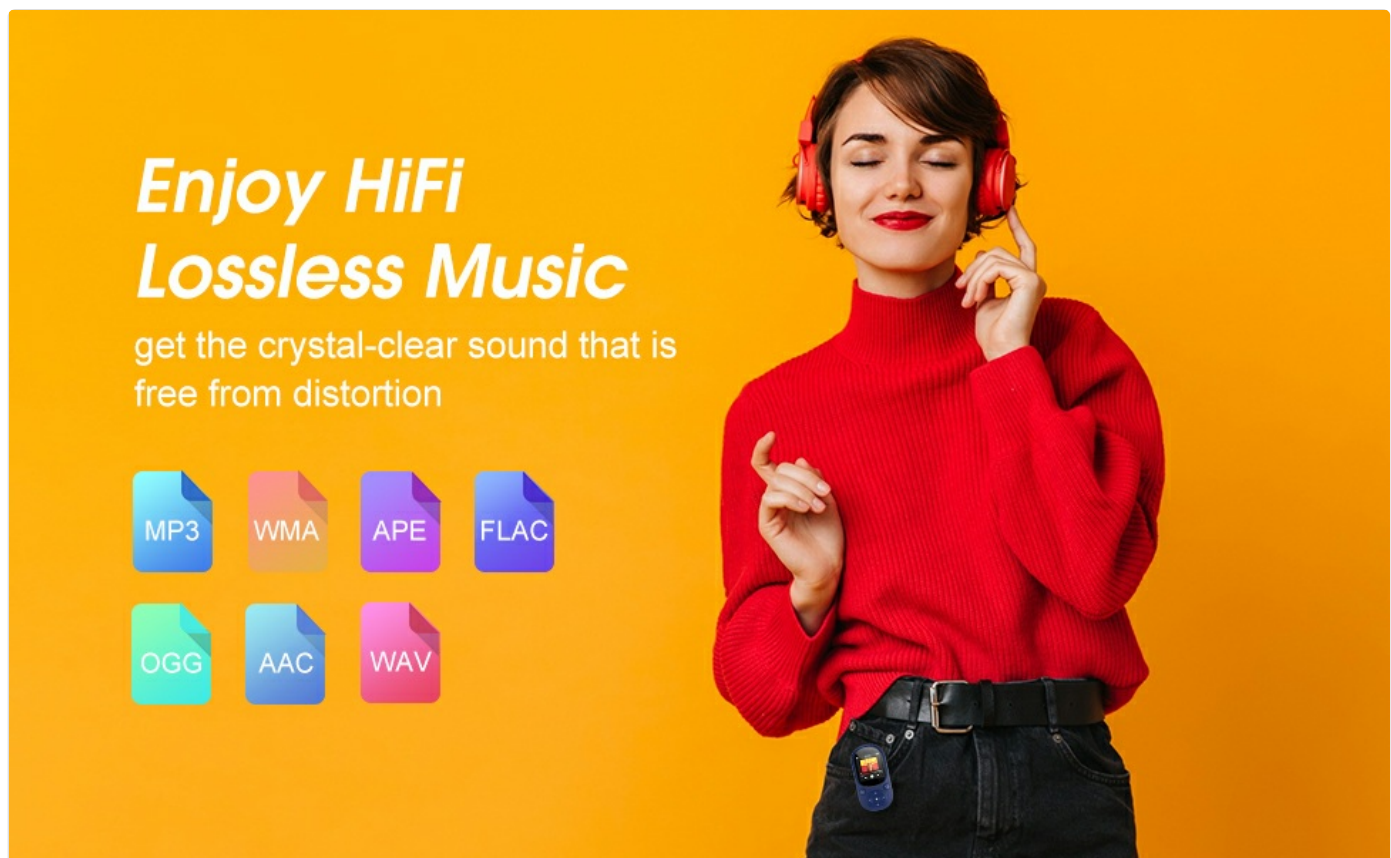


Figure 4.4: Storage Capacity. Illustrates the 64GB internal storage and the option to expand with a 128GB TF card.

5. SETUP

5.1 Charging the Device

Before first use, fully charge your MP3 player. Connect the included USB-C cable to the player's charging port and the other end to a USB power adapter (not included) or a computer's USB port.

- The battery icon on the screen will indicate charging status.
- A full charge typically takes approximately 2-3 hours.

5.2 Powering On/Off

- **To Power On:** Press and hold the Power button (usually on the side) for a few seconds until the screen lights up.
- **To Power Off:** Press and hold the Power button until the 'Power Off' option appears, then select it.

5.3 Inserting a MicroSD Card (Optional)

If you wish to expand storage, insert a MicroSD (TF) card (up to 128GB, not included) into the designated card slot on the side of the player. Ensure the card is inserted correctly until it clicks into place.

5.4 Transferring Music and Files

Connect the MP3 player to your computer using the USB-C cable. The player will appear as a removable disk. You can then drag and drop music files (MP3, WMA, APE, FLAC, WAV, OGG, AAC) and other supported files into the player's internal storage or the MicroSD card folder.

6. OPERATING INSTRUCTIONS

6.1 Music Playback

- From the main menu, select 'Music'.

- Navigate through 'All Songs', 'Artists', 'Albums', 'Genres', 'Playlists', or 'Folders'.
- Use the navigation buttons (Up/Down/Left/Right) to select a song or folder, and the Play/Pause button to confirm.
- During playback:
 - Press Play/Pause to pause or resume.
 - Press Left/Right to skip to the previous/next track.
 - Long press Left/Right to fast rewind/forward.
 - Use the volume buttons (+/-) on the side to adjust volume.
- **Repeat & Shuffle:** Access playback options from the music interface to set repeat modes (e.g., Repeat All, Repeat One) or enable/disable shuffle.
- **Variable Speed Playback:** Adjust playback speed for audio content.
- **Equalizer:** Customize sound profiles (e.g., Rock, Pop, Jazz) or create a custom setting.
- **Playlists:** The device supports up to 3 playlists. You can create and manage them directly on the player.

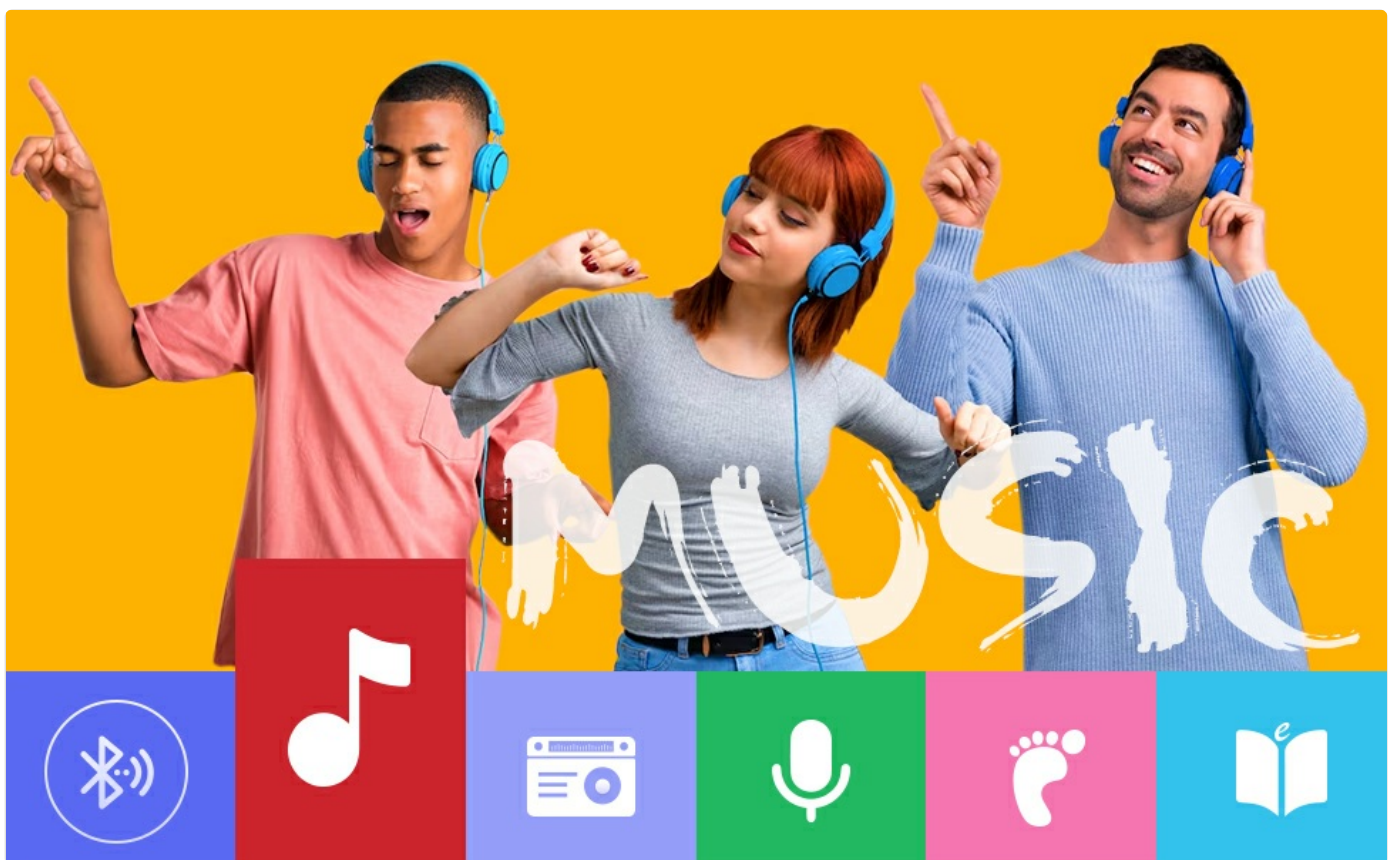 


Figure 6.1: Music Playback Features. Highlights various options available during music playback.

6.2 Bluetooth Connectivity

The MECHEN MP3 player features Bluetooth 5.3 for wireless audio output.

- From the main menu, select 'Bluetooth'.
- Turn on Bluetooth. The player will scan for available devices.
- Select your Bluetooth headphones, earphones, or speaker from the list to pair.
- Once paired, audio will be routed wirelessly to your connected device.
- *Important Note: This MP3 player is designed to connect to Bluetooth audio output devices only (headphones, speakers). It cannot connect to smartphones, computers, or car Bluetooth systems.*

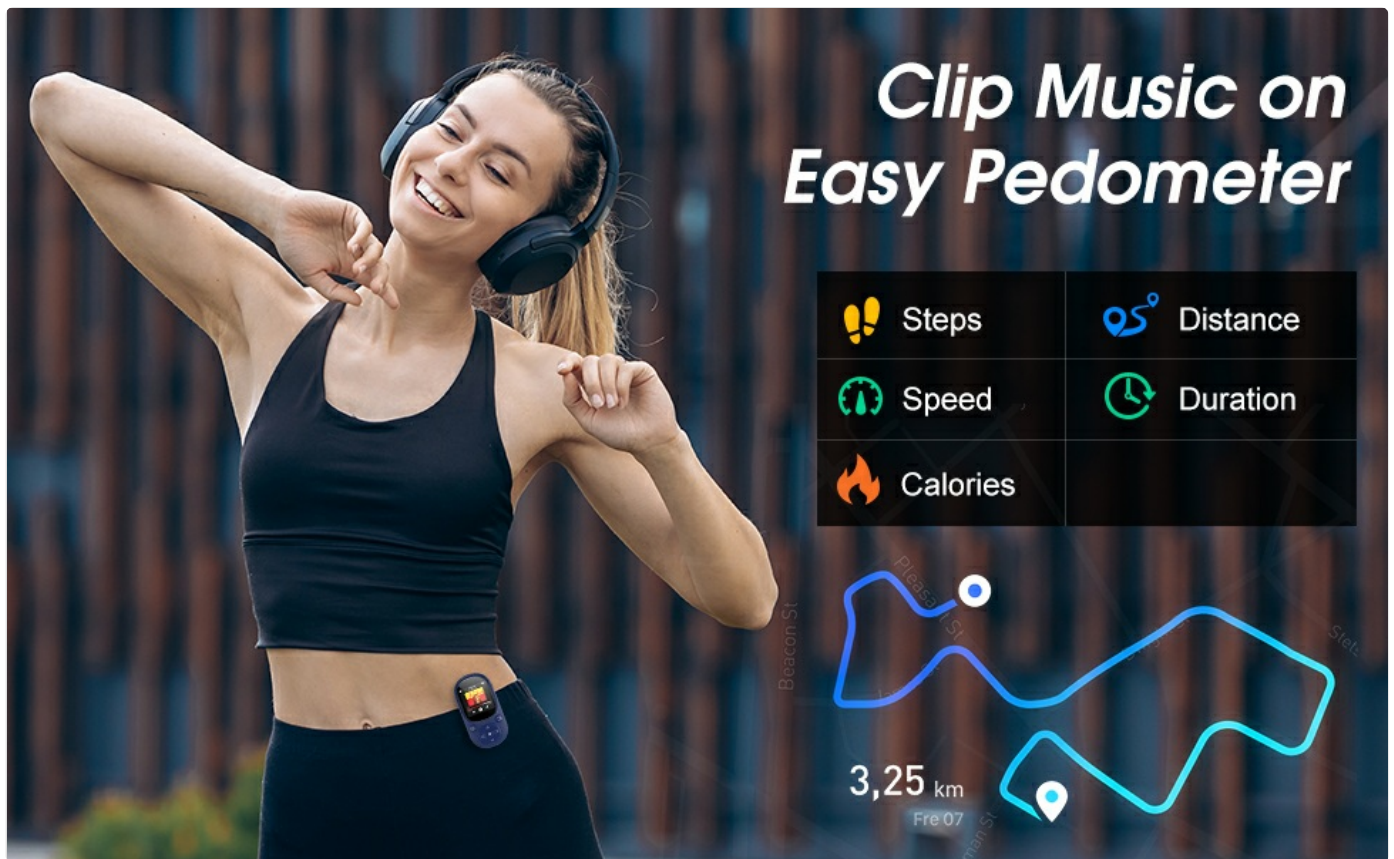 


Figure 6.2: Bluetooth 5.3 Wireless Connection. Shows the player connecting to various Bluetooth audio devices.

6.3 FM Radio

Enjoy your favorite radio stations on the go.

- From the main menu, select 'FM Radio'.
- *A wired headset must be plugged into the 3.5mm audio jack to act as an antenna for the FM radio function.*
- Use the auto-tune feature to scan and save available stations.
- Manually tune to specific frequencies using the navigation buttons.



Figure 6.3: Built-in FM Radio. Illustrates the FM radio interface and the requirement for wired headphones as an antenna.

6.4 Voice Recorder

- Select 'Recorder' from the main menu.
- Choose 'Start Voice Recording' to begin.
- Press the Play/Pause button to stop/save the recording.
- Recordings are saved in the 'Recordings' folder.
- The device also supports Line-in recording, allowing you to record audio from an external source connected via an audio cable (not included).

6.5 Pedometer

Track your steps and activity with the built-in pedometer.

- Select 'Pedometer' from the main menu.
- Start the pedometer function to begin tracking steps, distance, speed, duration, and calories burned.
- Ensure the player is securely clipped to your clothing for accurate tracking.

Bluetooth 5.3 Wireless Connection

Compatible with Bluetooth headset, Bluetooth headphones, Bluetooth speakers.



Note: It can't connect with smartphone, PC or car by Bluetooth.

Figure 6.4: Pedometer Functionality. Demonstrates the device's use during exercise and the metrics it tracks.

6.6 Other Functions (E-book, Picture, Alarm, Calendar)

- **E-book:** View text files (e.g., .TXT format).
- **Picture:** Browse image files.
- **Alarm:** Set alarms.
- **Calendar:** View the current date.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Impacts:** Protect the device from drops and impacts, which can damage internal components or the screen.
- **Water Resistance:** The device is not waterproof. Avoid exposure to water or high humidity.

8. TROUBLESHOOTING

Device does not power on:

Ensure the battery is charged. Connect to a charger and try again. If unresponsive, try holding the power button for an extended period (10-15 seconds) for a hard reset.

Cannot connect to Bluetooth device:

Ensure your Bluetooth headphones/speaker are in pairing mode. Make sure the MP3 player's Bluetooth is enabled. Remember, the player cannot connect to phones or computers. Try restarting both devices.

MicroSD card not recognized:

Ensure the card is inserted correctly and fully. Try reinserting the card. Test with another compatible MicroSD card if possible. Ensure the card is formatted to a compatible file system (e.g., FAT32).

No sound or low volume:

Check the volume level on the player and your connected headphones/speaker. Ensure headphones are properly plugged in if using wired. If using Bluetooth, ensure it's connected. Note that the volume may reset to a low level after powering off/on.

Songs skipping or cutting off:

This could indicate corrupted files. Try re-transferring the affected songs. Ensure the device's firmware is up to date (check manufacturer's website for updates). If the issue persists across multiple files, consider backing up data and performing a factory reset (if available in settings).

FM Radio not working:

A wired headset must be plugged in to serve as an antenna for the FM radio function. Ensure the headset is fully inserted.

9. SPECIFICATIONS

Feature	Detail
Model Name	A11
Item Model Number	M3-64GB
Product Dimensions	2.95 x 1.56 x 0.5 inches
Item Weight	1.06 ounces (30g)
Memory Storage Capacity	64 GB (Internal), expandable up to 128 GB (Micro SD/TF card)
Connectivity Technology	Bluetooth 5.3
Screen Size	1.44 Inches
Color	Blue
Compatible Audio Formats	MP3, WMA, APE, FLAC, WAV, OGG, AAC
Battery	1 Lithium Polymer battery (included)
Special Feature	Built-In Clip, FM Radio, Voice Recorder, E-book, Picture, Alarm, Calendar, Pedometer
Manufacturer	MECHEN
Date First Available	September 5, 2023

10. WARRANTY AND SUPPORT

MECHEN products are designed for reliability and performance. For specific warranty information regarding your MECHEN 64GB Clip MP3 Player, please refer to the warranty card included in your product packaging or visit the official MECHEN website.

If you encounter any issues or require technical assistance, please contact MECHEN customer support through their official channels. Provide your model number (M3-64GB) and a detailed description of the issue for faster service.

Official MECHEN Store: <https://www.amazon.com/stores/MECHEN/page/1E5EE0CD-E396-45C5-85C4-0A269381EEF3>

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CH9WRG2R>

More documents and user manuals: <https://manuals.plus/>