

- Manuals.plus /
- › [LELO](#) /
- › [LELO Enigma Wave Triple Stimulation Vibrator User Manual](#)

LELO 89009

LELO Enigma Wave Triple Stimulation Vibrator User Manual

Model: 89009

[Overview](#)[Setup](#)[Operation](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)[Warranty & Support](#)

PRODUCT OVERVIEW

The LELO Enigma Wave is a triple stimulation vibrator designed for comprehensive pleasure. It features WaveMotion™ technology for internal stimulation and SenSonic™ technology for external clitoral stimulation, powered by three synchronized motors. The device is made from body-safe silicone and offers multiple settings for varied experiences.

ENIGMA Wave™
triple stimulation massager



MANUAL
how to use guide



**MOISTURIZER
SACHET**
water-based lubricant
5 ml / 0.17 fl. oz.



CHARGING CORD
USB cable



SATIN POUCH
for storage



WARRANTY CARD
verifies product authenticity

Image: LELO Enigma Wave Triple Stimulation Vibrator, showcasing its ergonomic design.

Package Contents

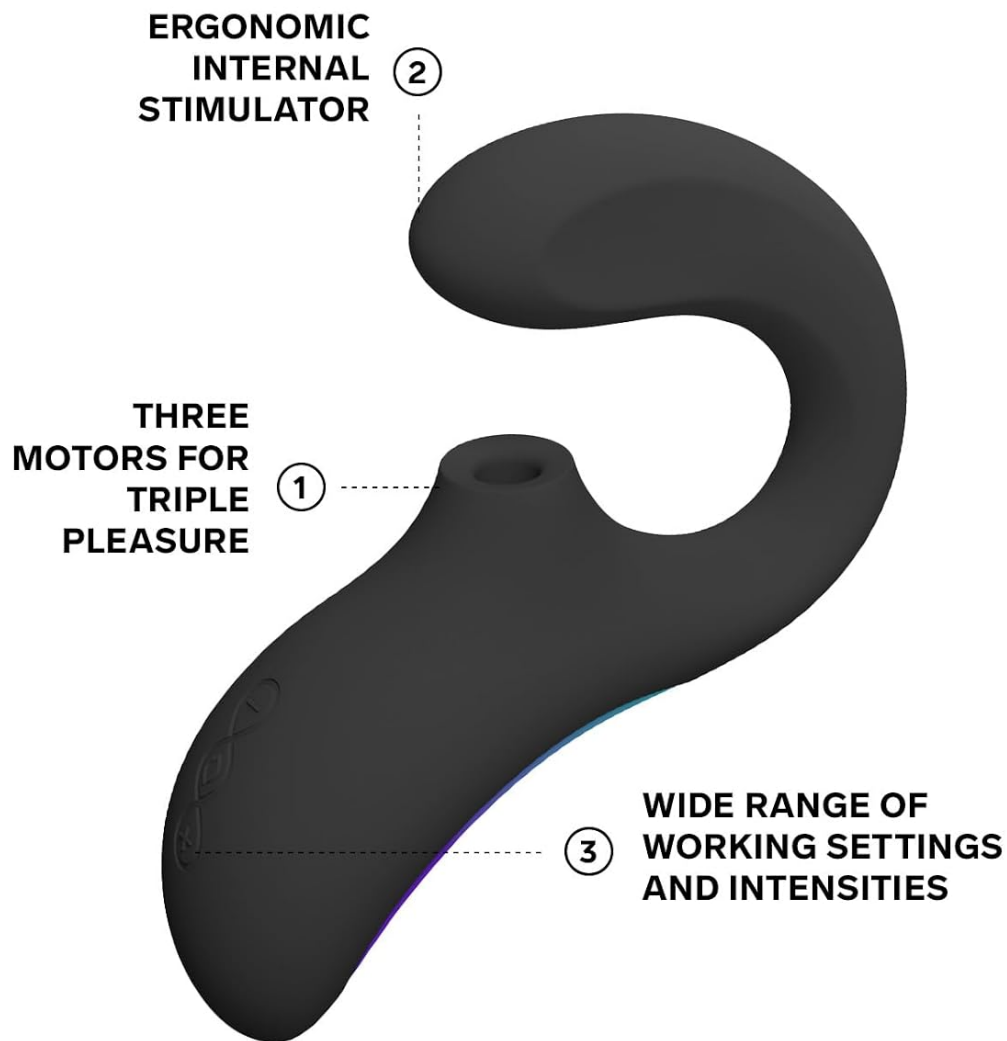


Image: Contents of the LELO Enigma Wave package, including the device, manual, moisturizer sachet, charging cord, and satin pouch.

- LELO Enigma Wave Triple Stimulation Massager
- USB Charging Cable
- Satin Storage Pouch
- Water-based Lubricant Sachet (5 ml / 0.17 fl. oz.)
- Instruction Manual (this document)
- Warranty Registration Card

SETUP AND FIRST USE

Charging

Before first use, fully charge your LELO Enigma Wave for **2 hours**. Connect the provided USB charging cable to the device's charging port and a USB power source. The LED lights on the device will blink to indicate the battery level during charging.

Cleaning

Clean the device thoroughly before and after each use. Use LELO Toy Cleaner or warm water and mild soap. Rinse well and pat dry with a lint-free cloth.

Lubrication

For optimal comfort and experience, apply a generous amount of water-based lubricant to the device and your body before use. Do not use silicone-based lubricants as they can damage the silicone material.

OPERATION

How to use

BEFORE FIRST USE

charge for 2 hours

TO TURN IT ON

press the + or () button

THE LED LIGHTS WILL BLINK

to indicate the battery level

TO SWITCH BETWEEN 8 SETTINGS

press the () button

TO DECREASE OR INCREASE THE INTENSITY

use the + and the - buttons

TO TURN IT OFF

press and hold the () button



Image: Diagram illustrating the basic controls for the LELO Enigma Wave, including power and intensity buttons.

1. **Power On:** Press the + or () button to turn the device on. The LED lights will blink to indicate the current battery level.

2. **Change Settings:** Press the () button to cycle through the 8 available vibration patterns.
3. **Adjust Intensity:** Use the + and - buttons to increase or decrease the intensity of the chosen pattern.
4. **Power Off:** Press and hold the () button until the device turns off.

Key Technologies

Features



WAVEMOTION™ TECHNOLOGY

fully flexible internal stimulator surges within you in a finger like motions



SENSONIC™ TECHNOLOGY

uses sonic pulses for deep but gentle stimulation



8 SETTINGS

from a teasing murmur to a satisfying pulse



WATERPROOF DESIGN

perfect for the bath and shower



EXTRA-SOFT SILICONE

premium silicone that feels warm to the touch



LONG-LASTING CHARGE

longer time for pleasure



Image: Visual representation of the LELO Enigma Wave's key features, including WaveMotion™ and SenSonic™ technologies.

- **WaveMotion™ Technology:** The internal stimulator features a fully flexible design that surges with wave-like motions, mimicking a finger-like massage.
- **SenSonic™ Technology:** This technology uses sonic pulses for deep yet gentle clitoral stimulation without direct contact.
- **8 Settings:** Choose from a range of 8 distinct patterns, from gentle murmurs to powerful pulses.
- **Waterproof Design:** The device is IPX7 certified, making it safe for use in the bath or shower and easy to clean.
- **Extra-Soft Silicone:** Constructed from premium, body-safe silicone that is smooth and comfortable to the touch.
- **Long-Lasting Charge:** Designed for extended use on a single charge.

CARE AND MAINTENANCE

Cleaning

Always clean your LELO Enigma Wave before and after each use. Wash the device with warm water and a mild, antibacterial soap or a specialized toy cleaner. Rinse thoroughly with clean water and dry with a soft, lint-free cloth. Avoid using cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone.

Charging

Recharge the device when the LED indicator shows low battery. Use only the original USB charging cable provided. Do not leave the device charging unattended for extended periods.

Storage

Store your LELO Enigma Wave in the provided satin pouch in a cool, dry place, away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent material degradation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery.	Charge the device for 2 hours.
Device does not respond to button presses.	Device may be locked or require a reset.	Ensure the device is charged. Try pressing and holding the power button for 5-10 seconds to reset.
Reduced vibration intensity.	Low battery.	Recharge the device.
Charging indicator lights are not working.	Charging cable or port issue.	Ensure the charging cable is securely connected. Try a different USB power source. If the issue persists, contact customer support.

If you encounter any issues not listed here, please refer to the Warranty & Support section for assistance.

SPECIFICATIONS

- **Model:** 89009
- **Material:** Body-safe Silicone
- **Color:** Black (for this variant)
- **Dimensions:** 4.17 x 1.97 x 7.17 inches
- **Weight:** 7.05 ounces
- **Battery:** 1 Lithium Polymer battery (included)
- **Charging:** USB Rechargeable
- **Water Resistance:** IPX7 Certified (fully waterproof)
- **Settings:** 8 vibration patterns
- **Technology:** WaveMotion™ and SenSonic™

WARRANTY & SUPPORT

LELO products are manufactured to the highest standards and come with a comprehensive warranty.

- **1-Year Warranty:** This covers any manufacturing defects or issues that arise within one year of the purchase date. A free replacement will be provided if eligible.
- **10-Year Quality Guarantee:** Beyond the initial 1-year warranty, LELO offers a 10-year quality guarantee, ensuring long-term product reliability.

To register your product or for warranty claims, please visit the official LELO website or contact their customer support. Keep your proof of purchase for warranty validation.

For further assistance or inquiries, please visit the [LELO Brand Store on Amazon](#) or the official LELO website.

© 2024 LELO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CHB6BK5X>

More documents and user manuals: <https://manuals.plus/>