

[Manuals.plus](#) /

› [LELO](#) /

› LELO Enigma Wave Triple Stimulation Massager User Manual

LELO 89008

LELO Enigma Wave Triple Stimulation Massager User Manual

Model: 89008

INTRODUCTION

The LELO Enigma Wave is an advanced pleasure device designed for comprehensive stimulation. It features innovative WaveMotion™ technology for internal sensations, combined with SenSonic™ technology for external clitoral stimulation, and a third motor for deep G-spot targeting. Crafted from body-safe silicone, this waterproof and USB-rechargeable device offers eight distinct vibration patterns for a personalized experience.



Image: The LELO Enigma Wave massager, highlighting its unique design and packaging.

PRODUCT FEATURES

- **Triple Stimulation:** Incorporates three synchronized motors for clitoral suction, G-spot stimulation, and internal WaveMotion™ sensations.
- **WaveMotion™ Technology:** Mimics a realistic finger-like massage motion internally for deep pleasure.
- **SenSonic™ Technology:** Utilizes sonic pulses for gentle yet potent clitoral stimulation without direct contact.
- **8 Vibrating Patterns:** Offers a wide range of settings from subtle murmurs to intense pulses.
- **100% Waterproof (IPX7):** Safe for use in the bath or shower and easy to clean.
- **USB Rechargeable:** Convenient charging with the included USB cable.
- **Body-Safe Silicone:** Made from premium, flexible silicone for a smooth and comfortable feel.
- **Long-Lasting Charge:** Provides extended use on a single charge.

Features



WAVEMOTION™ TECHNOLOGY

fully flexible internal stimulator surges within you in a finger like motions



SENSONIC™ TECHNOLOGY

uses sonic pulses for deep but gentle stimulation



8 SETTINGS

from a teasing murmur to a satisfying pulse



WATERPROOF DESIGN

perfect for the bath and shower



EXTRA-SOFT SILICONE

premium silicone that feels warm to the touch



LONG-LASTING CHARGE

longer time for pleasure



Image: Visual representation of the LELO Enigma Wave's core features.

PACKAGE CONTENTS

Your LELO Enigma Wave package includes the following items:

- Lelo Enigma Wave Massager
- User Manual
- Moisturizer Sachet (water-based lubricant, 5 ml / 0.17 fl. oz.)
- USB Charging Cable
- Satin Storage Pouch
- Warranty Registration Card

ENIGMA Wave™
triple stimulation massager



MANUAL
how to use guide



MOISTURIZER SACHET
water-based lubricant
5 ml / 0.17 fl. oz.



CHARGING CORD
USB cable



SATIN POUCH
for storage



WARRANTY CARD
verifies product authenticity

Image: All items included in the LELO Enigma Wave product box.

SETUP

Initial Charging

Before first use, fully charge your LELO Enigma Wave for 2 hours. Connect the included USB charging cable to the charging port located at the base of the device and plug the other end into a USB power source. The LED lights on the device will blink to indicate the battery level during charging.

Powering On/Off

To turn the device on, press the + or () button. The LED lights will illuminate. To turn the device off, press and hold the () button until the device powers down.

OPERATING INSTRUCTIONS

Switching Settings

The LELO Enigma Wave features 8 distinct vibrating patterns. To switch between these settings, press the () button.

Adjusting Intensity

To decrease the intensity, use the - button. To increase the intensity, use the + button. Experiment with different settings and intensities to find your preferred experience.

How to use

BEFORE FIRST USE

charge for 2 hours

TO TURN IT ON

press the + or () button

THE LED LIGHTS WILL BLINK

to indicate the battery level

TO SWITCH BETWEEN 8 SETTINGS

press the () button

TO DECREASE OR INCREASE THE INTENSITY

use the + and the - buttons

TO TURN IT OFF

press and hold the () button



Image: Step-by-step guide for operating the LELO Enigma Wave.



MAINTENANCE

Cleaning

The LELO Enigma Wave is 100% waterproof, making it easy to clean. After each use, wash the device with warm water and a mild, toy-safe soap. Rinse thoroughly and pat dry with a lint-free cloth. Avoid using cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone.



Image: The LELO Enigma Wave is fully waterproof for easy cleaning.

Storage

Store your LELO Enigma Wave in the provided satin pouch in a cool, dry place, away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent damage or degradation of the silicone.

TROUBLESHOOTING

If you encounter any issues with your LELO Enigma Wave, please refer to the following common troubleshooting tips:

- **Device Not Turning On:** Ensure the device is fully charged. Connect it to the USB charging cable and allow it to charge for the recommended 2 hours.
- **Weak Vibrations:** A low battery can result in weaker vibrations. Recharge the device. Also, ensure the device is clean and free from debris that might impede its function.
- **Buttons Unresponsive:** If the buttons are not responding, try connecting the device to the charger for a few minutes, then disconnect and attempt to power on again.
- **Unusual Noises:** While some motor noise is normal, excessive or unusual noises might indicate an issue. Ensure the device is clean and properly maintained.

If problems persist after following these steps, please contact LELO customer support for further assistance.

SPECIFICATIONS

Product Dimensions	4.17 x 1.97 x 7.17 inches; 13.12 ounces
Item Model Number	89008
Batteries	1 Lithium Polymer battery required (included)
Material	Silicone
Color	Purple
Manufacturer	LELO

Water Resistance	IPX7 (100% Waterproof)
------------------	------------------------

WARRANTY AND SUPPORT

LELO products are manufactured with the highest quality standards. Your LELO Enigma Wave comes with a comprehensive warranty:

- **1-Year Warranty:** Covers any manufacturing defects or issues for one year from the purchase date. A free replacement will be provided if issues arise (receipt required).
- **10-Year Quality Guarantee:** After the initial 1-year warranty expires, LELO offers a 10-year quality guarantee, ensuring long-term product satisfaction.

For warranty claims, technical support, or any other inquiries, please visit the official LELO website or refer to the contact information provided on your warranty registration card.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question