

[manuals.plus](#) /

› [WOLFANG](#) /

› [WOLFANG WP01 Mini Projector User Manual](#)

WOLFANG WP01

WOLFANG WP01 Mini Projector User Manual

Model: WP01

1. INTRODUCTION

Thank you for choosing the WOLFANG WP01 Mini Projector. This portable projector is designed to provide a high-quality visual experience with its native 1080P resolution, 12000 lumens brightness, and versatile connectivity options. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan.



Figure 1: WOLFANG WP01 Mini Projector

2. PACKAGE CONTENTS

Upon opening the package, please verify that all items listed below are present and in good condition.

- WOLFANG WP01 Mini Projector
- Remote Control
- AC Adapter
- HDMI Cable
- Power Cable
- User Manual (this document)

What's in the package?



Remote Control



User Manual



AC ADAPTER



HDMI Cable



Power Cable



Figure 2: Included accessories with the WOLFANG WP01 Mini Projector.

3. SETUP GUIDE

3.1 Power Connection

1. Connect the power cable to the AC adapter.


2. Plug the AC adapter into the projector's power input port.
3. Connect the other end of the power cable to a wall outlet.
4. The power indicator light on the projector will illuminate.

3.2 Placement and Screen Adjustment


Position the projector on a stable, flat surface. For optimal viewing, ensure the projector is perpendicular to the projection surface.

- **Focus Adjustment:** Rotate the focus ring on the projector lens until the projected image is clear.
- **Keystone Correction:** The WP01 features a vertical $\pm 40^\circ$ keystone correction. Use the remote control or on-screen menu to adjust the image shape if it appears trapezoidal. This corrects image distortion when the projector is not perfectly aligned with the screen.
- **Zoom Function:** Adjust the screen size from 50% to 100% without moving the projector using the zoom function via the remote control. The recommended projection distance for a 100-inch screen is approximately 2.5 meters.

Vertical & Horizontal Electric $\pm 40^\circ$ Keystone Correction

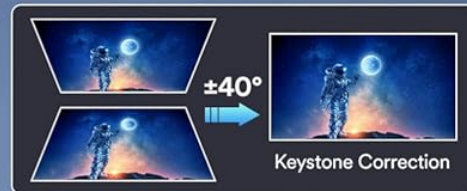

Vertical

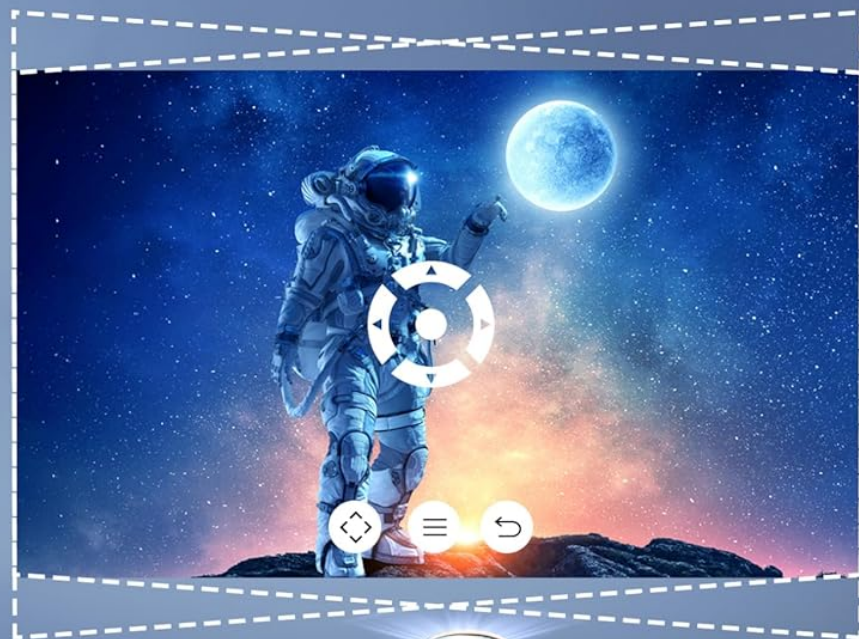

Plus
Horizontal



WOLFANG: Electric

Other: Manual

Figure 3: Electric Keystone Correction.

40" - 200" Adjustable Screen Display



Figure 4: Adjustable Screen Display (40" - 200").

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **Power On:** Press the power button on the projector or the remote control.

- **Power Off:** Press the power button again. The projector will enter standby mode.

4.2 Input Source Selection

Use the "Source" button on the remote control or the projector's control panel to select the desired input source (e.g., HDMI, USB, Screen Mirroring).

4.3 Connectivity Options

The WOLFANG WP01 Mini Projector offers various connectivity options for a wide range of devices.

- **HDMI:** Connect devices such as TV sticks, game consoles (PS4/PS5), laptops, or DVD players using the provided HDMI cable.
- **USB:** Insert a USB flash drive into the USB port to play media files directly.
- **Wi-Fi (Screen Mirroring):**
 - a. Ensure your projector and mobile device are connected to the same Wi-Fi network.
 - b. Select the "Screen Mirroring" input source on the projector.
 - c. For iOS devices, use AirPlay. For Android devices, use the Cast/Screen Mirroring function.
 - d. *Note: Due to copyright restrictions, streaming services like Netflix, Prime Video, and Hulu cannot be mirrored directly from mobile devices. Please use a TV Stick (e.g., Firestick, Roku) connected via HDMI for these services.*
- **Bluetooth:** The projector can function as a Bluetooth speaker. Pair your mobile device with the projector to enjoy audio through its built-in 2x3W stereo speakers.

Compatible With Multiple Devices



Figure 5: Compatible Devices.

Immersive Stereo Sound



2 × 3W Speakers

Figure 6: Immersive Stereo Sound (2 x 3W Speakers).

5. MAINTENANCE

5.1 Lens Cleaning

Use a soft, lint-free cloth specifically designed for optical lenses to gently wipe the projector lens. Do not use abrasive

cleaners or excessive force, as this may scratch the lens.

5.2 Dust Filter Cleaning

The projector features a fully sealed optical engine and an efficient heat dissipation system. While designed to minimize dust accumulation, periodic cleaning of the air vents is recommended to ensure optimal airflow and prevent overheating. Use a soft brush or compressed air to clear any dust from the vents.

5.3 Storage

When not in use for extended periods, store the projector in a cool, dry place, away from direct sunlight and extreme temperatures. It is advisable to cover the lens to protect it from dust.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No image projected	Power cable not connected. Incorrect input source selected. Device not connected properly.	Ensure power cable is securely connected. Select the correct input source (HDMI, USB, Screen Mirroring). Check HDMI/USB connections.
Blurred image	Focus not adjusted. Keystone not corrected. Lens is dirty.	Rotate the focus ring to sharpen the image. Adjust keystone correction via remote/menu. Clean the projector lens.
No sound	Volume too low or muted. External audio device not connected correctly.	Increase volume or unmute. Ensure external speakers are properly connected or Bluetooth is paired.
Screen mirroring issues (e.g., black screen for streaming apps)	Copyright restrictions on streaming apps. Unstable Wi-Fi connection.	Use a TV Stick (Firestick, Roku) for streaming services. Ensure strong and stable Wi-Fi connection.

7. SPECIFICATIONS

Feature	Detail
Brand	WOLFANG
Model Number	WP01
Color	White
Display Technology	LCD
Native Resolution	1920 x 1080 (Full HD)
Brightness	12000 Lumens (200 ANSI)
Contrast Ratio	10000:1
Keystone Correction	Vertical ±40° (Electric)
Zoom Function	50% - 100%
Connectivity	HDMI, USB, Wi-Fi (Screen Mirroring), Bluetooth

Feature	Detail
Built-in Speakers	2 x 3W Stereo Speakers (Dolby Sound Support)
Product Dimensions (L x W x H)	11.8 x 13.8 x 14.5 cm
Weight	907 grams (approx. 2 lbs)
Power Consumption	55W


8. WARRANTY AND SUPPORT




WOLFANG is committed to providing excellent customer service.

- **Warranty:** The WOLFANG WP01 Mini Projector comes with a 1-year free replacement warranty and a 3-year repair policy.
- **Customer Support:** For any questions, technical assistance, or warranty claims, please contact our professional customer service team.
- **Official Email:** support.vc@wolfang.co
- Our support team is available 24/7 to assist you.

© 2024 WOLFANG. All rights reserved.

Related Documents - WP01

	<p>WOLFANG WP01 Video Projector User Manual</p> <p>User manual for the WOLFANG WP01 video projector, covering product description, specifications, connection guides, screen mirroring, and warranty information.</p>
	<p>WOLFANG WP01 Video Projector User Manual</p> <p>Explore the WOLFANG WP01 video projector with this comprehensive user manual. Discover product features, detailed specifications, setup guides, and support information. Available in multiple languages.</p>
	<p>WOLFANG WP02 Video Projector User Manual</p> <p>Comprehensive user manual for the WOLFANG WP02 video projector, covering setup, specifications, safety precautions, and troubleshooting.</p>

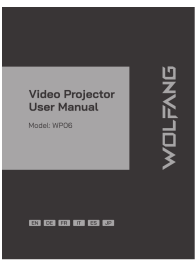 	<p>WOLFANG WP03 Video Projector User Manual</p> <p>Comprehensive user manual for the WOLFANG WP03 video projector, covering setup, features, safety instructions, and connectivity options like iOS and Android screen mirroring. Includes warranty information.</p>
	<p>WOLFANG WP04 Video Projector User Manual</p> <p>Comprehensive user manual for the WOLFANG WP04 Video Projector, covering setup, features, specifications, and safety precautions. Learn how to connect and operate your projector for an optimal viewing experience.</p>
	<p>WOLFANG WP06 Video Projector User Manual</p> <p>Comprehensive user manual for the WOLFANG WP06 video projector. Find information on setup, operation, features, connectivity, warranty, and support from WOLFANG.</p>