

[Manuals.plus](#) /

› [Ochangqi](#) /

› Ochangqi Steel Garden Cart (Model B0CHF76SKY) Instruction Manual

Ochangqi B0CHF76SKY

Ochangqi Steel Garden Cart (Model B0CHF76SKY) Instruction Manual

Utility Garden Cart Wagon for Lawn, Removable Sides, 3 cu ft, 550 lb Capacity

INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of your Ochangqi Steel Garden Cart. This cart is designed for transporting various materials in garden, farm, and yard environments. It features a 550 lb (250 kg) weight capacity, removable sides for flatbed conversion, and pneumatic tires for maneuverability.

Please read this manual thoroughly before assembly and use to ensure safe and efficient operation.

SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in injury or property damage.

- Always read and understand the entire instruction manual before operating the garden cart.
- Do not exceed the maximum weight capacity of 550 lbs (250 kg). Overloading can cause instability and damage.
- Distribute loads evenly across the cart bed to maintain balance and prevent tipping.
- Be aware of your surroundings and terrain. Avoid steep slopes, uneven surfaces, and obstacles that could cause the cart to tip.
- Keep hands and feet clear of moving parts, especially during loading, unloading, and maneuvering.
- Do not allow children to play on or around the garden cart. This is not a toy.
- Inspect the cart before each use for loose parts, damaged components, or deflated tires. Do not use if damaged.
- Wear appropriate safety gear, such as gloves, when handling materials or assembling the cart.
- Store the cart in a dry, secure location when not in use to prevent rust and unauthorized access.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Main Cart Frame (1)
- Side Panels (4)
- Pneumatic Wheels (4)
- Pull Handle Assembly (1)
- Hardware Kit (Axles, Washers, Cotter Pins, Bolts, Nuts, Pins for sides)



Image: The Ochangqi Steel Garden Cart as received in its shipping box, indicating the packaged state of the product.

SETUP AND ASSEMBLY

Assembly typically requires basic hand tools (not included), such as a wrench and pliers.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify all parts are present against the package contents list.
2. **Attach Wheels:** Slide each wheel onto the axles located on the cart frame. Secure each wheel with the provided washers and cotter pins. Ensure wheels spin freely.
3. **Assemble Side Panels:** Attach the four side panels to the main cart frame. The panels connect using hinges and are secured with pins. Ensure all pins are fully inserted to lock the sides in place.
4. **Attach Pull Handle:** Connect the pull handle assembly to the front of the cart frame using the provided bolts and nuts. Tighten securely.



Image: Detail of the latch mechanism used to secure the side panels to the cart frame.



Image: Detail of the securing pin, which must be fully inserted to hold the side panels in place.

OPERATING INSTRUCTIONS

Loading and Transporting Materials

- Ensure the cart is on a stable, level surface before loading.
- Distribute the weight of the load as evenly as possible across the cart bed to prevent imbalance and tipping.
- Do not exceed the 550 lb (250 kg) weight limit.
- Use the pull handle to maneuver the cart. Pulling is generally easier and safer than pushing, especially with heavy loads.
- Exercise caution when moving the cart over uneven terrain or inclines.

Using Removable Sides (Flatbed Conversion)

The cart's side panels can be removed or lowered to facilitate loading and unloading of oversized or bulky items, converting the cart into a flatbed.

1. **To Lower a Side:** Locate the pins securing the desired side panel. Pull the pins out to release the panel, allowing it to swing down.
2. **To Remove a Side:** After lowering a side panel, unhook it from its hinges on the cart frame. Repeat for other sides as needed.
3. **To Reattach Sides:** Align the hinges of the side panel with the corresponding points on the cart frame and reinsert the pins to secure.



Image: The garden cart configured as a flatbed, with all side panels removed for transporting larger items.



Image: The garden cart with one side panel lowered, demonstrating the removable side feature for easier loading.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your garden cart.

- **Cleaning:** After each use, clean the cart to remove dirt, debris, and corrosive materials. A damp cloth is usually sufficient.
- **Tire Pressure:** Periodically check the air pressure in the pneumatic tires. Maintain recommended pressure (typically found on the tire sidewall) for optimal performance and ease of movement.
- **Lubrication:** Apply a light lubricant to moving parts such as axle bearings and hinge points annually, or as needed, to ensure smooth operation and prevent rust.
- **Hardware Check:** Regularly inspect all bolts, nuts, and pins for tightness. Tighten any loose fasteners to prevent parts from detaching during use.
- **Rust Prevention:** The cart features a powder-coated finish for rust resistance. If the coating is scratched or chipped, touch up with rust-inhibiting paint to prevent corrosion. Store in a dry area.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Cart is difficult to pull or maneuver.	Low tire pressure; Overloaded; Uneven load distribution; Obstruction in wheels.	Check and inflate tires to recommended pressure; Reduce load; Redistribute load evenly; Clear any obstructions from wheels.
Side panels do not stay securely in place.	Pins not fully inserted; Damaged pins or hinges; Misaligned panels.	Ensure pins are fully inserted and secured; Inspect pins and hinges for damage and replace if necessary; Adjust panel alignment.
Rust spots appear on the cart frame.	Protective coating scratched; Exposure to moisture.	Clean affected area and apply rust-inhibiting paint; Store cart in a dry environment.
Wheels wobble or are loose.	Loose cotter pins or axle nuts; Worn bearings.	Check and secure cotter pins and axle nuts; Inspect bearings for wear and replace if necessary.

SPECIFICATIONS

Feature	Detail
Model Number	B0CHF76SKY
Brand	Ochangqi
Material	Alloy Steel
Color	Yellow
Assembled Dimensions (L x W x H)	34" x 18" x 22" (86.36 cm x 45.72 cm x 55.88 cm)
Weight Capacity	550 lbs (250 kg)
Tire Type	Pneumatic, 10" diameter
Special Features	Removable Sides, Rust Resistant
Number of Wheels	4



Image: Dimensional diagram of the Ochangqi Steel Garden Cart, illustrating its length, width, and height.

WARRANTY AND SUPPORT

Warranty information for the Ochangqi Steel Garden Cart is typically provided with your purchase documentation. Please refer to the materials included in your product packaging for specific warranty terms and conditions.

For technical assistance, missing parts, or warranty claims, please contact the retailer or manufacturer directly. Keep your purchase receipt and model number (B0CHF76SKY) available when contacting support.

Manufacturer: Ochangqi

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question