

Andoer H8

Andoer H8 1080P 48MP Compact Digital Camera User Manual

Model: H8

1. INTRODUCTION

This manual provides essential instructions for the safe and effective operation of your Andoer H8 Compact Digital Camera. Please read this manual thoroughly before using the camera and retain it for future reference.

2. SAFETY INFORMATION

To ensure safe operation, please observe the following precautions:

- Do not expose the camera to water or moisture.
- Avoid dropping the camera or subjecting it to strong impacts.
- Keep the camera away from extreme temperatures.
- Do not attempt to disassemble or repair the camera yourself. Contact qualified service personnel.
- Use only the specified charging cable and battery.



1 Warning

To avoid suffocation hazard, keep this plastic bag away from babies and children.

2 Warnung

Um Erstickungsgefahr zu vermeiden, halten Sie diese Plastiktüte von Säuglingen und Kindern fern.

3 Avertissement

Pour éviter tout risque d'étouffement, gardez ce sac en plastique hors de portée des nourrissons et des enfants.

4 Advertencia

Para evitar peligro de asfixia, mantenga esta bolsa de plástico fuera del alcance de bebés y niños.

5 Ostrzeżenie

Aby uniknąć ryzyka zadławienia, przechowuj tę plastikową torbę w miejscu niedostępnym dla niemowląt i dzieci.

6 Waarschuwing

Houd deze plastic zak uit de buurt van baby's en kinderen om verstikkingsgevaar te voorkomen.

7 Varning

För att undvika kvävningsrisk, förvara denna plastpåse utom räckhåll för spädbarn och barn.

8 Attenzione

Per evitare il rischio di soffocamento, tenere questo sacchetto di plastica lontano dalla portata di neonati e bambini.

9 Uyarı

Boğulma tehlikesini önlemek için bu plastik torbayı bebeklerden ve çocuklardan uzak tutun.

Image Description: A red triangular warning symbol with an exclamation mark, accompanied by text in multiple languages warning to keep plastic bags away from babies and children to prevent suffocation.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Andoer H8 Digital Camera
- Type-C Cable
- Lanyard
- User Manual



Image Description: A pink Andoer H8 compact digital camera, displayed with its front and back sides visible, highlighting its compact design and screen.

4. CAMERA OVERVIEW

Familiarize yourself with the camera's components:

- **Lens:** Captures images and videos.
- **Flash:** Provides illumination in low-light conditions.
- **2.8-inch IPS Display:** For viewing menus, photos, and videos.
- **Power Button:** Turns the camera on/off.
- **Shutter Button:** Takes photos.
- **Zoom Controls:** Adjusts 8x digital zoom.
- **Navigation Buttons:** For menu navigation and selection.
- **Mode Button:** Switches between photo, video, game, and music modes.
- **USB-C Port:** For charging and data transfer.
- **TF Card Slot:** For memory card insertion.

Fashion CCD camera

Function / Color



Photo



Video



Game



Music



Flash lamp



Image Description: An illustration showing the Andoer H8 camera in four different colors (Purple, Blue, Black, Pink) and icons representing its main functions: Photo, Video, Game, Music, and Flash lamp.

5. SETUP

5.1. Charging the Battery

1. Connect the supplied Type-C cable to the camera's USB-C port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator will illuminate. Charging typically takes 2-4 hours.
4. Once fully charged, the indicator light may change or turn off.

5.2. Inserting a Memory Card (TF Card)

The camera supports TF cards up to 32GB (not included).

1. Locate the TF card slot on the camera.
2. Insert the TF card with the metal contacts facing down until it clicks into place.
3. To remove, gently press the card until it pops out.

6. OPERATING INSTRUCTIONS

6.1. Power On/Off

- To power on, press and hold the Power button.
- To power off, press and hold the Power button again.

6.2. Taking Photos

1. Turn on the camera and ensure it is in Photo mode (indicated by an icon on the screen).
2. Frame your shot using the 2.8-inch IPS display.
3. Use the zoom controls to adjust the 8x digital zoom.
4. Press the Shutter button to capture the image.



Image Description: A pink Andoer H8 camera showing a high-definition image on its screen, with text indicating "4800W shot in HD" and "8000x6000 HD resolution," demonstrating its photo capabilities.

6.3. Recording Videos

1. Switch the camera to Video mode.
2. Press the Shutter button to start recording. A recording indicator will appear on the screen.
3. Press the Shutter button again to stop recording.

1080P Video recording

Recording the good times



Image Description: A pink Andoer H8 camera displaying a live video recording on its screen, with "1080P Video recording" and "Recording the good times" text, illustrating its video capture function.

6.4. Playback

- In Photo or Video mode, press the Playback button (usually indicated by a triangle icon) to enter playback mode.
- Use the navigation buttons to browse through your photos and videos.
- Press the OK/Enter button to view a photo or play a video.

6.5. Special Features: Stickers, Frames, and Filters

Enhance your photos with built-in creative options:

- Access these features through the camera's menu settings, typically found in Photo mode.
- Select from 40 kinds of head stickers, 26 photo frames, and 6 filters to customize your images before or after capture (depending on camera firmware).

40 kinds of cute head stickers

26 cute photo frames+6 filters



Image Description: A collage demonstrating various creative options available on the camera, including 40 types of cute head stickers, 26 adorable photo frames, and 6 filters, applied to different child portraits.

6.6. Music Playback

The camera supports MP3 music playback.

1. Transfer MP3 files to the TF card.
2. Switch the camera to Music mode.
3. Use the navigation buttons to select and play music.

Play Together, Listen, Meet the New Warmth

Fun, empowerment, entertainment



Image Description: A purple Andoer H8 camera showing a music player interface on its screen, with song title "Love, Simple" and playback controls, indicating its music playback capability.

6.7. Connecting to a Computer / Transferring Files

You can transfer photos and videos to a computer or phone.

- Connect the camera to your computer using the Type-C cable.
- The camera should appear as a removable disk.
- Drag and drop files to your computer.
- For phone transfer, use an OTG adapter (not included) if your phone supports OTG functionality.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and dust. Remove the battery if storing for extended periods.

8. TROUBLESHOOTING

Problem	Possible Solution
Camera does not power on.	Ensure the battery is charged. Reinsert the battery.
Cannot take photos/videos.	Check if a TF card is inserted and has sufficient space. Ensure camera is in the correct mode.
Images are blurry.	Clean the lens. Ensure adequate lighting. Hold the camera steady.
Camera freezes.	Remove and reinsert the battery to reset the camera.

9. SPECIFICATIONS

Feature	Detail
Product Model	H8
Display Screen	2.8 inch IPS
Photo Pixel	Up to 48MP
Video Resolution	1080P HD
Digital Zoom	8x
File Format	JPG/AVI/MP3
Charging Time	Approx. 2-4 hours
Battery Capacity	700mAh, 3.7V
Product Weight	110g
Product Size	105.5 x 72 x 46mm
Charging Voltage	DC5V 1A
Memory Support	TF card (max 32GB)
Special Features	40 Head Stickers, 26 Photo Frames, 6 Filters
Connectivity	USB (Type-C)
Image Stabilization	Digital
Sensor Type	CMOS

Feature	Detail
Skill Level	Novice

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact Andoer customer service directly. Keep your proof of purchase for warranty claims.