

**BZ-T7500, BZ-T7600, BZ-T7700, BZ-T6320, SHLIDAB15**

## Generic Replacement Remote Control User Manual

For Britz BZ-T7500, BZ-T7600, BZ-T7700, BZ-T6320 & Sandstrom SHLIDAB15 Micro Stereo Sound HiFi Systems

### 1. INTRODUCTION

This manual provides instructions for the Generic replacement infrared remote control, designed to operate specific Britz and Sandstrom Micro Stereo Sound HiFi Systems. This remote offers a convenient way to control your audio system's primary functions.



Figure 1: Front view of the replacement remote control.

### 2. COMPATIBILITY

This replacement remote control is compatible with the following models:

- Britz BZ-T7500
- Britz BZ-T7600
- Britz BZ-T7700
- Britz BZ-T6320
- Sandstrom SHLIDAB15

**Important Note:**

- Please ensure your original remote control is identical in appearance to the remote shown in this manual.
- If your specific model number is not listed above, or if your original remote differs, this replacement remote may not be fully compatible or may not offer all original functions.
- This is an infrared (IR) replacement remote.

## 3. SETUP

### 3.1 Battery Installation

To begin using your remote control, you must install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) and lift to open the compartment.
3. Insert two AAA or AA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. *(Note: While product specifications may vary, standard remotes typically use AAA or AA batteries. Please check the compartment for specific battery type markings if unsure.)*
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 2: Back view of the remote control with battery compartment.

## 4. OPERATING INSTRUCTIONS

Once batteries are installed, point the remote control directly at your Britz or Sandstrom HiFi system. Press the desired buttons to control your device. The functionality of each button generally corresponds to the original remote control.

### 4.1 Basic Functions

- **Power (U):** Turns the system on or off.
- **INFO:** Displays information about the current track or source.
- **INTRO:** Plays the introduction of tracks.
- **REPEAT:** Repeats the current track or entire playlist.
- **SHUFFLE:** Plays tracks in a random order.

- **CD:** Selects the CD input source.
- **USB:** Selects the USB input source.
- **FM:** Selects the FM radio input source.
- **LINE IN:** Selects the auxiliary line-in input source.
- **Navigation Buttons (▲, ▼, ◀, ▶):** Used for menu navigation, tuning, or track selection.
- **Play/Pause (▶ / ⏸):** Plays or pauses media playback.
- **Stop (⏹):** Stops media playback.
- **Skip (◀◀, ▶▶):** Skips to the previous or next track/station.
- **VOL+ / VOL-:** Increases or decreases the volume level.
- **Numeric Keypad (0-9):** Used for direct track selection, radio station input, or other numerical entries.
- **EQ:** Adjusts equalizer settings.
- **BASS:** Adjusts bass levels.
- **SLEEP:** Sets a sleep timer for automatic power-off.
- **PROG:** Programs tracks for playback.
- **CLOCK:** Accesses or sets the system clock.

*Note: Not all functions may be available or fully supported depending on your specific HiFi system model. Some advanced features of your original remote may not be replicated.*

## 5. MAINTENANCE

---

To ensure the longevity and proper functioning of your remote control:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's range decreases or it stops responding. Always replace both batteries at the same time with new ones. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

## 6. TROUBLESHOOTING

---

If you encounter issues with your replacement remote control, try the following steps:

- **Remote Not Responding:**
  - Check if the batteries are inserted correctly with the correct polarity (+/-).
  - Replace old batteries with new ones.
  - Ensure there are no obstructions between the remote and your HiFi system's infrared receiver.
  - Make sure you are within the effective range of the remote control.
- **Limited Functionality:**
  - Verify that your HiFi system model is listed in the compatibility section (Section 2).
  - Confirm that the appearance of this remote matches your original remote. As a replacement, it may not support all advanced or unique functions of your original device.

## 7. SPECIFICATIONS

---

<b>Brand</b>	Generic
<b>Compatible Devices</b>	Britz BZ-T7500, BZ-T7600, BZ-T7700, BZ-T6320, Sandstrom SHLIDAB15 Micro Stereo Sound HiFi Systems
<b>Power Source</b>	2 x AAA or AA Batteries (not included)
<b>Color</b>	Black
<b>Special Feature</b>	Infrared (IR) Replacement Remote

## 8. SUPPORT

For any questions, concerns, or further assistance regarding this replacement remote control, please contact the seller directly through your purchase platform. Please have your order details and the specific model of your HiFi system ready when contacting support.

© 2023 Generic Replacement Remote Control Manual. All rights reserved.