

[Manuals.plus](#) /

› [Phomemo](#) /

› Phomemo T02 Mini Bluetooth Thermal Pocket Printer User Manual

Phomemo T02

Phomemo T02 Mini Bluetooth Thermal Pocket Printer User Manual

Model: T02

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your Phomemo T02 Mini Bluetooth Thermal Pocket Printer. Please read this manual thoroughly before using the device and retain it for future reference.

The Phomemo T02 is a compact, inkless thermal printer designed for printing photos, notes, stickers, and other small documents directly from your smartphone or tablet via Bluetooth connectivity.

2. PACKAGE CONTENTS

Upon unpacking, please verify that all items listed below are present:

- Phomemo T02 Mini Printer
- Thermal Paper Rolls (Quantity: 3)
- USB Charging Cable
- User Manual (This document)



Image 2.1: The Phomemo T02 printer shown with various colored thermal paper rolls and a box of white sticky paper.

3. SETUP

3.1 Charging the Printer


Before initial use, fully charge the printer. Connect the provided USB charging cable to the printer's charging port and a compatible USB power adapter (not included). The indicator light will show charging status.

3.2 Loading Thermal Paper

1. Gently open the printer cover.
2. Insert a roll of thermal paper into the paper compartment, ensuring the printing side faces the thermal print head.
3. Pull a small length of paper out beyond the cutting edge.
4. Close the printer cover firmly until it clicks into place.

Black on White Sticker Paper

Image Duration: 2 Years

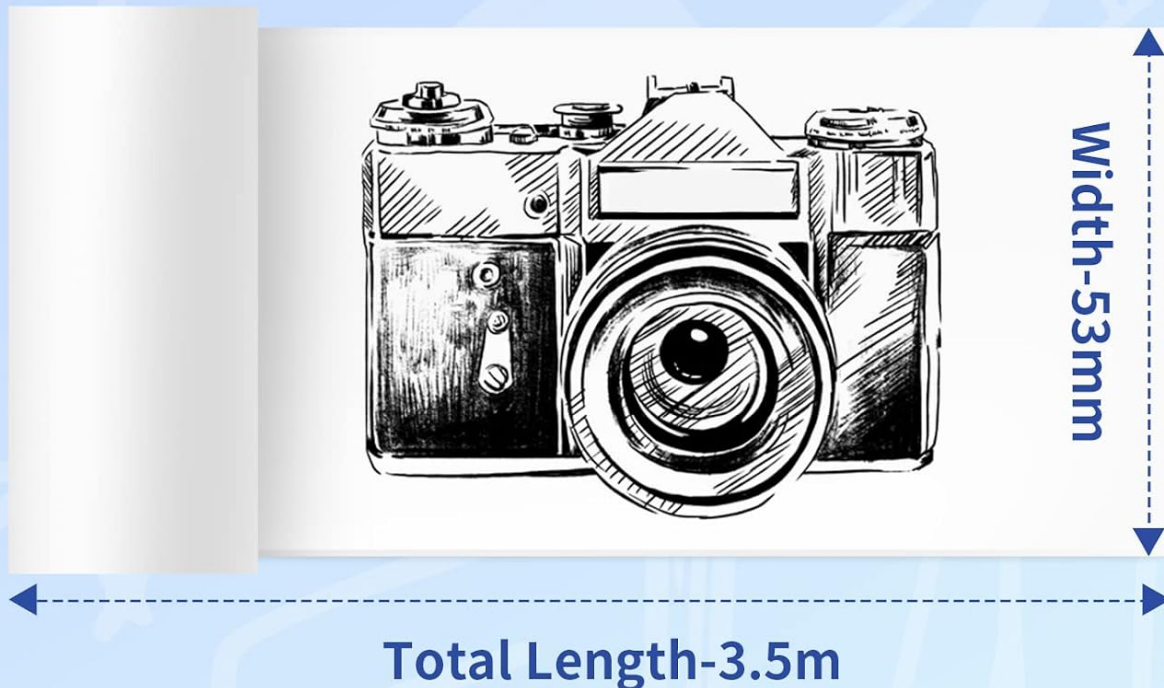

**BPA
Free**



**Strong
Adhesion**



**Abrasion
Resistant**



**Water
Resistant**

Image 3.2: A close-up view of the Phomemo T02 printer with a roll of thermal paper correctly loaded and extending from the output slot.

3.3 App Installation and Bluetooth Connection

1. Download the official Phomemo app from your device's app store (iOS or Android).
2. Turn on the Phomemo T02 printer by pressing and holding the power button. The indicator light will illuminate.
3. Enable Bluetooth on your smartphone or tablet.
4. Open the Phomemo app and follow the on-screen instructions to connect to your T02 printer. The app will typically detect nearby Phomemo devices automatically.



Image 3.3: A child interacting with the Phomemo T02 printer, which is shown connected wirelessly to a smartphone via Bluetooth, displaying the app interface.

4. OPERATING INSTRUCTIONS

4.1 Basic Printing

Once connected to the Phomemo app:

- Select the desired content to print (e.g., photo, text, note, template).
- Adjust print settings within the app as needed (e.g., density, size).
- Tap the "Print" button. The printer will begin printing the content.

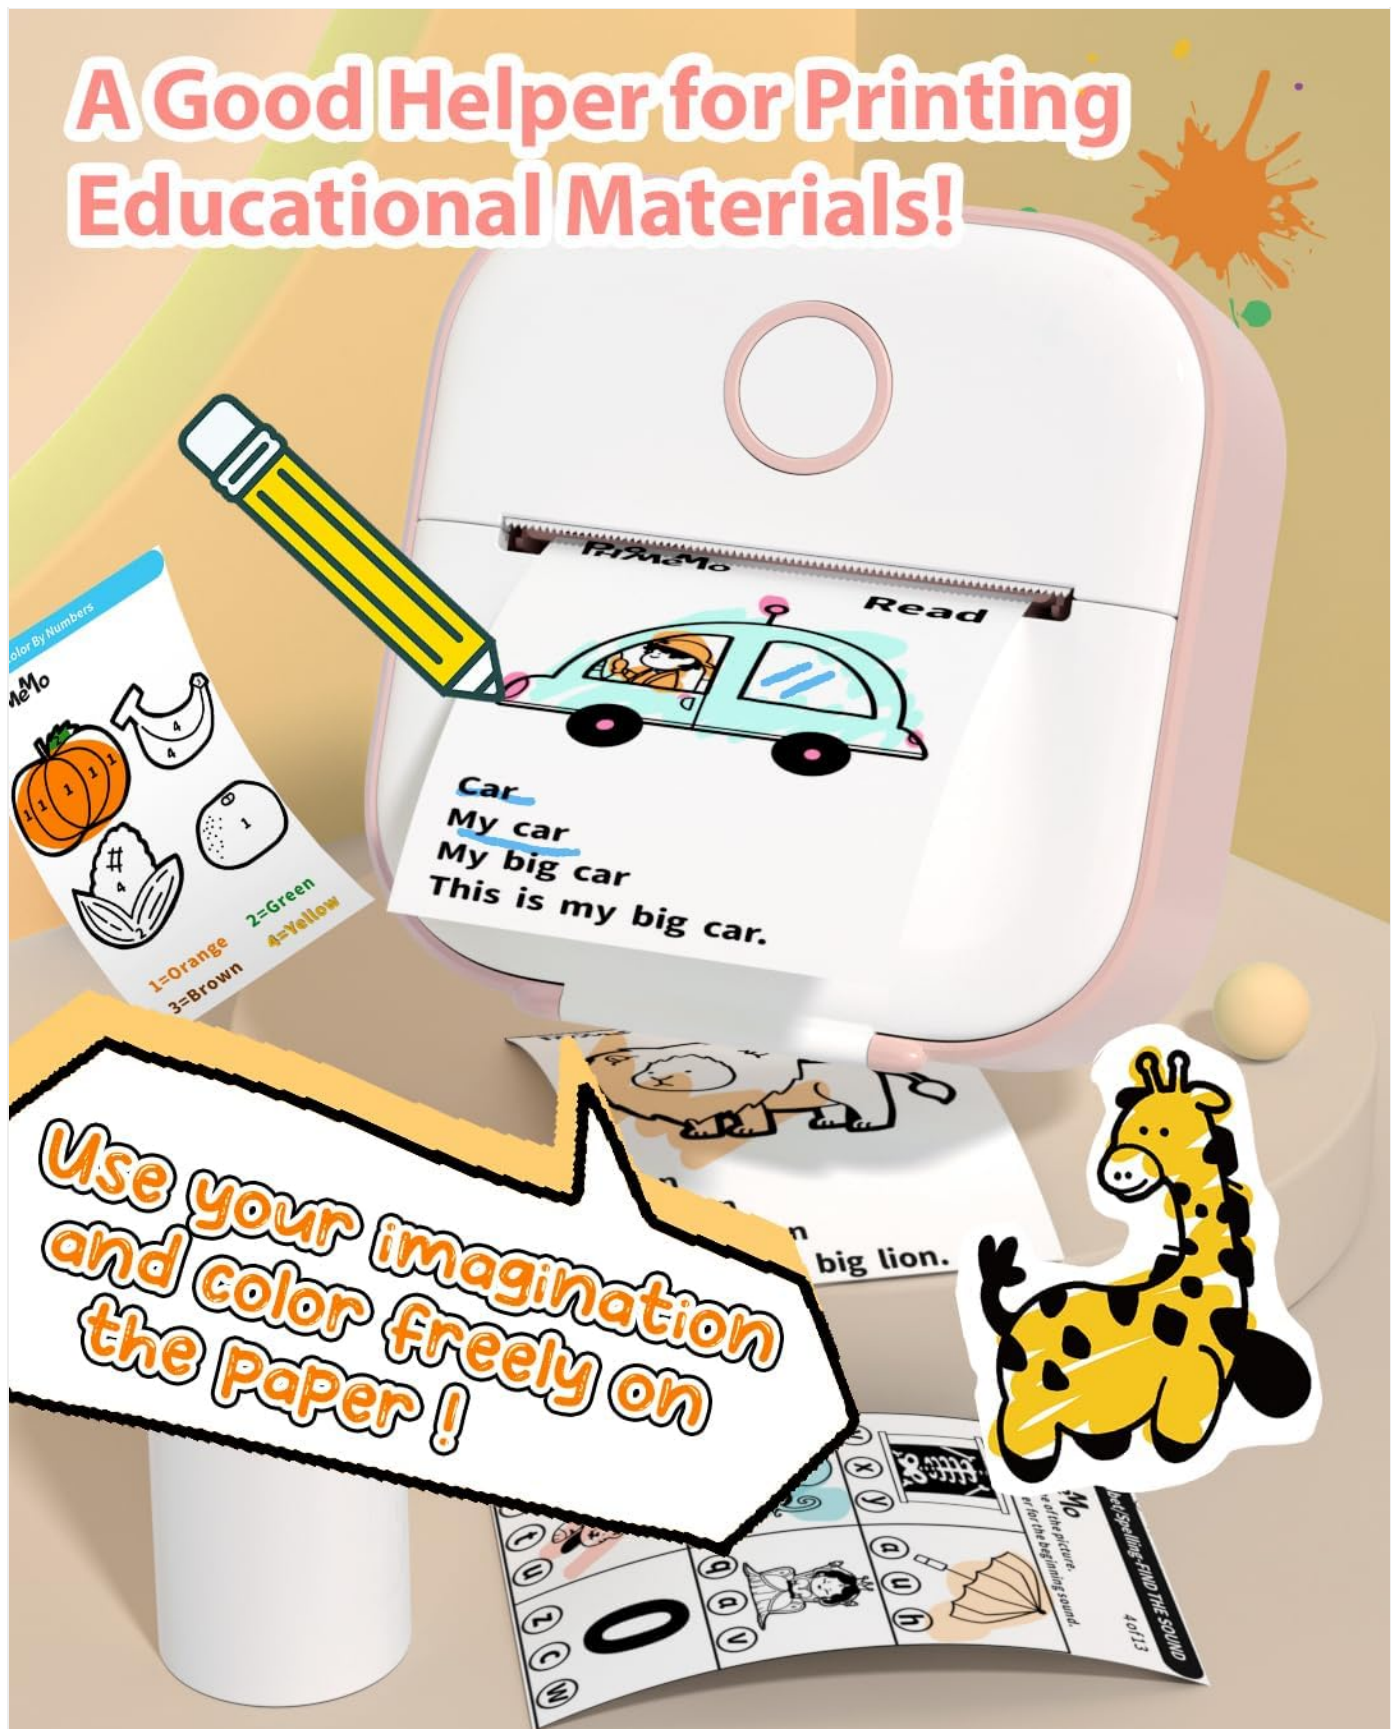


Image 4.1: The Phomemo T02 printer actively printing a small image of a car and text, demonstrating its use for educational materials.

4.2 Printing Stickers

The Phomemo T02 supports printing on sticky thermal paper. After printing, carefully peel the backing off the sticker

paper.



Image 4.2: A collage showing the Phomemo T02 printer's versatility, including printing study notes, creating stickers, and personalizing gift cards.

4.3 Customizing Prints

The Phomemo app offers various features for customization, including:

- **Templates:** Utilize pre-designed templates for notes, to-do lists, and labels.

- **Text Editing:** Adjust fonts, sizes, and styles for text prints.
- **Image Editing:** Basic adjustments for photos before printing.



Image 4.3: A printed checklist and various decorative elements, such as butterflies and an hourglass, demonstrating creative printing possibilities with the Phomemo T02.

5. MAINTENANCE

5.1 Cleaning the Print Head

To ensure optimal print quality, periodically clean the thermal print head. Use a soft, lint-free cloth lightly dampened with isopropyl alcohol. Gently wipe the print head surface. Allow it to dry completely before closing the cover and using the printer.

5.2 Paper Storage

Store thermal paper in a cool, dry place away from direct sunlight and heat to prevent premature fading or damage to the

paper's thermal coating.



Image 5.2: A roll of white sticky thermal paper with a printed camera image, indicating a width of 53mm and a total length of 3.5m. Icons below highlight features like BPA-free, strong adhesion, abrasion resistance, and water resistance.

5.3 Battery Care

For long-term storage, ensure the printer is charged to approximately 50% to prolong battery life. Recharge the printer every 3-6 months if not in use.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Printer does not turn on	Low battery	Charge the printer fully.

Problem	Possible Cause	Solution
Cannot connect via Bluetooth	Bluetooth off on device; App not open; Printer not discoverable	Ensure Bluetooth is enabled, open the Phomemo app, and restart the printer.
Poor print quality	Dirty print head; Incorrect paper loading; Low battery	Clean the print head, re-load paper correctly, or charge the printer.
Paper jam	Improper paper loading; Foreign object	Open the cover, carefully remove jammed paper, and re-load.

7. SPECIFICATIONS

- **Model:** T02
- **Printing Technology:** Thermal
- **Connectivity:** Bluetooth
- **Print Resolution:** 203 dpi (Max copy resolution black-white), 300 dpi (Maximum Black and White Print Resolution)
- **Input Sheet Capacity:** 10 sheets (Max)
- **Control Method:** App (iOS, Android)
- **Color:** Pink (as per product variant)
- **Special Feature:** Portable
- **ASIN:** B0CHFBQ2H

8. WARRANTY AND SUPPORT

The Phomemo T02 printer comes with a limited warranty. For detailed warranty information and customer support, please refer to the official Phomemo website or contact their customer service directly.

Phomemo Official Store: [Visit the Phomemo Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question