

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ALLIMITY](#) /

› [ALLIMITY KYKQ24E Replacement Remote Control User Manual for Ramsond A/C](#)

ALLIMITY CV-KYKQ24E-SH

ALLIMITY KYKQ24E Replacement Remote Control User Manual

For Ramsond Wall Mount Ductless Split A/C Air Conditioners (Models 55GW3, 55GW2, KYKQ24E)

1. INTRODUCTION

This manual provides instructions for the ALLIMITY KYKQ24E Replacement Remote Control, designed for use with specific Ramsond Wall Mount Ductless Split A/C Air Conditioner models. This remote control serves as a direct replacement for your original unit, offering essential functions for operating your air conditioner.

Compatible Models:

- Ramsond 55GW3
- Ramsond 55GW2
- Ramsond KYKQ24E

2. PACKAGE CONTENTS

Upon opening the package, verify that all items are present and in good condition.

- 1 x ALLIMITY KYKQ24E Replacement Remote Control

Note: AAA batteries are not included and must be purchased separately.

3. SPECIFICATIONS

Feature	Detail
Model Number	CV-KYKQ24E-SH
Power Supply	2 x 1.5V AAA Batteries
Dimensions	6.5 x 1.38 x 0.72 inches (approx.)
Weight	1.59 ounces (approx.)

Color	White
-------	-------

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) new 1.5V AAA alkaline batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

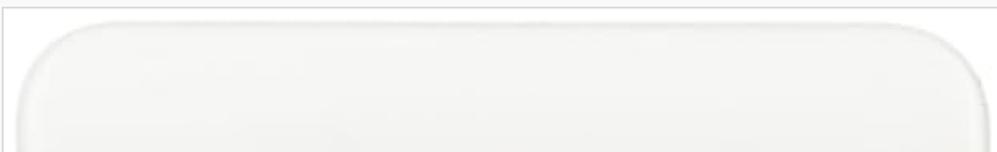


Image: Back view of the remote control with the battery cover open, illustrating the battery insertion process.

The remote control is ready for use immediately after battery installation. No programming or pairing is required for compatible Ramsond A/C units.

5. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on the remote control to operate your Ramsond A/C unit.





FAN

SWING



SLEEP

MODE

TIMER



ON/OFF



Image: Front view of the remote control, highlighting the display and button layout.

5.1 Button Functions

- **ON/OFF:** Powers the air conditioner on or off.
- **MODE:** Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
- **FAN:** Adjusts fan speed (e.g., Low, Medium, High, Auto).
- **SLEEP:** Activates or deactivates sleep mode for energy-efficient operation during sleep.
- **SWING:** Controls the louver swing function for air direction.
- **TIMER:** Sets the timer for automatic power on/off.
- **Temperature Up (▲):** Increases the set temperature.
- **Temperature Down (▼):** Decreases the set temperature.

5.2 Basic Operation

1. **Power On/Off:** Press the **ON/OFF** button to turn the A/C unit on or off.
2. **Select Mode:** Press the **MODE** button repeatedly to cycle through the available operating modes until your desired mode is displayed.
3. **Adjust Temperature:** Use the ▲ (Up) and ▼ (Down) buttons to set your preferred temperature.
4. **Adjust Fan Speed:** Press the **FAN** button to select the desired fan speed.

6. TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote control is not working.	<ul style="list-style-type: none">◦ Check if batteries are inserted correctly with proper polarity.◦ Replace old batteries with new 1.5V AAA alkaline batteries.◦ Ensure there are no obstructions between the remote and the A/C unit's receiver.◦ Verify that the remote is pointed directly at the A/C unit.
A/C unit does not respond to remote.	<ul style="list-style-type: none">◦ Confirm that your A/C unit model (55GW3, 55GW2, KYKQ24E) is listed as compatible.◦ Ensure the A/C unit is powered on and not in standby mode.◦ Try resetting the A/C unit by turning off its main power for a few minutes, then turning it back on.
Temperature display is in Celsius, cannot change to Fahrenheit.	This replacement remote control may display temperature exclusively in Celsius. There is no known function to switch the temperature display to Fahrenheit on this specific model.

7. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's range decreases or the display becomes dim. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.

8. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the documentation provided with your original purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.
