

[Manuals.plus](#) /

› [ALLIMITY](#) /

› ALLIMITY V3 GTV-IR1 Replacement Remote Control User Manual

ALLIMITY V3 GTV-IR1

ALLIMITY V3 GTV-IR1 Replacement Remote Control

User Manual

INTRODUCTION


This manual provides comprehensive instructions for the ALLIMITY V3 GTV-IR1 Replacement Remote Control. This remote is designed to be a direct replacement for original remote controls of various Formuler and Dreamlink TV Boxes, offering immediate functionality without complex setup.

Compatible Models:

- **Formuler:** GTV, Z8, Z8 Pro, ZX, Z7+, Z Alpha, Neo+
- **Dreamlink:** T2, T2prime, Dlite, Dlite+, T3



Replace

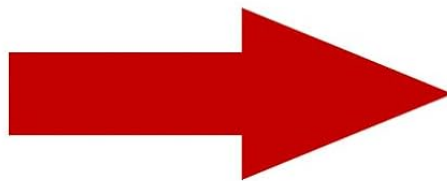

Original

Image: The ALLIMITY V3 GTV-IR1 replacement remote shown next to an original Formuler remote, highlighting its role as a direct replacement.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two (2) 1.5V AAA alkaline batteries, ensuring the correct polarity (+ and -) as indicated inside the

compartment.

4. Slide the battery cover back into place until it clicks securely.

The remote control is now ready for use with compatible devices. No additional programming is required for its primary functions.

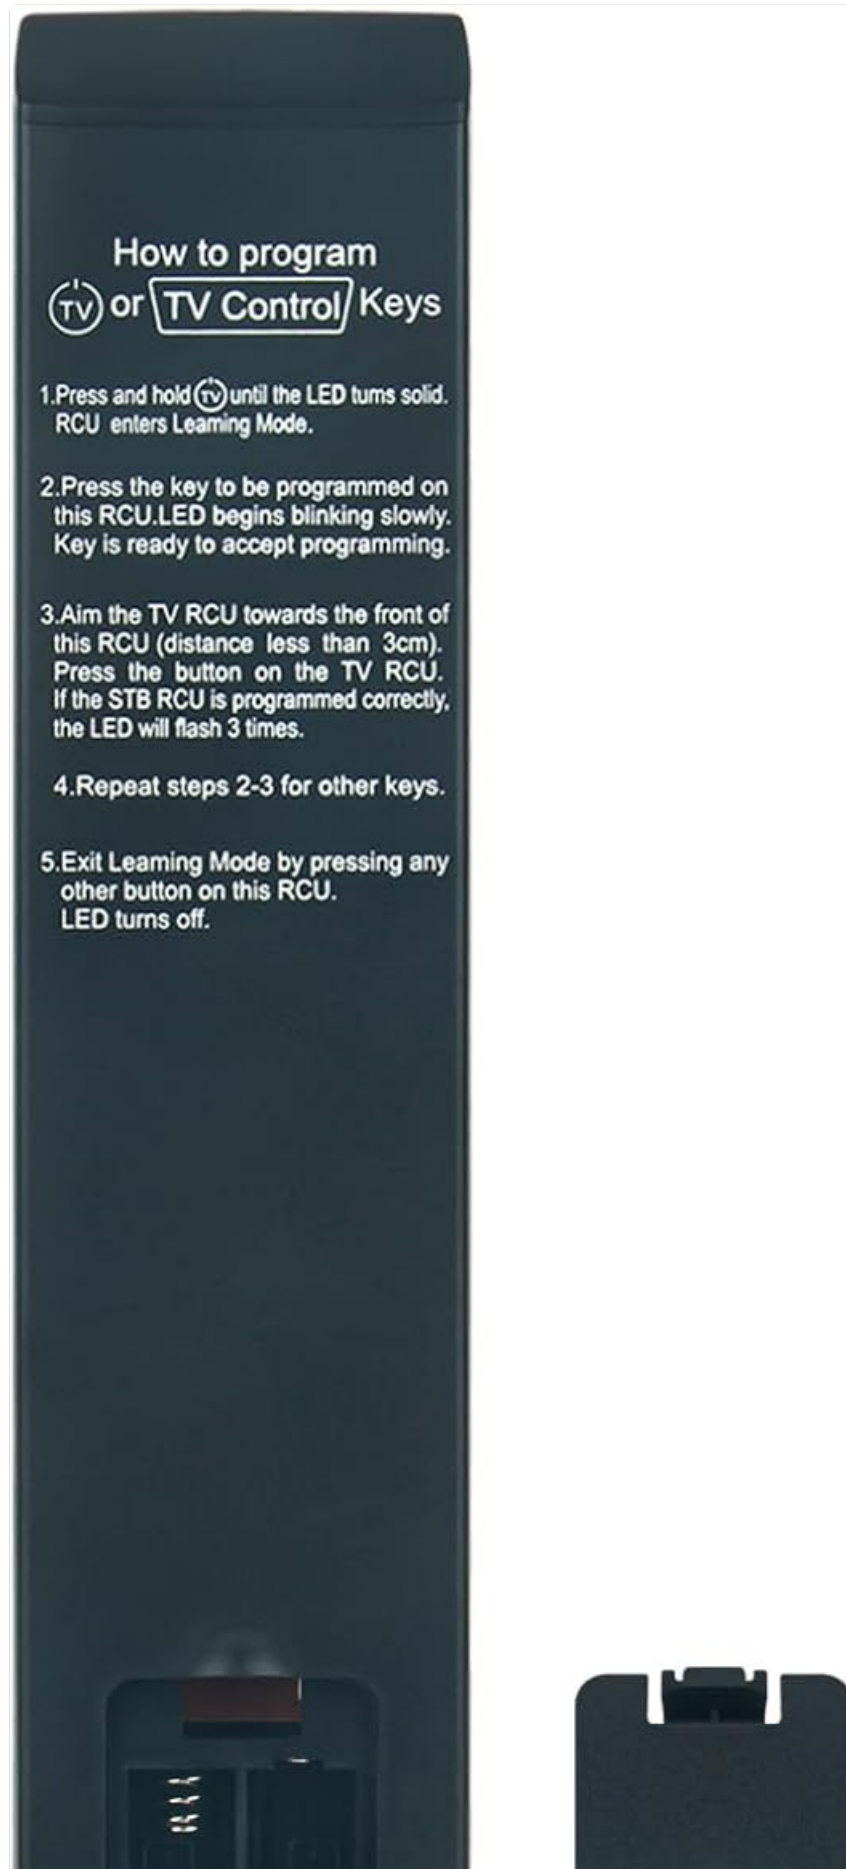




Image: Rear view of the remote control, illustrating the battery compartment and the instructions for programming the TV Control keys.

OPERATING INSTRUCTIONS

The ALLIMITY V3 GTV-IR1 remote control provides intuitive access to your TV Box functions. Below are the primary button functions:



Image: Front view of the ALLIMITY V3 GTV-IR1 remote control, displaying the layout of all buttons.

- **STB (Set-Top Box) Button:** Powers on/off the TV Box.
- **TV Control Section (Top Right):** Includes buttons for TV power, OK, Source, Volume Up/Down. These keys can be programmed to control your television.
- **Navigation Pad (OK, Up, Down, Left, Right):** Used for menu navigation and selection.
- **Back (←):** Returns to the previous screen or menu.
- **Home (△):** Returns to the main home screen of the TV Box.
- **Menu (≡):** Opens the menu or options for the current application.
- **Info:** Displays information about the current program or content.
- **Playback Controls (Play/Pause, Stop, Fast Forward, Rewind):** Standard media playback functions.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies by application or TV Box model.
- **Vol (Volume):** Adjusts the volume of the TV Box.
- **Guide:** Opens the electronic program guide.
- **Ch Pg (Channel Page):** Changes channels or pages in menus.
- **Number Pad (0-9):** For direct channel entry or inputting numbers.

- **Favorite:** Accesses favorite channels or content.
- **Groups:** Manages channel groups.

Programming TV Control Keys

The "TV Control" section of the remote (TV Power, OK, Source, Vol-, Vol+) can be programmed to control your television. Follow these steps:

1. Press and hold the **TV** button until the LED indicator on the remote turns solid. This indicates the RCU (Remote Control Unit) has entered Learning Mode.
2. Press the key on the ALLIMITY remote that you wish to program (e.g., **TV Power**). The LED will begin blinking slowly. The key is now ready to accept programming.
3. Aim your original TV remote control towards the front of the ALLIMITY RCU (distance less than 3cm). Press the corresponding button on your original TV remote (e.g., your TV's power button). If the key is programmed correctly, the LED on the ALLIMITY remote will flash 3 times.
4. Repeat steps 2-3 for other TV Control keys you wish to program (OK, Source, Vol-, Vol+).
5. To exit Learning Mode, press any other button on the ALLIMITY RCU (e.g., the STB button). The LED will turn off.

Once programmed, these keys will control your television directly.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's response becomes inconsistent or stops working. Always replace both batteries at the same time with new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with new 1.5V AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the TV Box's infrared receiver.
 - Make sure you are within the effective range of the TV Box.
- **TV Control keys not working after programming:**
 - Repeat the programming steps carefully, ensuring the LED flashes correctly at each stage.
 - Ensure the original TV remote is aimed directly at the ALLIMITY remote during the learning process and is within 3cm.
 - Verify that the original TV remote is functioning correctly.

- **Some buttons not working:**

- This may indicate low batteries. Replace them.
- Ensure the remote is clean and free from debris that might obstruct button presses.

SPECIFICATIONS

Model	V3 GTV-IR1
Brand	ALLIMITY
Product Dimensions	6.5 x 1.38 x 0.72 inches
Item Weight	1.59 ounces
Power Supply	2 x 1.5V AAA Alkaline Batteries (not included)
Compatible Devices	Formuler GTV, Z8, Z8 Pro, ZX, Z7+, Z Alpha, Neo+; Dreamlink T2, T2prime, Dlite, Dlite+, T3
Special Feature	No Programming Required for primary functions; Programmable TV Control keys
Color	Black

WARRANTY INFORMATION

Specific warranty information for the ALLIMITY V3 GTV-IR1 Replacement Remote Control is not provided in the product details. Please refer to the retailer's return policy or contact the seller directly for warranty inquiries.

CUSTOMER SUPPORT

For further assistance or troubleshooting not covered in this manual, please contact your product retailer or the ALLIMITY customer support channel if available. Refer to your purchase documentation for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CHFCXQ8T>

More documents and user manuals: <https://manuals.plus/>