

## Fodoss OD-R12

# Fodoss Baby Bouncer Instruction Manual

Model: OD-R12

Brand: Fodoss

## 1. PRODUCT OVERVIEW

---

The Fodoss Baby Bouncer is designed to provide a safe and comfortable space for infants, encouraging natural movement and development. Its ergonomic design supports proper posture, and the portable nature allows for easy relocation and storage.

- **Natural Bouncing:** Encourages baby's natural movements, aiding in strength, coordination, and curiosity development.
- **Ergonomic Design:** Features a supportive seat and removable headrest for proper spine, neck, and head alignment.
- **Premium Fabric:** Crafted from soft, breathable, and hypoallergenic cationic fabric.
- **Durable Construction:** Made with high-quality solid iron materials for lasting use.
- **Portable & Easy to Clean:** Designed for easy detachment, storage, and machine washable fabric cover.



Image: Fodoss Baby Bouncer with key dimensions highlighted.

## 2. SAFETY INFORMATION

- Always use the 3-point harness to secure your baby in the bouncer.
- Never leave your child unattended in the bouncer.
- Do not use the bouncer once your child can sit up unaided or weighs more than 20 pounds (approximately 9 kg).
- Place the bouncer on a flat, stable surface away from edges, stairs, and heat sources.
- Do not lift or carry the bouncer with your baby in it.
- Regularly inspect the bouncer for any signs of wear or damage. Discontinue use if any parts are broken or missing.

## 3. SETUP AND ASSEMBLY

Follow these steps to assemble your Fodoss Baby Bouncer:

1. **Assemble the Frame:** Connect the frame components as shown in the diagram. Ensure all connections are secure.



Image: Step 1 - Assembling the bouncer's base frame.

2. **Attach the Fabric Seat:** Slide the fabric seat onto the assembled frame, ensuring it is properly aligned and secured at all attachment points.



Image: Step 2 - Attaching the fabric seat to the frame.

3. **Secure the Fabric:** Fasten any zippers or clips to fully secure the fabric cover to the frame.



Image: Step 3 - Securing the fabric cover to the frame.

4. **Install Headrest (Optional):** Attach the removable headrest for additional head and neck support for newborns. It can be removed as your baby grows.



Image: The bouncer features a removable headrest and a 3-point harness for safety.

#### 4. OPERATING INSTRUCTIONS

The Fodoss Baby Bouncer is designed for ease of use and your baby's comfort:

- **Placing Your Baby:** Gently place your baby into the bouncer seat. Ensure their back is flat against the seat and their head is comfortably supported by the headrest (if used).
- **Securing the Harness:** Fasten the 3-point harness securely around your baby. Adjust the straps to ensure a snug but comfortable fit.
- **Natural Bouncing:** The bouncer responds to your baby's own movements, creating a gentle, natural bouncing motion. You can also gently rock the bouncer with your hand or foot.
- **Adjusting Position:** The bouncer may offer multiple recline positions. Adjust as needed for your baby's comfort and developmental stage. Refer to the product labels for specific adjustment mechanisms.



Image: A baby enjoying the Fodoss Baby Bouncer, demonstrating its use in a home setting.

## 5. MAINTENANCE

Keeping your Fodoss Baby Bouncer clean is simple:

- **Fabric Cover:** The fabric cover is machine washable. Remove it from the frame and wash according to the care label instructions (typically cold water, gentle cycle). Air dry or tumble dry on low heat.
- **Frame:** Wipe the frame with a damp cloth and mild soap. Dry thoroughly before reattaching the fabric cover.
- **Storage:** For storage, the bouncer can be easily disassembled into a compact size. Store in a dry place away from direct sunlight.



## Small in size

Easy to disassemble, small size  
after disassembly

Image: The Fodoss Baby Bouncer is small in size and easy to disassemble for storage or transport.

## 6. TROUBLESHOOTING

If you encounter any issues with your Fodoss Baby Bouncer, consider the following:

- **Bouncer not rocking smoothly:** Ensure the bouncer is placed on a flat, even surface. Check for any obstructions under the frame.
- **Harness not securing properly:** Verify that the harness straps are correctly threaded through the buckles and adjusted to the appropriate length for your baby.
- **Fabric cover difficult to attach/remove:** Ensure the frame is correctly assembled and that you are following the instructions for attaching/removing the cover.
- For any other concerns, please refer to the contact information in the "Warranty and Support" section.

## 7. SPECIFICATIONS

Feature	Detail
Product Dimensions	27.5 x 17 x 21 inches (approx. 70 x 43 x 53 cm)
Item Model Number	OD-R12
Maximum Weight Recommendation	20 Pounds (approx. 9 kg)
Material Type	Cationic Fabric
Care Instructions	Machine Washable
Item Weight	5.07 pounds (approx. 2.3 kg)
Is Portable	Yes

## 8. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact Fodoss customer service through the retailer where the product was purchased or visit the official Fodoss website.

We are committed to ensuring your satisfaction and the safety of your child.