

[Manuals.plus](#) /

› [PERFASCIN](#) /

› PERFASCIN DG11J1-34 Infrared Remote Control User Manual for Whirlpool and Hisense Air Conditioners

PERFASCIN DG11J1-34

PERFASCIN DG11J1-34 Infrared Remote Control User Manual

For Whirlpool 3D Air Conditioning (DG11J134) and Hisense Air Conditioners (DG11J1-16, DG11J1-98)

INTRODUCTION

This manual provides comprehensive instructions for the PERFASCIN DG11J1-34 infrared remote control. This replacement remote is designed for use with specific Whirlpool 3D Air Conditioning models (DG11J134) and Hisense Air Conditioner models (DG11J1-16, DG11J1-98). Please read this manual thoroughly before use to ensure proper operation and to maximize the lifespan of your device.

SETUP: BATTERY INSTALLATION

The PERFASCIN DG11J1-34 remote control requires no programming or pairing. Simply install new batteries to begin operation.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

Note: Always replace both batteries simultaneously. Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote will not be used for an extended period.



Image: Angled view of the PERFASCIN DG11J1-34 remote control, showing the general shape and button layout. The battery compartment is located on the rear.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions to effectively control your air conditioner.





Image: Front view of the PERFASCIN DG11J1-34 remote control, clearly showing the LCD screen and all control buttons. The screen displays "16 °C".

Button Functions:

ON/OFF: Press to turn the air conditioner on or off.

MODE: Cycles through operating modes such as Cool, Heat, Fan, Dry, and Auto.

FAN: Adjusts the fan speed (e.g., Auto, Low, Medium, High).

SWING: Activates or deactivates the automatic louver swing function for even air distribution.

SLEEP: Activates the sleep mode, which adjusts temperature and fan speed for comfortable sleep and energy saving.

TURBO: Engages maximum cooling or heating capacity for rapid temperature adjustment.

6TH SENSE: (Whirlpool specific) Activates intelligent sensing technology to automatically adjust settings for optimal comfort and energy efficiency.

AROUND U: (Hisense specific) Utilizes a sensor in the remote to measure the temperature at the remote's location, adjusting the AC to maintain comfort around the user.

DIM: Adjusts the brightness of the air conditioner's display panel.

TIMER ON / CLOCK: Sets a timer for the air conditioner to turn on. Also used to set the current time.

TIMER OFF: Sets a timer for the air conditioner to turn off.

POWER SAVER: Activates an energy-saving mode to reduce power consumption.

Temperature Up (▲) / Down (▼) Arrows: Adjusts the desired temperature setting.

MAINTENANCE

Proper maintenance ensures the longevity and reliable performance of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's range decreases or if the display becomes dim. Always use new alkaline batteries of the specified type (AAA).
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store the remote in a cool, dry place away from direct sunlight.
- **Avoid Impact:** Protect the remote from drops or strong impacts, which can damage internal circuitry.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly inserted batteries.	Replace with new AAA alkaline batteries, ensuring correct polarity.
Remote control range is reduced.	Low battery power. Obstruction between remote and AC unit.	Replace batteries. Ensure a clear line of sight to the air conditioner's receiver.
Air conditioner does not respond to commands.	Remote not compatible with AC unit. AC unit is off or unplugged.	Verify AC unit compatibility (Whirlpool DG11J134, Hisense DG11J1-16, DG11J1-98). Check AC unit power supply.
Display on remote is dim or blank.	Low battery power.	Replace batteries.

SPECIFICATIONS

- Model:** DG11J1-34
- Brand:** PERFASCIN
- Compatibility:** Whirlpool 3D AC DG11J134, Hisense AC DG11J1-16, DG11J1-98
- Type:** Infrared Remote Control
- Power Source:** 2 x AAA Alkaline Batteries (not included)
- Special Features:** Ergonomic design, No programming required
- Product Dimensions:** 6 x 5 x 0.55 inches (approximate)
- Item Weight:** 1.4 ounces (approximate, without batteries)

WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the original purchase documentation or contact your retailer. For any operational questions or issues not covered in this manual, please contact the seller or manufacturer for assistance.

Manufacturer: PERFASCINYIKUN

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CHJFMP1R>

More documents and user manuals: **<https://manuals.plus/>**