

Monios-L INW55660Y652Kc

Monios-L 4FT LED Linear Light User Manual

Model: INW55660Y652Kc

1. IMPORTANT SAFETY INFORMATION

Please read these instructions carefully before installation and use. Retain this manual for future reference.

- **Electrical Safety:** Always disconnect power at the circuit breaker before installation, maintenance, or cleaning. Ensure all wiring connections are secure and comply with local electrical codes. If you are unsure about wiring, consult a qualified electrician.
- **Indoor Use Only:** This fixture is designed for indoor use in dry locations. Do not expose to water or high humidity.
- **Proper Mounting:** Ensure the mounting surface can support the weight of the fixture(s). Use appropriate mounting hardware for your ceiling type.
- **Non-Serviceable Parts:** The LED light source is integrated and not user-replaceable. Do not attempt to disassemble the fixture.
- **Operating Temperature:** Do not operate the fixture in environments outside its specified temperature range.

2. PACKAGE CONTENTS

Verify that all components are present before beginning installation.

- Monios-L 4FT LED Linear Light Fixtures (4 units)
- Remote Control
- Mounting Hardware (includes screws, wall anchors, connection pieces for linking, and components for both ceiling-mounted and suspended installation)

COMPONENTS



Remote/Connection piece/Screws



Ceiling-mounted



Suspended

Image: Overview of included components, showing the remote control, connection pieces, screws, ceiling-mounted brackets, and suspended mounting hardware.

3. SETUP AND INSTALLATION

This LED linear light supports both ceiling-mounted and suspended installation methods. Ensure power is OFF before proceeding.

3.1 Choose Installation Method

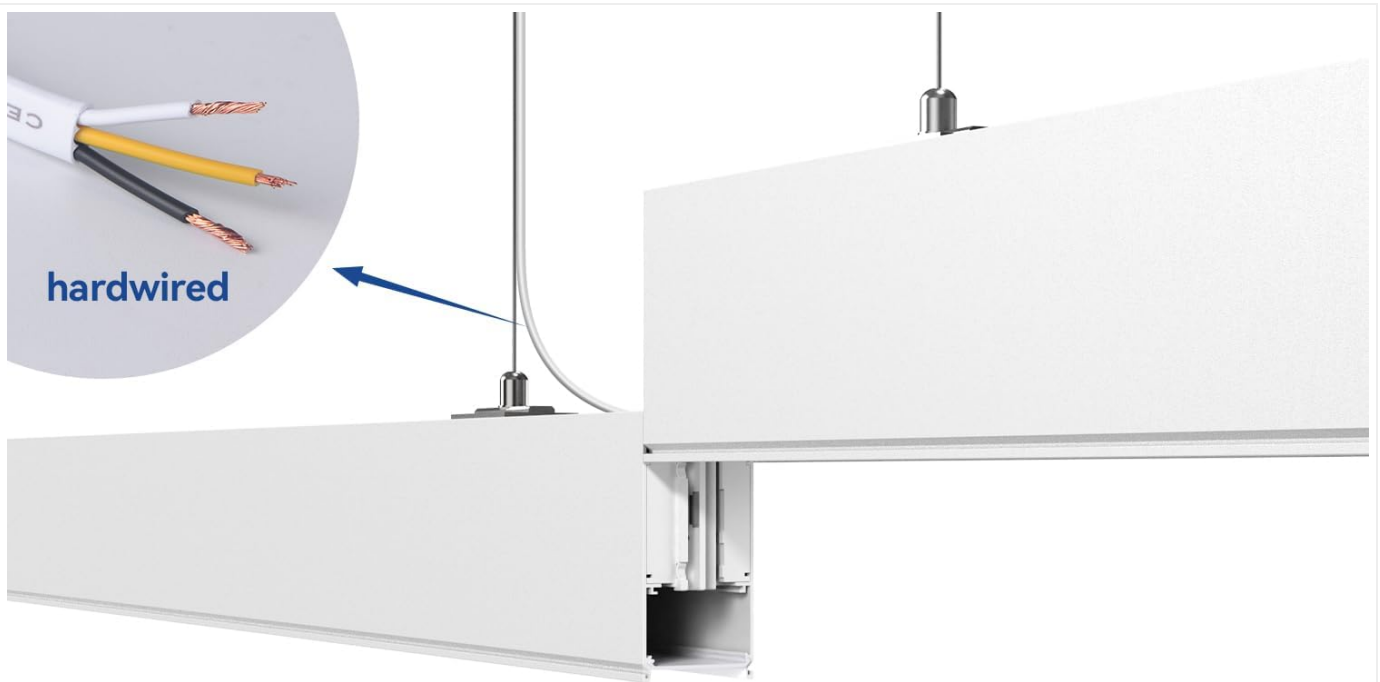 


Image: Illustration of ceiling-mounted and suspended installation options, detailing the specific hardware for each.

3.2 Hardwiring and Seamless Connection

The fixture requires hardwiring to an AC power source. Multiple fixtures can be connected seamlessly for a continuous light run.

1. **Prepare Wiring:** Ensure the main power is off. Connect the fixture's hardwired cables (Live, Neutral, Ground) to your building's electrical supply.
2. **Seamless Connection:** To link multiple fixtures, slide the connection pieces into the ends of the light channels. Ensure a secure fit to maintain electrical continuity and structural integrity.



SEAMLESS CONNECTION

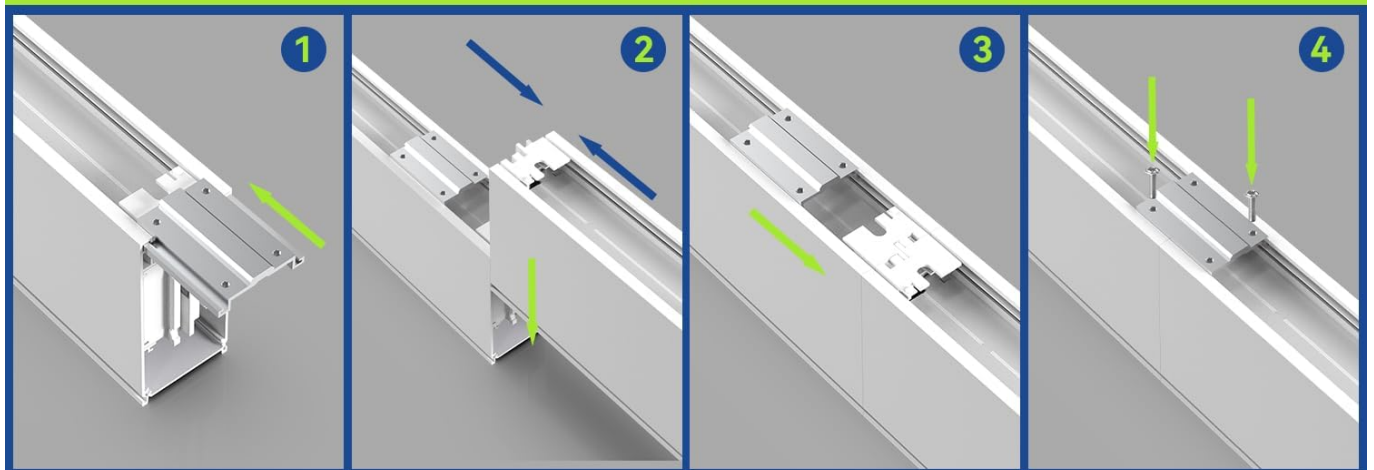 


Image: Detailed steps for hardwiring and achieving a seamless connection between multiple linear light fixtures.

3.3 Mounting the Fixture(s)

1. **Marking:** Use the mounting brackets as a template to mark drilling locations on the ceiling.
2. **Drilling:** Drill pilot holes and insert wall anchors if necessary.
3. **Attach Brackets:** Secure the mounting brackets to the ceiling using the provided screws.
4. **Attach Fixture:** For ceiling-mounted installation, clip the light fixture onto the secured brackets. For suspended installation, attach the suspension cables to the fixture and ceiling mounts, adjusting the cable length as desired.
5. **Final Check:** Ensure all connections are tight and the fixture is securely mounted before restoring power.

4. OPERATING INSTRUCTIONS

The Monios-L LED Linear Light offers versatile control options via the included remote control and a wall switch.

4.1 Remote Control Functions

The remote control allows for stepless dimming and Correlated Color Temperature (CCT) selection.

- **Power On/Off:** Press the power button to turn the light on or off.
- **Stepless Dimming (10%-100%):** Use the brightness adjustment buttons (up/down arrows) to increase or decrease the light intensity smoothly from 10% to 100%.

DIMMABLE 10%-100%



100%



10%

Image: Visual representation of the light's dimming range from 10% to 100% brightness.

- **CCT Selection (3000K-6000K):** Use the CCT adjustment buttons (sun icons) to change the color temperature from warm white (3000K) to cool white (6000K).

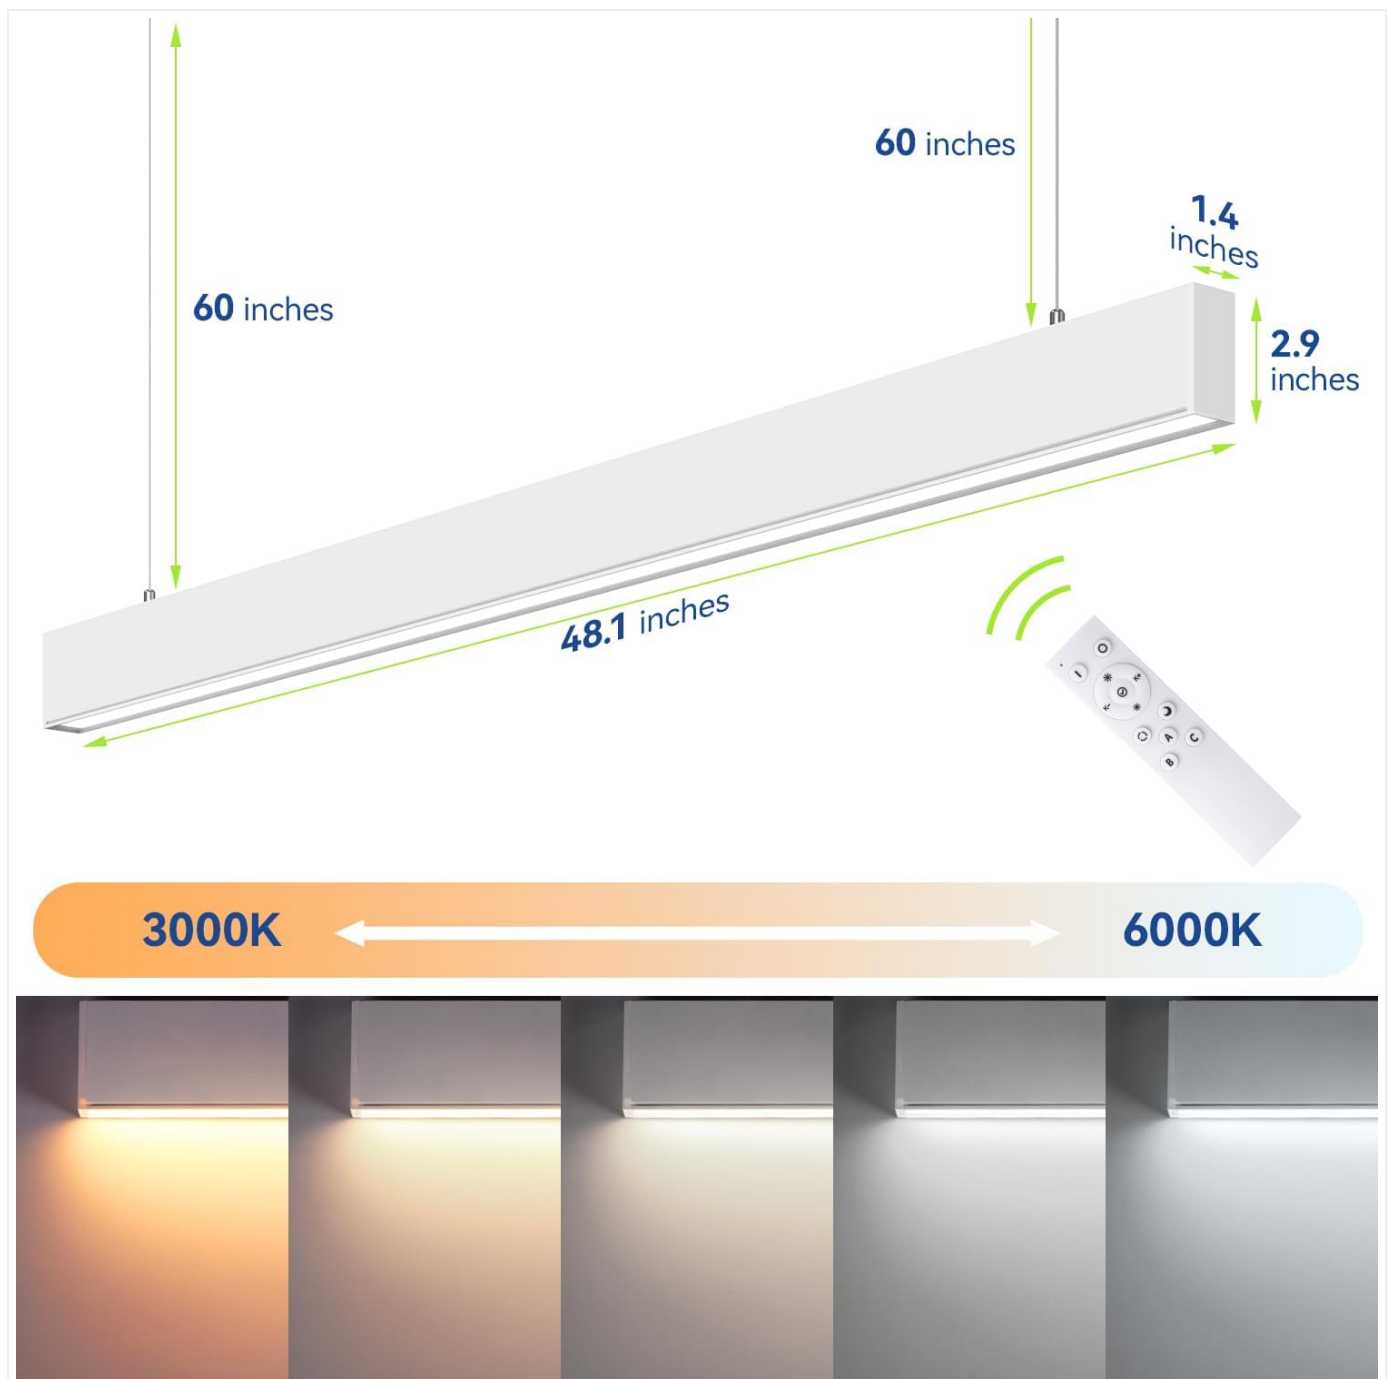 


Image: Depiction of the adjustable color temperature from 3000K to 6000K, along with the remote control.

4.2 Wall Switch Free Switching Mode

This feature allows you to cycle through preset lighting modes using a standard wall switch.

- **Activation:** Turn the wall switch OFF and then ON within 7 seconds to switch between the following 4 modes:
 - I. 3000K (Warm White)
 - II. 4000K (Neutral White)
 - III. 6000K (Cool White)
 - IV. Sleeping Mode (Very low brightness, warm CCT)

FREE SWITCHING MODE



On / off the wall switch within 7 seconds to switch 4 modes

Image: Visual representation of the four distinct lighting modes (3000K, 4000K, 6000K, Sleeping mode) accessible via the wall switch.

5. MAINTENANCE

The Monios-L LED Linear Light requires minimal maintenance.

- **Cleaning:** Ensure the power is off before cleaning. Wipe the fixture with a soft, dry, or slightly damp cloth. Do not use harsh chemicals, abrasive cleaners, or solvents, as these can damage the finish or electrical components.
- **No User-Serviceable Parts:** The LED light source is integrated and cannot be replaced by the user. Do not attempt to open or repair the fixture.

6. TROUBLESHOOTING

If you encounter issues with your Monios-L LED Linear Light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power supply. Loose wiring connection. Remote control battery depleted.	Check circuit breaker. Verify all wiring connections are secure (ensure power is off first). Replace remote control batteries.
Light flickers or dims unexpectedly.	Unstable power supply. Loose connection. Incompatible dimmer switch (if not using remote).	Ensure stable power. Check wiring connections. This fixture is designed for remote dimming; avoid external dimmer switches unless specified.
Remote control not responding.	Battery depleted. Obstruction between remote and fixture. Remote not paired (if applicable).	Replace remote control batteries. Ensure clear line of sight. Refer to remote pairing instructions (if provided separately).
Cannot change CCT or dimming via wall switch.	Switching interval too long.	Ensure wall switch is toggled OFF and ON within 7 seconds to activate the 'Free Switching Mode'.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	Monios-L
Model Number	INW55660Y652Kc
Wattage	36 Watts per fixture
Brightness	2500 Lumens per fixture
Color Temperature (CCT)	3000K - 6000K Selectable
Dimming Range	10% - 100% Stepless
Voltage	120V AC
Product Dimensions	48"L x 1.4"W x 2.9"H
Material	Aluminum, Plastic
Control Method	Remote Control
Installation Type	Suspended, Ceiling Mount
Indoor/Outdoor Usage	Indoor Use Only

Feature	Specification
Special Features	Dimmable, Seamless Connection
Efficiency	69.44 lm/W
Water Resistance Level	Not Water Resistant
Item Weight	15.65 pounds (for 4-pack)

8. WARRANTY AND SUPPORT

8.1 Limited Warranty

This Monios-L product comes with a limited warranty. Please refer to the warranty documentation included with your purchase or contact Monios-L customer support for specific terms and conditions.

8.2 Customer Support

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact Monios-L customer support through the retailer where the product was purchased or visit the official Monios-L store page on Amazon: [Monios-L Amazon Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

