

[Manuals.plus](#) /

› [ELEMARA](#) /

› ELEMARA 2 Seater Ride on ATV User Manual

ELEMARA S615

ELEMARA 2 Seater Ride on ATV User Manual

Model: S615

PRODUCT OVERVIEW

The ELEMARA 2 Seater Ride on ATV is designed for big kids, offering an exciting and safe riding experience. This 12V quad features a powerful 10AH battery, reaching a max speed of 4mph. It comes equipped with modern amenities such as Bluetooth connectivity, LED lights, and a radio, ensuring a fun and engaging ride for children aged 36 months to 8 years. Its two-seater design allows for shared adventures, making it an ideal gift for siblings or friends.



The ELEMARA 2 Seater Ride on ATV, showcasing its vibrant blue color and robust design.

Key Features:

- **2 Seater Design:** Extended seat (16.5 inches) with a max capacity of 130 lbs, accommodating two children simultaneously.
- **Dual Charging Ports:** Convenient charging via the center console or a spare port at the rear.
- **All-Terrain Wheels:** Four large treaded wheels and two shock-absorbing springs on the front wheels for smooth rides on various surfaces including hardened ground, wooden boards, asphalt, shallow sand, and grass.
- **Powerful Performance:** Equipped with 2 x 85W motors and a 10AH battery, offering two speeds (3.1 MPH low, 4 MPH high). Includes low battery reminder.
- **Interactive Functions:** Bright LED headlights, gas pedal accelerator, forward/reverse function, USB port, music, speed/volume adjustment, power display, and one-button key start.

ASSEMBLY INSTRUCTIONS

Before beginning assembly, ensure all parts listed in the 'What's in the Box' section are present and undamaged. Refer to the detailed assembly video below for visual guidance.

What's in the Box:

- 2 Seater Kids ATV x1
- Manual x1

Your browser does not support the video tag.

Official assembly video for the ELEMARA 2 Seater Kids ATV, demonstrating step-by-step installation.

Key Assembly Steps:

1. **Install the Front Bumper:** Secure the blue front bumper to the main body of the ATV using the provided screws. Ensure it is firmly attached to protect the front section.
2. **Attach the Front Bracket:** Install the dual drive front bracket underneath the ATV. This component is crucial for the front wheel suspension and steering mechanism.
3. **Insert the Rear Axle:** Carefully slide the rear axle through the designated slots at the back of the ATV. This forms the base for the rear wheels and motors.
4. **Mount the Motors:** Attach the left and right gear box motors onto the rear axle, ensuring the wires are properly fed through the vehicle's body. Pay attention to the 'L' and 'R' markings for correct placement.
5. **Install the Wheels:** Attach all four wheels. Note that rear wheels have a plum pattern to fit the gearbox, while front wheels do not. Secure them with nuts and washers, tightening simultaneously for stability.
6. **Attach the Backrest:** Slide the backrest into the slot at the rear of the seat. Press down firmly until it locks into place.
7. **Install the Steering Wheel:** Remove the nut and bolt from the steering wheel, then slide it onto the metal steering bar. Align the holes and secure it with the previously removed nut and bolt.
8. **Connect Power Supply & Seat:** Connect the main power cords located under the seat. Ensure the white plugs connect to white plugs and orange plugs to orange plugs. Reattach the seat by aligning the grooves and securing it with a screwdriver.

OPERATING INSTRUCTIONS

Familiarize yourself with the control panel before operating the ATV. Always ensure the rider is wearing appropriate safety gear and is supervised by an adult.

Control Panel Overview:

NO REMOTE CONTROL REQUIRED



The ATV's control panel features buttons for various functions including music, Bluetooth, and speed control.

- **Power Button:** Press to turn the ATV on/off.
- **Forward/Reverse:** Use the dedicated buttons on the control panel to switch between forward and reverse gears. Depress the foot pedal to move.
- **Speed Control:** Toggle between low speed (3.1 MPH) and high speed (4 MPH) using the speed control button.
- **Music & Radio:** The ATV comes with built-in music. Use the music buttons to change tracks. Press and hold to adjust volume. The radio function allows tuning into FM stations.
- **Bluetooth Connectivity:** Connect your mobile device via Bluetooth to play your own music through the ATV's speakers.
- **LED Headlights:** Bright LED headlights provide visibility and enhance the realistic driving experience.

Your browser does not support the video tag.

Official product video showcasing the ELEMARA 2 Seater 4 Wheeler Kids Ride on ATV in action, highlighting its features and performance.

CHARGING THE BATTERY

Proper charging is essential for battery longevity and optimal performance. The ATV offers two convenient charging methods.

Charging Methods:

- **Method 1 (Rear Port):** Pull down the white small piece covering the charging port at the rear of the ATV. Plug the charging cable into this port, then plug the charger into a power supply.
- **Method 2 (Dashboard Port):** Insert the charger jack directly into the charging hole located on the dashboard control panel.



The ATV is equipped with two charging ports for user convenience.

Important Charging Notes:

- During charging, the ATV enters a protected state and cannot be operated.
- For the first use, charge the battery for 4-6 hours.
- Subsequent charges should typically be 8-12 hours.
- Do NOT charge the battery for more than 20 hours to prevent damage and voiding the warranty.
- The battery will automatically remind you when it is running low and needs charging.

CARE AND MAINTENANCE

Regular care and maintenance will ensure the longevity and safe operation of your ELEMARA ATV.

- **Cleaning:** Wipe the ATV with a soft, damp cloth. Do not use abrasive cleaners or solvents. Avoid direct water spray or submersion.
- **Storage:** Store the ATV in a dry, cool place away from direct sunlight and moisture. If storing for extended periods, ensure the battery is fully charged and recharge it every 3 months to maintain battery health.
- **Battery Care:** Always charge the battery fully after each use. Do not allow the battery to completely drain before recharging.
- **Inspection:** Periodically check all screws, nuts, and connections to ensure they are secure. Inspect wheels and tires for wear and tear.

TROUBLESHOOTING GUIDE

If you encounter any issues with your ATV, refer to the common problems and solutions below. For persistent issues, contact customer support.

Problem	Possible Cause	Solution
ATV does not move	Battery low or disconnected; loose wiring; motor issue.	Charge battery; check all power connections; ensure motors are properly installed.
Runs slowly	Low battery; overloaded; operating on unsuitable surface.	Recharge battery; reduce weight; move to a smoother surface.
Lights/Music not working	Loose connection; battery issue.	Check wiring to control panel; ensure battery is charged.
ATV makes unusual noises	Loose parts; debris in wheels/motors.	Inspect for loose components and tighten; clear any obstructions.

PRODUCT SPECIFICATIONS

Specification	Detail
Product Dimensions	43 x 26 x 27 inches
Item Weight	37 pounds
Item Model Number	S615
Manufacturer Recommended Age	36 months - 8 years
Batteries	1 12V battery (included)
Max Speed	4 mph
Max Capacity	130 lbs
Release Date	October 30, 2023
Manufacturer	ELEMARA

IMPORTANT SAFETY INFORMATION

Please read and adhere to all safety warnings to ensure safe operation of the ATV.

- **CHOKING HAZARD:** Small parts. Not suitable for children under 37 months. Keep children away when assembling.
- Always supervise children during operation.
- Do not operate near roads, motor vehicles, steep inclines, steps, swimming pools, or other bodies of water.
- Always wear shoes.
- Never allow more than 2 riders.

WARRANTY AND CUSTOMER SUPPORT

For warranty information, technical support, or any questions regarding your ELEMARA 2 Seater Ride on ATV, please contact ELEMARA customer service. Refer to your purchase documentation for specific warranty terms and contact details.

Thank you for choosing ELEMARA.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CHJLWD8P>

More documents and user manuals: **<https://manuals.plus/>**