

Cecotec 02764

Cecotec Bolero Squad I 3001 Induction Hob Instruction Manual

Model: 02764

INTRODUCTION

This instruction manual provides essential information for the safe and efficient operation of your Cecotec Bolero Squad I 3001 Induction Hob. Please read this manual thoroughly before installation, operation, or maintenance. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is intended for household use only.
- Ensure proper ventilation around the appliance during operation.
- Only use induction-compatible cookware.

PRODUCT OVERVIEW

The Cecotec Bolero Squad I 3001 is a 3-zone induction hob designed for efficient and versatile cooking. It features a maximum power of 7200W and 9 power levels, along with a pan detection system, automatic shut-off, and a child lock function.



Image: Top-down view of the Cecotec Bolero Squad I 3001 Induction Hob, showing two active cooking zones with a red pot containing stew on one, and the digital controls illuminated.



Image: Angled view of the Cecotec Bolero Squad I 3001 Induction Hob, illustrating its dimensions: 59 cm length, 52 cm width, and 6.2 cm height.



Image: A woman cooking on the Cecotec Bolero Squad I 3001 Induction Hob, using a pot and a frying pan simultaneously, demonstrating its multi-zone capability.



Image: Overhead view of the Cecotec Bolero Squad I 3001 Induction Hob with a frying pan containing salmon and asparagus, and a pot of boiling pasta, highlighting the cooking zones and touch controls.



Image: Close-up of the touch controls on the Cecotec Bolero Squad I 3001 Induction Hob, showing a finger adjusting the power level on the illuminated display.



Image: Angled view of the Cecotec Bolero Squad I 3001 Induction Hob installed on a wooden kitchen counter, showcasing its sleek black glass surface and three cooking zones.



Image: The Cecotec Bolero Squad I 3001 Induction Hob with a large pot and a smaller frying pan, both in use, demonstrating the hob's capacity for multiple dishes.



Image: The Cecotec Bolero Squad I 3001 Induction Hob with a single large pot on one of its cooking zones, showing the clean design when in use.

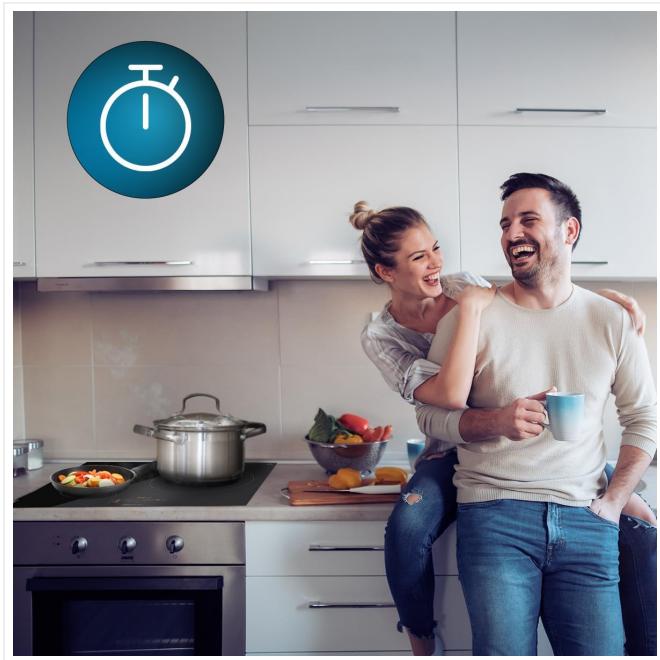


Image: A kitchen scene with the Cecotec Bolero Squad I 3001

Induction Hob in use, overlaid with a blue circular icon representing a timer, indicating the hob's timer function.



Image: The Cecotec Bolero Squad I 3001 Induction Hob on a kitchen counter with a pot, overlaid with a blue circular icon representing a power button, indicating the automatic shut-off feature.

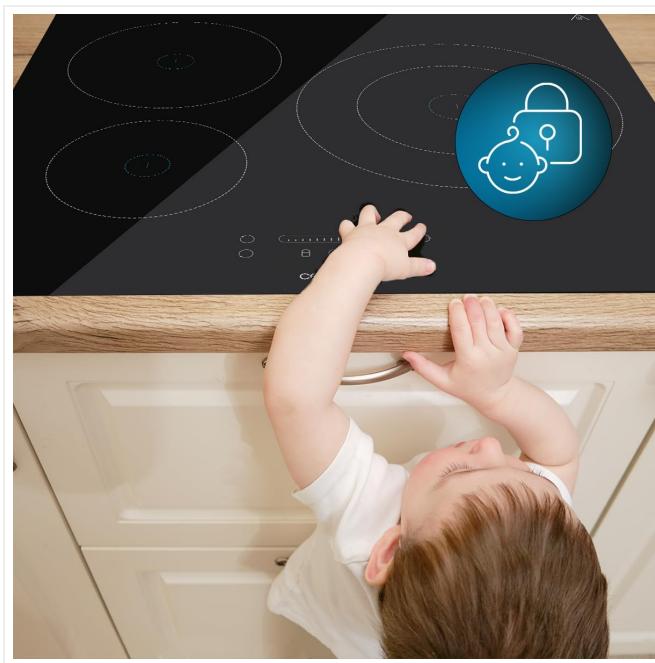


Image: A child reaching towards the Cecotec Bolero Squad I 3001 Induction Hob, with a blue circular icon showing a child and a lock, illustrating the KidLock safety feature.



Image: The Cecotec Bolero Squad I 3001 Induction Hob with a frying pan of vegetables, overlaid with a lightbulb icon, representing the pan detection system that ensures efficient energy use.

SETUP AND INSTALLATION

Installation of the induction hob should only be performed by a qualified technician in accordance with local regulations and standards.

Unpacking

- Carefully remove the hob from its packaging.
- Inspect the appliance for any signs of damage. Do not install if damaged.

- Ensure all components listed in the packing list are present.

Placement

- The hob must be installed on a stable, flat surface.
- Ensure adequate ventilation space around and beneath the hob as per installation diagrams (refer to separate installation guide for detailed diagrams).
- Avoid placing the hob near heat sources or flammable materials.

Electrical Connection

- The appliance requires a dedicated electrical circuit.
- Verify that the voltage and frequency of your electrical supply match the specifications on the appliance's rating plate.
- The electrical connection must include an all-pole disconnection switch with a contact opening of at least 3mm.

OPERATING INSTRUCTIONS

Turning On/Off

- To turn on, touch the **Power** button. The display will illuminate.
- To turn off, touch and hold the **Power** button until the display turns off.

Selecting a Cooking Zone and Adjusting Power

- Place an induction-compatible pan on the desired cooking zone.
- Touch the corresponding zone selection button.
- Use the **+-** or slider controls to adjust the power level from 1 to 9.
- The **Booster** function provides maximum power for rapid heating. Activate by touching the 'B' symbol.

Timer Function

- To set a timer for a specific zone, select the zone, then touch the **Timer** button.
- Adjust the time using the **+-** controls.
- The hob will automatically turn off the selected zone when the timer expires.

KidLock (Child Lock)

- To activate the child lock, touch and hold the **Lock** button. An indicator light will appear.
- This prevents accidental operation of the hob.
- To deactivate, touch and hold the **Lock** button again until the indicator light turns off.

Automatic Shut-off and Pan Detection

- The hob features an automatic shut-off if no pan is detected on a cooking zone or if a pan is removed.
- The pan detection system ensures energy is only used when a suitable pan is present.
- A residual heat indicator will illuminate if a cooking zone is still hot after use.

CARE AND MAINTENANCE

Cleaning the Hob

- Always ensure the hob is cool and unplugged before cleaning.
- Wipe the glass surface with a soft cloth and a mild detergent.
- For stubborn stains, use a ceramic hob scraper, holding it at a 45-degree angle.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals.
- Dry the surface thoroughly after cleaning to prevent water marks.

General Care

- Avoid dropping heavy objects on the glass surface, as this can cause damage.
- Do not slide rough-bottomed pans across the surface to prevent scratches.
- Regularly check the ventilation openings to ensure they are not blocked.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Hob does not turn on.	No power supply; Child lock activated.	Check power connection and circuit breaker; Deactivate child lock.
Cooking zone not heating.	Incorrect cookware; Pan not centered; Pan detection error.	Use induction-compatible cookware; Center the pan on the zone; Remove and re-place the pan.
Display shows an error code.	Specific malfunction.	Refer to the full error code list in the comprehensive manual or contact customer support.
Hob makes noise during operation.	Normal fan operation; Cookware vibration.	This is normal for induction hobs; Some cookware may vibrate more than others.
Automatic shut-off activates unexpectedly.	No pan detected for extended period; Overheating.	Ensure pan is present and suitable; Allow hob to cool down if overheated.

If the problem persists after attempting these solutions, please contact Cecotec customer support.

TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Cecotec
Model Number	02764 (Plaque Bolero Squad I 3001)
Color	Black
Dimensions (L x W x H)	52 x 59 x 6.2 cm
Weight	8.65 kg
Maximum Power	7200 Watts

Feature	Specification
Number of Heating Elements	3
Control Type	Push Button / Touch Controls
Burner Type	Induction
Special Features	Automatic Shut-off, Pan Detection, Booster, KidLock
Material	Metal
Country of Origin	Spain

WARRANTY AND SUPPORT

Warranty Information

This Cecotec product comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty period and coverage details. Keep your proof of purchase for warranty claims.

Availability of spare parts: **10 Years**.


Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Cecotec customer support. Contact details can typically be found on the official Cecotec website or on your product packaging.

You can also visit the official Cecotec website for FAQs and additional resources: www.cecotec.com

© 2025 Cecotec. All rights reserved. Information in this manual is subject to change without notice.

Documents - Cecotec – 02764

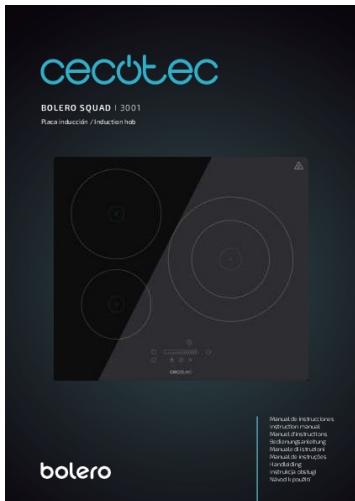


[\[pdf\] User Manual Instructions](#)

Descargar manual Bolero Squad I 3001 Placa de inducción Cecotec bolero squad i user es cdn cecotec cloud media files |||

BOLERO SQUAD I 3001 Placa induccin / Induction hob Manual de instrucciones
Instruction manual Manuel ... solo para evitar peligros y daos en la placa de induccin.
8. ESPECIFICACIONES TCNICAS Referencia: **02764** Producto: Placa Bolero Squad I 3001 Zonas de coccin: 3 zonas Tensin de alimentacin: 220-240 V-...

lang:it **score:26** filesize: 2.63 M page_count: 224 document date: 2023-09-06

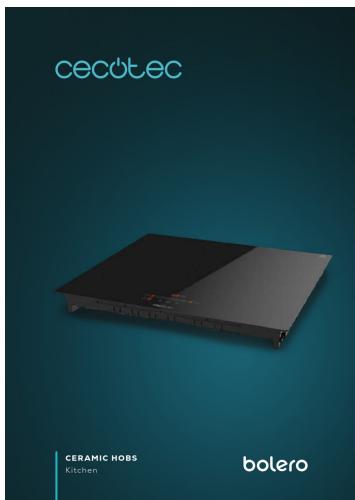


[\[pdf\] Catalog](#)

Catalogue Ceramic hobs 2023 CECOTEC EN cdn cecotec cloud s3 amazonaws media IFA2023 |||

CERAMIC HOBS Kitchen Power and versatility to cook on a large scale. Index Power and versatility ... ed instant cooking. **COMPOSITION:** Plate Manual 52 x 59 x 6.2 cm 220-240 V- 50/60 Hz 7400 W 8435484**027649** Box 18435484**027646** Master **02764** Discover the range 11 Bolero Squad I 3200 induction h...

lang:en **score:19** filesize: 3.56 M page_count: 9 document date: 2023-09-01

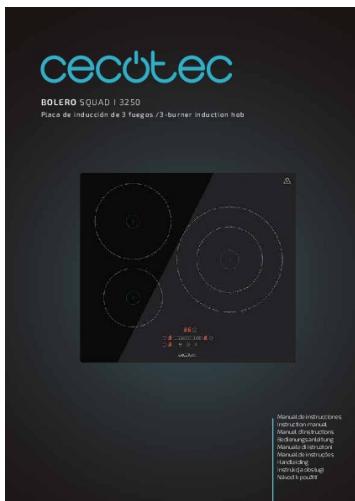

[\[pdf\] User Manual Instructions Troubleshooting Guide Specifications Warranty](#)

BOLERO SQUAD I 3250 media adeo 4121261 |||

BOLERO SQUAD I 3250 Placa de induccin de 3 fuegos /3-burner induction hob
Manual de instrucciones In ... en la placa de induccin. **BOLERO SQUAD I 3250** 57
ESPAOL 7. **ESPECIFICACIONES TCNICAS** Referencia: **02764** Producto: Placa Bolero Squad I 3250 Zonas de coccin: 3 zonas Tensin de alimentacin: 220-240 V-...

lang:it **score:12** filesize: 1.52 M page_count: 232 document date: 2024-02-01

