

JOCCA 2184

JOCCA Nature Electric Citrus Juicer - Instruction Manual

Model: 2184

Brand: JOCCA

1. INTRODUCTION

Thank you for choosing the JOCCA Nature Electric Citrus Juicer. This appliance is designed to efficiently extract fresh juice from citrus fruits. Please read this instruction manual carefully before first use to ensure proper operation, maintenance, and safety. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions.

- Read all instructions before using the appliance.
- Do not immerse the motor base in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local power supply before connecting.
- Unplug from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off", then remove the plug from the wall outlet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your JOCCA Nature Electric Citrus Juicer:

1. Dust Cover / Lid
2. Large Reamer
3. Small Reamer
4. Filter / Strainer
5. Juice Jug (0.7L capacity)
6. Motor Base
7. Power Cord



Image 1: Fully assembled JOCCA Nature Electric Citrus Juicer.



Image 2: Close-up view of the transparent lid, large reamer, and filter.



Image 3: The motor base featuring the JOCCA Nature logo and wood-effect trim.

4. SETUP AND FIRST USE

Before using your citrus juicer for the first time, follow these steps:

1. **Unpack:** Carefully remove all packaging materials and ensure all components are present.
2. **Clean:** Wash the lid, reamers, filter, and juice jug in warm soapy water. Rinse thoroughly and dry. The manufacturer states these parts are dishwasher safe. Wipe the motor base with a damp cloth. Do not immerse the motor base in water.
3. **Assemble:**
 - Place the juice jug onto the motor base, ensuring it is securely seated.
 - Insert the filter into the juice jug.
 - Select the appropriate reamer (large for oranges/grapefruits, small for lemons/limes) and place it onto the central shaft of the filter.
 - Place the dust cover/lid on top of the assembled unit.
4. **Position:** Place the assembled juicer on a stable, flat, and dry surface.
5. **Connect:** Plug the power cord into a suitable electrical outlet (220-240V, 50/60Hz).

5. OPERATING INSTRUCTIONS

Follow these steps to extract fresh juice:

1. **Prepare Fruit:** Cut citrus fruits (oranges, lemons, limes, grapefruits) in half.
2. **Remove Lid:** Take off the dust cover/lid.
3. **Juice:** Place a fruit half onto the reamer. Press down firmly. The juicer will automatically start rotating. Apply gentle pressure and rotate the fruit slightly to extract all the juice. The reamer features bidirectional rotation for maximum juice extraction.
4. **Collect Juice:** The extracted juice will flow through the filter into the juice jug. The filter retains pulp and seeds.
5. **Continue Juicing:** Repeat the process with remaining fruit halves until the desired amount of juice is collected or the jug reaches its maximum capacity (700 ml).
6. **Stop:** Release pressure from the fruit, and the motor will stop automatically.
7. **Serve:** Once juicing is complete, remove the reamer and filter. You can pour the fresh juice directly from the jug.



Image 4: The juicer ready for use with cut oranges.



Image 5: The juicer demonstrating its use with limes.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your juicer.

1. **Unplug:** Always unplug the appliance from the power outlet before cleaning.
2. **Disassemble:** Remove the lid, reamer, filter, and juice jug from the motor base.
3. **Wash Detachable Parts:**
 - The cones, filter, lid, and jug are dishwasher safe for convenient cleaning.
 - Alternatively, wash these parts by hand in warm, soapy water. Use a brush to remove any pulp residue from the filter.
 - Rinse thoroughly and dry completely before reassembling or storing.
4. **Clean Motor Base:** Wipe the exterior of the motor base with a soft, damp cloth. Do not use abrasive cleaners or scourers. Never immerse the motor base in water or any other liquid.
5. **Storage:** Store the assembled juicer in a clean, dry place.

Note: While some parts are dishwasher safe, hand washing is often recommended for

preserving the appearance and longevity of plastic components.

7. TROUBLESHOOTING

If you encounter issues with your juicer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Juicer does not start.	Not plugged in; power outage; parts not assembled correctly; insufficient pressure on fruit.	Ensure the power cord is securely plugged into a working outlet. Check your home's circuit breaker. Reassemble all parts correctly. Apply firm, consistent pressure on the fruit.
Motor stops during operation.	Overheating due to prolonged use; excessive pressure on fruit.	Unplug the juicer and let it cool down for at least 15-20 minutes. Reduce pressure on the fruit during juicing.
Poor juice extraction.	Incorrect reamer size; insufficient pressure; fruit not cut properly.	Use the appropriate reamer size for the fruit. Apply firm, even pressure. Ensure fruits are cut in half.
Juice contains too much pulp.	Filter clogged or not properly seated.	Ensure the filter is clean and correctly placed in the juice jug. Clean the filter thoroughly after each use.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Brand:	JOCCA
Model Number:	2184
Color:	Wood Color
Product Dimensions (L x W x H):	15 x 15 x 20 cm
Item Weight:	790 g
Capacity:	700 Milliliters
Power:	40 Watts
Voltage:	220-240 Volts (AC), 50/60 Hz

Material:	Stainless Steel (components), Plastic (jug, reamers, lid)
Special Feature:	Dual-direction cone, Automatic press-start
Care Instructions:	Detachable parts are dishwasher safe; Hand wash recommended for longevity; Wipe motor base with damp cloth.
BPA-Free:	Yes

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information or if you have any questions, concerns, or require assistance with your JOCCA Nature Electric Citrus Juicer, please contact JOCCA customer support. Refer to the product packaging or the JOCCA official website for contact details.

Please have your model number (2184) and purchase information ready when contacting support.