



Manuals.plus /

› AEG /

› AEG 7000 PROSTEAM 8kg 1400rpm Integrated Washing Machine - User Manual

AEG LF7C8636BI

AEG 7000 PROSTEAM 8kg 1400rpm Integrated Washing Machine

MODEL: LF7C8636BI - USER MANUAL

Product Overview

The AEG 7000 PROSTEAM Integrated Washing Machine is designed for efficient and gentle laundry care. With an 8kg load capacity and a maximum spin speed of 1400rpm, it offers a range of features to optimize washing performance and fabric protection.

Key features include:

- **ProSteam Technology:** Utilizes steam to refresh clothes, reducing wrinkles and minimizing water consumption (approx. 2L per cycle).
- **TimeSave Option:** Allows for reduction of cycle duration for quicker washes.
- **ProSense Technology:** Automatically weighs each load to tailor the cycle, optimizing water and energy usage.
- **Low Noise Operation:** Engineered for quiet performance with a noise level of 70dB(A).
- **Energy Efficiency:** Rated B for energy consumption.



This image displays the front of the AEG 7000 PROSTEAM Integrated Washing Machine. It features a white finish, a large black door for

the drum, and a control panel at the top. The control panel includes a program selection dial, a digital display showing time and temperature, and various touch buttons for functions like temperature, spin speed, time save, delay start, and steam options. A red item of clothing is visible inside the drum.

Installation and Setup

Before operating your washing machine, ensure proper installation. This appliance is designed as an integrated unit, meaning it is built into your kitchen cabinetry.

- 1. Unpacking:** Carefully remove all packaging materials. Check for any transit bolts at the rear of the machine and remove them as per the separate installation guide. Keep packaging for future transport if needed.
- 2. Positioning:** Place the machine on a firm, level surface. Adjust the feet to ensure stability and prevent vibration during operation.
- 3. Water Connection:** Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure connections are tight to prevent leaks.
- 4. Drainage:** Securely connect the drain hose to a suitable drain pipe or sink. Ensure the hose is not kinked or obstructed.
- 5. Electrical Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the appliance's requirements (2.3E+2 Volts AC). Do not use extension cords or adapters.
- 6. Initial Run:** Before washing clothes, run an empty cycle (e.g., a short cotton wash at 60°C) without detergent to clean the drum and internal components.

Operating Instructions

Familiarize yourself with the control panel and available programs for optimal use.

Control Panel Overview:

- **Program Dial:** Rotate to select desired wash program (e.g., Wool/Silk, Denim, Sport, Eco 40-60, Cottons, Synthetics, Delicates, Outdoor, Steam, Rinse, Spin/Drain).
- **Display:** Shows program duration, temperature, spin speed, and error codes.
- **On/Off Button:** Press to power the machine on or off.
- **Temperature Button:** Adjusts the wash temperature for the selected program.
- **Spin Button:** Modifies the spin speed.
- **Time Save Button:** Reduces the program duration.
- **Delay Start Button:** Sets a delayed start time for the program.
- **Prewash Button:** Adds a prewash phase to the cycle.
- **Stain Button:** Activates a stain treatment option.
- **Extra Rinse Button:** Adds additional rinse cycles.
- **Soft Plus Button:** Enhances fabric softener distribution.
- **Plus Steam Button:** Adds a steam phase to the wash cycle for improved hygiene and wrinkle reduction.
- **Start/Pause Button:** Initiates or pauses the selected program.

Washing Procedure:

- 1. Load Laundry:** Open the door and load laundry into the drum, ensuring not to overload. The maximum capacity is 8kg.
- 2. Add Detergent:** Pull out the detergent dispenser drawer and add appropriate amounts of detergent and fabric softener to the designated compartments.

3. **Close Door:** Close the washing machine door firmly until it clicks shut.
4. **Select Program:** Turn the program dial to choose the desired wash program based on fabric type and soil level.
5. **Adjust Settings:** Use the function buttons (Temperature, Spin, Time Save, etc.) to customize the program settings as needed.
6. **Start Cycle:** Press the **Start/Pause** button to begin the wash cycle.
7. **End of Cycle:** The machine will signal when the cycle is complete. The door will unlock after a short delay. Remove laundry promptly.

Maintenance and Care

Regular maintenance ensures the longevity and optimal performance of your washing machine.

- **Cleaning the Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Cleaning the Detergent Dispenser:** Periodically remove the detergent dispenser drawer and rinse it under running water to remove any detergent residue. Clean the housing with a brush.
- **Cleaning the Drum:** Run a maintenance wash (e.g., a hot cycle with a descaler or washing machine cleaner) every few months to prevent odor and limescale buildup.
- **Cleaning the Drain Filter:** The drain filter, located at the bottom front of the machine (as indicated by the image), should be cleaned regularly to prevent blockages.
 - a. Place a shallow container under the filter cover to collect any residual water.
 - b. Open the filter cover.
 - c. Slowly unscrew the filter counter-clockwise until water starts to drain.
 - d. Once drained, fully remove the filter and clean it under running water. Remove any lint or foreign objects.
 - e. Reinsert the filter and screw it clockwise until tight. Close the cover.
- **Door Seal Care:** After each wash, wipe the rubber door seal and the inside of the door glass to remove any moisture or lint, preventing mold and odors. Leave the door slightly ajar when not in use to allow air circulation.

Troubleshooting

Before contacting service, check the following common issues and solutions:

Problem	Possible Cause	Solution
Machine does not start.	No power supply; Door not closed properly; Program not selected; Start/Pause not pressed.	Check power plug and fuse; Ensure door is firmly closed; Select a program; Press Start/Pause.
Water not filling.	Water tap closed; Water inlet hose kinked or blocked.	Open water tap; Straighten hose; Clean inlet filter if blocked.
Water not draining.	Drain hose kinked or blocked; Drain filter blocked.	Straighten drain hose; Clean drain filter (refer to Maintenance section).
Excessive vibration/noise.	Machine not level; Transit bolts not removed; Uneven load.	Adjust leveling feet; Ensure transit bolts are removed; Redistribute laundry evenly.
Detergent residue in dispenser.	Insufficient water pressure; Detergent clumping; Dispenser blocked.	Check water pressure; Use less detergent or dissolve it; Clean dispenser drawer.

If the problem persists after attempting these solutions, please refer to the full user manual or contact customer support.

Specifications

Feature	Detail
Brand	AEG
Model Number	LF7C8636BI
Capacity	8 Kilograms
Maximum Rotational Speed	1400 RPM
Installation Type	Integrated
Energy Rating	B
Noise Level (Spin)	70 dB(A)
Control Console	Push Button / Dial
Access Location	Front Load
Voltage	2.3E+2 Volts (AC)
Material Type	Stainless Steel (Drum)
Special Features	ProSteam, TimeSave option, ProSense technology
Colour	White

Warranty and Support

Your AEG washing machine comes with a manufacturer's warranty covering defects in materials and workmanship. The specific terms and duration of the warranty may vary by region and retailer.

For warranty claims, technical assistance, or spare parts, please:

- Refer to the warranty card included with your appliance.
- Contact the retailer from whom you purchased the appliance.
- Visit the official AEG website for your region for support contact details and service information.

When contacting support, please have your appliance's model number (LF7C8636BI) and serial number ready, as this will help expedite the service process.