

[Manuals.plus](#) /

› [Hoover](#) /

› Hoover FH46010V Streamline Corded Hard Floor Cleaner User Manual

Hoover FH46010V

Hoover FH46010V Streamline Corded Hard Floor Cleaner User Manual

Model: FH46010V

INTRODUCTION

Thank you for choosing the Hoover FH46010V Streamline Corded Hard Floor Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read all instructions carefully before use and retain this manual for future reference.

The Hoover Streamline is designed to simplify hard floor cleaning by combining vacuuming and washing in a single step. It is suitable for various hard floor types, including hardwood, tile, and luxury vinyl.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using an electrical appliance to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the appliance.
- Use only as described in this manual.
- Do not leave appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only Hoover recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.

- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use only Hoover cleaning products intended for use with this appliance.
- Store the appliance indoors in a cool, dry area.

PACKAGE CONTENTS

- Hoover FH46010V Streamline Hard Floor Cleaner Unit
- (1) Microfiber Brush Roll
- Self-Cleaning Storage Tray
- (1) Filter
- (1) Trial-Size Hard Floor Cleaning Solution
- User Manual

SETUP AND ASSEMBLY

Follow these steps to assemble your Hoover FH46010V cleaner before first use.

1. **Unpack the Unit:** Carefully remove all components from the packaging. Ensure all listed package contents are present.
2. **Handle Assembly:** Insert the handle into the main body of the cleaner until it clicks securely into place.
3. **Fill the Clean Water Tank:**
 - Remove the clean water tank from the unit.
 - Unscrew the cap and fill the tank with clean water up to the indicated fill line.
 - Add the recommended amount of Hoover hard floor cleaning solution (trial size included). Do not overfill.
 - Securely replace the cap and reinsert the tank into the unit.
4. **Check Brush Roll and Filter:** Ensure the microfiber brush roll is correctly installed and the filter is clean and in place. Refer to the "Maintenance" section for details on installing these components.

OPERATING INSTRUCTIONS

Learn how to effectively use your hard floor cleaner for optimal results.

1. Powering On and Cleaning Modes

1. **Plug In:** Connect the power cord to a suitable electrical outlet (110 Volts).
2. **Turn On:** Press the power button located on the handle to turn on the unit. The LED display will illuminate.
3. **Select Mode:** The cleaner typically operates in a combined vacuum and wash mode. Some models may have a "Boost Wash" option for tougher messes, indicated on the LED display.

2. Cleaning Your Hard Floors

The Hoover FH46010V is designed to vacuum and wash simultaneously, making hard floor cleaning efficient.

- **Start Cleaning:** Gently push and pull the cleaner across your hard floors. The brush roll will agitate and clean the surface while the vacuum suctions up dirty water and debris.
- **Edge Cleaning:** The cleaner is designed to clean close to edges, baseboards, and under cabinets. Guide the cleaning head along these areas for thorough coverage.
- **LED Display Feedback:** Monitor the LED display for real-time updates, such as "ADD WATER" (clean water tank empty), "EMPTY DIRTY WATER" (dirty water tank full), or "BRUSH ROLL" (brush roll issue).

VACUUM & WASH IN ONE STEP



Image: The Hoover FH46010V in action, effectively vacuuming and washing hard floors in one step.



Image: The cleaner's head positioned against a wall, illustrating its ability to clean right up to the edge.



Image: The Hoover FH46010V easily picking up large messes, such as spilled food, from hard surfaces.

LED DISPLAY



Image: The intuitive LED display providing real-time status updates during operation.

MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your Hoover FH46010V cleaner.

1. Self-Cleaning System

After each use, utilize the self-cleaning function to keep the brush roll and internal components fresh and hygienic.

1. **Place on Tray:** Position the cleaner on its self-cleaning storage tray.
2. **Initiate Self-Clean:** Ensure there is sufficient clean water in the tank. Press the "SELF-CLEAN" button (if available) or follow the instructions on the LED display to start the cycle.
3. **Empty Dirty Water:** Once the self-cleaning cycle is complete, empty the dirty water tank.



SELF-CLEANING SYSTEM

Image: The self-cleaning system in use, keeping the machine fresh and ready for the next use.

2. Emptying and Cleaning the Dirty Water Tank

- Remove the dirty water tank from the unit.
- Open the tank and dispose of the dirty water.
- Rinse the tank thoroughly with clean water.
- Allow the tank to air dry before reattaching it to the unit.

3. Cleaning/Replacing the Brush Roll

- Turn off and unplug the cleaner.
- Access the brush roll compartment (refer to your unit's specific design for latch or cover removal).
- Remove the microfiber brush roll.
- Rinse the brush roll under running water to remove debris and tangled hair.
- Allow the brush roll to air dry completely before reinstalling. Replace the brush roll if it shows signs of wear or damage.

4. Cleaning/Replacing the Filter

- Turn off and unplug the cleaner.
- Locate the filter (usually near the dirty water tank).
- Remove the filter and tap it gently to dislodge loose debris.
- Rinse the filter under running water. Ensure it is completely dry before reinserting.
- Replace the filter every 3-6 months, or more frequently with heavy use, to maintain suction performance.

TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in. Power outlet not working. Circuit breaker tripped.	Ensure power cord is securely plugged into a 110V outlet. Test the outlet with another appliance. Reset the circuit breaker.
Poor suction or cleaning performance.	Dirty water tank is full. Clean water tank is empty. Brush roll is clogged or worn. Filter is dirty or clogged. Nozzle or hose is blocked.	Empty and clean the dirty water tank. Refill the clean water tank with water and solution. Clean or replace the brush roll. Clean or replace the filter. Check for and clear any blockages in the nozzle or hose.
Brush roll not spinning.	Brush roll is jammed by debris. Brush roll is incorrectly installed. Motor protection activated.	Turn off and unplug the unit. Remove and clear any obstructions from the brush roll. Ensure the brush roll is correctly seated in its compartment. Turn off the unit, unplug, and wait for 1 hour before restarting.
Water leaking from unit.	Tanks not properly seated. Tank caps not securely closed. Damaged tank or seal.	Remove and re-seat both clean and dirty water tanks firmly. Ensure caps on both tanks are tightly closed. Inspect tanks and seals for cracks or damage. Contact customer support if damaged.
LED display shows an error.	Specific error indicator (e.g., "ADD WATER", "EMPTY DIRTY WATER", "BRUSH ROLL").	Refer to the specific indicator on the LED display and take appropriate action (refill, empty, clean brush roll). If the error persists, turn off and unplug the unit, then restart.

SPECIFICATIONS

Feature	Detail
Brand	Hoover
Model Name	Streamline Hard Floor Cleaner
Model Number	FH46010V
Special Features	Self-cleaning, Compact, Corded, Wet/Dry, LED display
Filter Type	Cartridge
Surface Recommendation	Hard floor (Hardwood, Tile, Luxury Vinyl)
Power Source	Corded Electric
Voltage	110 Volts
Controller Type	Push Button
Color	Gray
Noise Level	80 Decibels (Approximate)
Indoor/Outdoor Use	Indoor Only
Form Factor	Upright
GTIN/UPC	073502052228
Manufacturer	TTI Floorcare

WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase replacement parts and accessories, please visit the official Hoover website or contact Hoover customer service.

Hoover Official Website: www.hoover.com

Please have your model number (FH46010V) and serial number ready when contacting support.