

[Manuals.plus](#) /

> [RYELDOM](#) /

> RYELDOM 32.5 cm Microwave Turntable Plate User Manual

RYELDOM Piatto microonde

RYELDOM 32.5 cm Microwave Turntable Plate User Manual

Brand: RYELDOM

Model: Piatto microonde

1. INTRODUCTION

This user manual provides essential information for the RYELDOM 32.5 cm Microwave Turntable Plate, designed specifically for Whirlpool microwaves. It covers installation, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your product. This plate ensures uniform heat distribution for perfectly cooked meals.



Image 1: RYELDOM 32.5 cm Microwave Turntable Plate. A clear glass turntable plate with three central protrusions on the underside, designed for even heating in microwave ovens.

2. PRODUCT FEATURES

- **Perfect Compatibility:** This turntable plate is exclusively designed for Whirlpool microwaves, ensuring perfect adaptability and problem-free operation.
- **Standard Dimensions:** The plate has a diameter of 32.5 cm and features 3 protrusions to secure it onto the support that enables rotation, suitable for most Whirlpool models.

- **Uniform Heat Distribution:** Thanks to its quality, the plate guarantees uniform heat distribution during cooking, ensuring your food is cooked to perfection.
- **Durable Material:** Made with heat and corrosion-resistant materials, our turntable plate is designed to last. It will accompany you through many culinary preparations.
- **Customer Support:** If you have any doubts about compatibility, please contact us. Our customer service team is ready to help you confirm if the product is suitable for your appliance.

3. SETUP AND INSTALLATION

The RYELDOM 32.5 cm Microwave Turntable Plate is designed for easy installation. Follow these steps for proper setup:

1. Ensure your microwave oven is unplugged and cool before installation.
2. Carefully remove any existing turntable plate and support ring from the microwave cavity.
3. Place the new RYELDOM turntable plate onto the central rotating mechanism. Ensure the three protrusions on the underside of the plate align with the corresponding grooves on the microwave's rotating support.
4. Gently rotate the plate to confirm it sits securely and can spin freely without obstruction.
5. Close the microwave door and plug the appliance back into the power outlet.

Note: Always handle the glass plate with care to prevent damage.

4. OPERATING INSTRUCTIONS

The turntable plate facilitates even cooking by rotating food during microwave operation. No special operation is required for the plate itself beyond proper placement.

- Place food centrally on the turntable plate for optimal heating.
- Close the microwave door securely.
- Select desired cooking settings and time on your microwave oven.
- Start the microwave. The turntable plate will rotate automatically during the cooking cycle.
- For best results, ensure food containers or dishes do not obstruct the plate's rotation.

5. MAINTENANCE

Regular cleaning and proper care will extend the life of your RYELDOM turntable plate.

- **Cleaning:** After each use, allow the plate to cool. Wipe clean with a damp cloth and mild detergent. For stubborn food residues, the plate can be washed by hand or in a dishwasher.
- **Handling:** Handle the glass plate with care to prevent chipping or breakage. Avoid dropping or subjecting it to sudden temperature changes (e.g., placing a hot plate directly into cold water).
- **Inspection:** Periodically inspect the plate for any cracks, chips, or damage. Replace the plate immediately if any damage is observed to ensure safe operation and prevent further issues.

Do not use abrasive cleaners, metal scouring pads, or harsh chemicals, as these can scratch or damage the glass surface.

6. TROUBLESHOOTING

Refer to the table below for common issues and their solutions:

Problem	Possible Cause	Solution
Turntable plate does not rotate.	Plate not seated correctly on the rotating support.	Ensure the plate's three protrusions are properly aligned with the microwave's central rotating mechanism.
Turntable plate makes unusual noise during rotation.	Debris or food particles under the plate or on the rotating mechanism.	Clean the microwave cavity, the rotating support, and the underside of the plate thoroughly.
Plate is chipped, cracked, or broken.	Physical impact, dropping, or sudden temperature changes.	Discontinue use immediately and replace with a new RYELDOM turntable plate.

7. SPECIFICATIONS

- **Brand:** RYELDOM
- **Model:** Piatto microonde
- **Diameter:** 32.5 cm
- **Compatibility:** Designed for Whirlpool microwaves (Compatible with code 481941879728)
- **Material:** High-quality, heat-resistant glass
- **Weight:** Approximately 1.7 Kilograms
- **Dimensions (L x W x H):** 0.84 x 33 x 3 cm

8. WARRANTY AND SUPPORT

RYELDOM is committed to providing quality products and excellent customer service. Our mission is to offer reliable and long-lasting solutions for your home appliances.

For any questions regarding compatibility, installation, maintenance, or product issues, please do not hesitate to contact RYELDOM customer support. While specific warranty details are not provided in this manual, RYELDOM products are designed for durability and reliability.

You can find more information and contact details on the official RYELDOM brand page or through your purchase platform:

[Visit the RYELDOM Brand Store on Amazon](#)

