

## Kogan MX10 Pro

# Kogan MX10 Pro Cordless Stick Vacuum Cleaner User Manual

Model: KAVACSTM10P

## INTRODUCTION

Thank you for purchasing the Kogan MX10 Pro Cordless Stick Vacuum Cleaner. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before use and retain it for future reference.

The Kogan MX10 Pro is designed for efficient cleaning of various surfaces, featuring powerful suction, a brushless motor, and a HEPA filtration system for a cleaner home environment.

## SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always observe basic safety precautions when using an electrical appliance.

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

- Use extra care when cleaning on stairs.
- Do not use without dust cup and/or filters in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

## PRODUCT OVERVIEW & COMPONENTS

---

Familiarize yourself with the parts of your Kogan MX10 Pro Cordless Stick Vacuum Cleaner.





Figure 1: Fully assembled Kogan MX10 Pro Cordless Stick Vacuum Cleaner, showing the main unit, extension wand, and motorized brush head.



Figure 2: Kogan MX10 Pro with icons indicating 25000Pa suction power, up to 45 minutes battery life, dust detection & adaptive suction, motorized roller brush, and touchscreen display.

## Package Contents:

- Main Vacuum Unit (with dust bin and motor)
- Extension Wand
- Motorized Brush Head
- Detachable Li-ion Battery (2000mAh)
- Power Adapter/Charger
- Wall-Mounted Dock
- Crevice Tool
- 2-in-1 Brush Tool
- User Manual

## SETUP

---

### Assembly:

1. Insert the extension wand into the main vacuum unit until it clicks securely into place.

2. Attach the motorized brush head to the other end of the extension wand, ensuring it clicks securely.
3. Insert the detachable Li-ion battery into the battery slot on the main unit until it locks.

### Charging the Battery:

- Connect the power adapter to the charging port on the battery or the wall-mounted dock.
- Plug the adapter into a power outlet. The LCD touchscreen will display the charging status.
- For first use, fully charge the battery (approximately 4-5 hours).

### Wall-Mounted Dock Installation:

- Choose a suitable location near a power outlet for convenient storage and charging.
- Mark the drilling points for the dock on the wall.
- Drill holes and insert wall plugs (if necessary).
- Secure the wall-mounted dock using screws.
- Place the vacuum cleaner onto the dock for storage and charging.

## OPERATING INSTRUCTIONS

---

### Powering On/Off:

- Press the power button on the handle to turn the vacuum cleaner on.
- Press the power button again to turn it off.



Figure 3: The Kogan MX10 Pro in use, highlighting its powerful 25kPa suction, long battery life, and efficient 250W brushless motor.

### Suction Modes & LCD Touchscreen:

## LCD touchscreen



Displays battery, suction level and more

Figure 4: The LCD touchscreen provides real-time information on battery level, suction mode, and other operational indicators.

- The LCD touchscreen displays battery status, current suction level, and other relevant information.
- Tap the mode button on the touchscreen to switch between different suction modes (e.g., Eco, Standard, Max).
- The vacuum features dust detection, which automatically adjusts suction power based on the amount of dirt detected.





Figure 5: The brush head detecting dust on a hard floor, demonstrating the automatic suction adjustment feature.

### Using Attachments:

- **Motorized Brush Head:** Ideal for carpets and hard floors, providing powerful agitation to lift dirt.
- **Crevice Tool:** Perfect for narrow gaps, corners, and hard-to-reach areas.
- **2-in-1 Brush Tool:** Use the brush for dusting delicate surfaces or slide the brush back for upholstery and larger debris.
- To change attachments, press the release button on the current attachment and pull it off. Then, push the desired attachment onto the main unit or extension wand until it clicks.

## MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### Emptying the Dust Bin:

- It is recommended to empty the dust bin after each use or when the MAX fill line is reached.
- Hold the main unit over a rubbish bin.
- Press the dust bin release button to open the bottom flap and allow debris to fall out.
- The ejection mechanism ensures dirt and dust are removed in a singular motion.



Figure 6: Demonstrating the easy bin emptying process by pressing the release button to open the dust bin flap.

### **Cleaning Filters:**

The Kogan MX10 Pro features a cyclone filter system and a washable HEPA filter to ensure maximum performance and trap fine dust and allergens.



## Cyclone filter system



Figure 7: The HEPA filter captures up to 99.97% of fine dust and allergens.

1. Twist and pull to remove the filter assembly from the dust bin.
2. Separate the HEPA filter and the metal mesh filter.
3. Rinse the HEPA filter and metal mesh filter under cold running water.
4. Allow all filter components to air dry completely for at least 24 hours before reassembling and placing back into the vacuum. **Important: Ensure all parts are completely dry before reinstallation to prevent damage.**

### Cleaning the Brush Head:

- Periodically check the brush head for tangled hair or debris.
- To remove the brush roll, locate the release tab on the side of the brush head and open it.
- Carefully pull out the brush roll.
- Use scissors or a cleaning tool to cut and remove any tangled hair or fibers.
- Slide the brush roll back into place and secure the release tab.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vacuum not turning on	Battery not charged; Battery not properly installed; Power button not pressed correctly.	Charge the battery fully; Ensure battery is securely clicked into place; Press the power button firmly.
Low suction power	Dust bin full; Filters clogged; Blockage in nozzle, wand, or hose; Brush roll tangled.	Empty the dust bin; Clean or replace filters; Check for and remove any blockages; Clean the brush roll.
Brush roll not spinning	Brush roll tangled with hair/debris; Brush roll not properly installed; Obstruction in brush head.	Clean the brush roll; Reinstall brush roll correctly; Remove any obstructions.
Battery not charging	Charger not properly connected; Power outlet not working; Damaged charger or battery.	Ensure charger is securely plugged into battery/dock and outlet; Test outlet with another device; Contact Kogan support if charger or battery is damaged.

## SPECIFICATIONS

---

Feature	Detail
Brand	Kogan
Model	MX10 Pro (KAVACSTM10P)
Suction Power	25kPa
Motor	250W Brushless Motor
Battery	2000mAh Detachable Li-ion
Noise Level	80 dB
Filter Type	HEPA (Washable)
Special Features	Lightweight, Cordless, LCD Touchscreen, Dust Detection, Cyclone Filter System
Item Weight	3.47 kg
Recommended Surface	Hard Floor, Carpet


## WARRANTY & SUPPORT






For warranty information, technical support, or any inquiries regarding your Kogan MX10 Pro Cordless Stick Vacuum Cleaner, please visit the official Kogan website or contact Kogan customer support directly. You can find more information and contact details on the Kogan store page:[Kogan Official Store](#)



© 2024 Kogan. All rights reserved.

### Related Documents - MX10 Pro

<div><div>User Guide</div><div></div><div>MX15 Absolute Cordless Stick Vacuum Cleaner</div></div>	<div><a href="#">Kogan MX15 Absolute Cordless Stick Vacuum Cleaner User Guide</a></div> <div>User guide for the Kogan MX15 Absolute Cordless Stick Vacuum Cleaner with Auto-Empty Dock (KAVACSTM15G). Provides detailed instructions on safety, assembly, operation, cleaning, maintenance, and troubleshooting.</div>
--	--

<div> <div>USER GUIDE</div> <div>kogan.com</div> </div> <div>  </div> <div> <b>C7 CORDLESS 22.2V STICK VACUUM CLEANER</b>  <small>KAVACSTC07B</small> </div>	<p><a href="#">Kogan C7 Cordless 22.2V Stick Vacuum Cleaner User Guide</a></p> <p>This user guide provides essential information for the Kogan C7 Cordless 22.2V Stick Vacuum Cleaner (Model: KAVACSTC07B), including safety warnings, assembly instructions, operation details, cleaning and maintenance procedures, troubleshooting tips, and technical specifications.</p>
<div> <div>USER GUIDE</div> <div>kogan.com</div> </div> <div>  </div> <div> <b>V10 PRO CORDLESS 25.2V STICK VACUUM CLEANER</b>  <small>KAVACSTV10A</small> </div>	<p><a href="#">Kogan V10 PRO Cordless 25.2V Stick Vacuum Cleaner User Guide</a></p> <p>User guide for the Kogan V10 PRO Cordless 25.2V Stick Vacuum Cleaner (Model: KAVACSTV10A), covering safety warnings, product overview, assembly instructions, operation, cleaning and care, troubleshooting, and specifications.</p>
<div> <div>USER GUIDE</div> <div>kogan.com</div> </div> <div>  </div> <div> <b>Z10 PRO CORDLESS STICK VACUUM CLEANER</b>  <small>KAVACSTV10A</small> </div>	<p><a href="#">Kogan Z10 Pro Cordless Stick Vacuum Cleaner User Guide   KAVACSTV10A</a></p> <p>Comprehensive user guide for the Kogan Z10 Pro Cordless Stick Vacuum Cleaner (KAVACSTV10A). Includes safety warnings, overview, assembly, operation, cleaning, troubleshooting, and specifications.</p>
<div> <div>User Guide</div> <div>kogan.com</div> </div> <div>  </div> <div> <b>MX15 Absolute Cordless Stick Vacuum Cleaner</b>  <small>KAVACSTM15F</small> </div>	<p><a href="#">Kogan MX15 Absolute Cordless Stick Vacuum Cleaner User Guide</a></p> <p>Comprehensive user guide for the Kogan MX15 Absolute Cordless Stick Vacuum Cleaner (KAVACSTM15F), covering safety warnings, overview, assembly, operation, cleaning, maintenance, and troubleshooting.</p>
<div> <div>User Guide</div> <div>kogan.com</div> </div> <div>  </div> <div> <b>MX15 Absolute Cordless Stick Vacuum Cleaner with Auto-Empty Dock</b>  <small>KAVACSTM15G</small> </div>	<p><a href="#">Kogan MX15 Absolute Cordless Stick Vacuum Cleaner User Guide</a></p> <p>Comprehensive user guide for the Kogan MX15 Absolute Cordless Stick Vacuum Cleaner with Auto-Empty Dock (KAVACSTM15G), covering safety, assembly, operation, cleaning, and troubleshooting.</p>



**MX10 PRO CORDLESS  
STICK VACUUM CLEANER**

KAVACSTM10P

[\[pdf\]](#) Instructions Troubleshooting Guide Specifications Guide


MX10 PRO CORDLESS STICK VACUUM CLEANER 2 mai 2023 — Read all instructions in this guide before using product Retain for future reference Do not skip substitute or modify any steps

KAVACSTM10P UG V1 1 assets kogan files usermanuals |||

**MX10 PRO CORDLESS STICK VACUUM CLEANER KAVACSTM10P Safety**

Warnings 3 Components 6 Overview 7 Assembly 9 Operation 11 Cleaning and Care 14 Troubleshooting 17 Specifications 18 2 SAFETY WARNINGS Read all instructions in this guide before using this product. Retain this guide fo...

lang:en score:38 filesize: 464.19 K page\_count: 20 document date: 2023-04-28

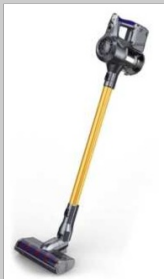

**T10 PRO CORDLESS 29.6V  
STICK VACUUM CLEANER**

KAVACSTT10B

[\[pdf\]](#)

Kogan MX10 Pro Cordless Stick Vacuum Cleaner KAVACSTM10P Manuals and Support Help Centre

KAVACSTT10B UG V2 assets kogan files usermanuals |||

**T10 PRO CORDLESS 29.6V STICK VACUUM CLEANER KAVACSTT10B SAFETY WARNINGS** When using any electrical appliance, basic safety precautions should always be observed. Fully charge the appliance before using it for the first time or if it hasn't been used in a long time. The operating temperature of...

lang:en score:23 filesize: 313.75 K page\_count: 12 document date: 2023-06-02



**MX10 PRO CORDLESS  
STICK VACUUM CLEANER**

KAVACSTM10P

[\[pdf\]](#) Instructions Troubleshooting Guide Specifications Guide

MX10 PRO CORDLESS STICK VACUUM CLEANER KAVACSTM10P UG V1 2 assets kogan files usermanuals |||

**MX10 PRO CORDLESS STICK VACUUM CLEANER KAVACSTM10P Safety**

Warnings 3 Components 6 Overview 7 Assembly 9 Operation 11 Cleaning and Care 14 Troubleshooting 17 Specifications 18 2 SAFETY WARNINGS Read all instructions in this guide before using this product. Retain this guide fo...

lang:en score:21 filesize: 486.07 K page\_count: 20 document date: 2023-05-08





MX10 PRO CORDLESS 22.2V MOP AND  
STICK VACUUM CLEANER  
KAVACSTM10X

[\[pdf\]](#)

Microsoft Word KAVACSTM10X\_UG.docx MX10 PRO CORDLESS 22.2V MOP AND STICK VACUUM CLEANER KAVACSTM10X\_UG\_V 2 assets kogan files usermanuals When using an electrical appliance basic safety precautions should always be followed including the following: Kogan is not liable for damage caused by by

### **MX10 PRO CORDLESS 22.2V MOP AND STICK VACUUM CLEANER**

KAVACSTM10X SAFETY WARNINGS When using an electrical appliance basic safety precautions should always be followed including the following: Kogan.com is not liable for damage caused by failure to comply with the use requirements, negligent use...

lang:en score:20 filesize: 709.63 K page\_count: 12 document date: 2020-09-28