

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [eufy](#) /
- › [eufy L60/L50 Series Replacement Dust Bags Instruction Manual](#)

eufy T29C6

eufy L60/L50 Series Replacement Dust Bags Instruction Manual

For use with eufy L60 and L50 Series Self-Empty Stations

PRODUCT OVERVIEW

These official eufy replacement dust bags are designed for the eufy L60 and L50 Series Self-Empty Stations. They ensure efficient dust collection and maintain optimal performance of your robotic vacuum cleaner.

Compatible With eufy L50/L60 Series Robot Vacuum



• L60/L50 Series



L50 with Self-Empty Station



L60 with Self-Empty Station

Image: A pack of six eufy replacement dust bags, individually sealed.

COMPATIBILITY

These replacement dust bags are compatible with the following eufy L60/L50 Series models:

- eufy L60 Series (T2275, T2277, T2278)
- eufy L50 Series

Ultra-Strong 5,000* Pa Suction

Tackle hair, crumbs, and dust with ease, thanks to the ultra-strong 5,000 Pa suction.

*5,000 Pa is the maximum suction level in Max mode.



Image: Depicts eufy L50 and L60 Series robot vacuums with their respective self-empty stations, highlighting compatibility.

FEATURES

- **Sealed Tightly:** Designed with a strong seal to prevent dust, dirt, and debris from escaping once collected.
- **Easy to Replace:** Simple installation and removal process.
- **Never Clogs:** Engineered to maintain airflow even when the bag is full.
- **Authentic eufy Accessory:** Ensures optimal performance and extends the lifespan of your vacuum cleaner.

INSTALLATION AND REPLACEMENT

Replacing the Dust Bag

1. Open the lid of the Self-Empty Station.
2. Carefully remove the full dust bag by pulling it upwards. The bag's design ensures it seals automatically upon removal to contain dust.

Disposable Dust Bag

If you find that the dust bag is full, please change dust bag as necessary.



Image: A hand is shown removing a full dust bag from the top compartment of the eufy self-empty station.

3. Dispose of the full dust bag responsibly.
4. Take a new replacement dust bag from the pack.
5. Align the cardboard collar of the new dust bag with the guiding slots inside the station.
6. Slide the new dust bag down into the station until it is securely in place.

Good Seal without Leakage

A 2.5L dust bag allows up to 60 days*
without emptying.



Image: A new dust bag is shown correctly installed within the eufy self-empty station, next to the robot vacuum.

7. Close the lid of the Self-Empty Station firmly.

It is recommended to change the dust bag after approximately 60 days of use. Actual replacement frequency may vary based on environmental conditions and usage patterns.

MAINTENANCE OF ROBOT VACUUM ACCESSORIES

Regular maintenance of your eufy L50/L60 Series robot vacuum accessories ensures optimal cleaning performance. The following video demonstrates how to clean and maintain various components, including the side brush, roller brush, and dust bin filter.

Your browser does not support the video tag.

Video: Demonstrates cleaning and maintenance procedures for eufy L50/L60 Series robot vacuum accessories, including side brush, roller brush, and dust bin filter.

Side Brush Maintenance

1. The side brush is fixed with screws. Use a screwdriver to remove it.
2. Clean any tangled hair or debris from the brush and its base.
3. Reattach the side brush and secure it with the screw.

Roller Brush Maintenance

1. Remove the brush guard and then the roller brush from the vacuum.
2. Unscrew the connectors on both ends of the roller brush.
3. Use the provided cleaning tool to remove tangled hair and debris from the roller brush.
4. Reattach the connectors and reinstall the roller brush and brush guard.

Dust Bin and Filter Maintenance

1. Press the "OPEN" button on the robot vacuum to release and remove the dust bin.
2. Open the dust bin and remove the filter. Note: Do not dispose of the filter bracket and primary filter.
3. Use the cleaning tool to clean the filter and the filter bracket.
4. Wash the dust bin, filter, primary filter, and filter bracket under running water.
5. Ensure all components are completely dry before reinstallation.
6. Install the primary filter, filter, and filter bracket back onto the dust bin.
7. Close the dust bin and reinsert it into the robot vacuum.

TROUBLESHOOTING

- **Dust bag not fitting correctly:** Ensure the cardboard collar is aligned with the guiding slots and pushed down completely.
- **Dust escaping from the station:** Verify the dust bag is properly sealed and installed. Check for any obstructions preventing the station lid from closing completely.
- **Reduced suction from the self-empty station:** The dust bag may be full and requires replacement. Also, ensure the robot vacuum's internal filters and brushes are clean as per the maintenance instructions.

SPECIFICATIONS

Attribute	Detail
Brand	eufy
Model Number	T29C6121
Material Type	Paper
Number of Items	6
Compatible Devices	eufy L60, eufy L50
Item Weight	5.6 ounces

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official eufy website or contact eufy support directly. Ensure you purchase genuine official accessories to extend the lifespan of your vacuum cleaner and maintain warranty validity.

If you experience issues such as damaged packaging, missing accessories, or signs of use upon receiving your product, please get in touch with eufy support immediately. They are committed to resolving your

concerns promptly.

© 2024 eufy. All rights reserved.