

[Manuals.plus](#) /

› [ALLIMITY](#) /

› ALLIMITY Replacement Remote Control User Manual for QILIVE TVs

ALLIMITY QYSY-22272W-QYSY

ALLIMITY Replacement Remote Control User Manual

Model: QYSY-22272W-QYSY

INTRODUCTION

This manual provides instructions for the ALLIMITY Replacement Remote Control, model QYSY-22272W-QYSY. This remote is designed to function as a direct replacement for your original QILIVE TV remote control, covering all essential functions without requiring any programming.

Compatible QILIVE TV Models:

- 22272W
- Q.55-461
- Q.1326
- Q.1698
- Q.1042
- Q.1127
- Q.1209
- Q.1324
- Q.1324 (V3)
- Q.1324WH
- Q.1648
- Q.24-162
- Q.32-162W
- Q.32-163W
- Q.32-164
- Q.32-164W
- Q.32-165W
- Q.55-461 (V3)
- Q32161



Figure 1: Front view of the ALLIMITY Replacement Remote Control.

SETUP

The ALLIMITY Replacement Remote Control requires no programming. Simply insert batteries, and it will be ready for immediate use with your compatible QILIVE TV.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA alkaline batteries (not included), ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





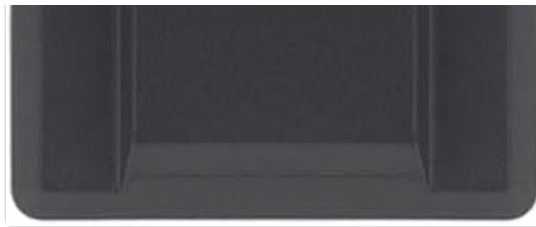


Figure 2: Back view of the remote control, highlighting the battery compartment.

OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready to operate your QILIVE TV. Point the remote control directly at the TV's infrared receiver.

Key Functions Overview

- **Power Button ():** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down (+V / -V):** Adjusts the TV's volume level.
- **Channel Up/Down (+P / -P):** Changes the TV channel sequentially.
- **Mute Button ():** Mutes or unmutes the TV's audio.
- **Menu Button:** Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right):** Navigate through menus and options.
- **OK Button:** Confirms selections in menus.
- **Back/Exit Button:** Returns to the previous screen or exits the current menu.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV model and current screen content (e.g., teletext, interactive services).

MAINTENANCE

Proper care and maintenance will ensure the longevity of your remote control.

Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote control becomes unresponsive or its range decreases significantly. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

TROUBLESHOOTING

If you experience issues with your remote control, refer to the following common solutions:

- **Remote not responding:**
 - Ensure the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Make sure there are no obstructions between the remote control and the TV's infrared receiver.
 - Confirm you are within the effective operating range (up to 10 meters).
- **Specific buttons not working:**
 - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be interfering with button presses.
 - If only certain buttons are affected, and cleaning does not help, the remote may be damaged.
- **No programming required:** This remote control is designed to work immediately with compatible QILIVE TVs upon battery insertion. If it does not work, double-check compatibility with your specific QILIVE TV model against the list provided in the Introduction section.

SPECIFICATIONS

Brand	ALLIMITY
Model Name	QYSY-22272W-QYSY
Color	Black
Connectivity Technology	Infrared
Special Feature	No programming required
Compatible Devices	QILIVE TVs (various models listed in Introduction)
Maximum Range	10 Meters
Number of Buttons	25
Controller Type	Remote Control

WARRANTY AND SUPPORT

Information regarding product warranty and customer support is not available in the provided product details. Please refer to the seller or manufacturer's website for specific warranty terms and support contact information.

© 2023 ALLIMITY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question