

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Mayer](#) /

> [Mayer Ceramic Cooker MMCC317 User Manual](#)

## Mayer MMCC317

# Mayer Ceramic Cooker User Manual

MODEL: MMCC317

Your comprehensive guide to operating and maintaining your Mayer Ceramic Cooker.

## 1. Important Safety Instructions

---

Please read all instructions carefully before using the appliance. Retain this manual for future reference.

- **Electrical Safety:** Ensure the voltage rating on the appliance matches your local power supply. Do not immerse the appliance, cord, or plug in water or other liquids. Always unplug the cooker when not in use and before cleaning.
- **Heat and Burn Hazard:** The cooking surface and surrounding areas become extremely hot during and after operation. Always use oven mitts or pot holders when handling hot cookware. Do not touch the hot surface directly. Allow the cooker to cool completely before cleaning or storing.
- **Child Safety:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **Proper Ventilation:** Ensure adequate ventilation around the cooker during operation. Do not block any ventilation openings.
- **Cookware Compatibility:** This ceramic cooker is suitable for any flat-bottomed cookware. Ensure the cookware base is clean and dry before placing it on the heating surface.
- **Overheating Protection:** The cooker is equipped with an overheating protection system that will automatically shut off the unit if it detects excessive temperatures.

## 2. Product Overview

---

The Mayer Ceramic Cooker MMCC317 is a versatile kitchen appliance designed for various cooking methods. It features a sleek sensor touch control panel and a durable ceramic heating surface.



**Figure 2.1:** Front view of the Mayer Ceramic Cooker MMCC317, showing the illuminated heating element and the sensor touch control panel with various function icons and LED display.



**Figure 2.2:** Top-down view of the Mayer Ceramic Cooker MMCC317, displaying the unlit ceramic heating surface and the full layout of the sensor touch control panel.



**Figure 2.3:** Side view of the Mayer Ceramic Cooker MMCC317, highlighting the cool-touch handles for easy portability and the ventilation grilles.



**Figure 2.4:** The Mayer Ceramic Cooker MMCC317 shown with the included BBQ tray accessory placed on its heating surface, ready for grilling.



**Figure 2.5:** The Mayer Ceramic Cooker MMCC317 displayed with the included wire rack accessory, suitable for various cooking applications.

### Key Features:

- Sensor touch control panel with LED display
- 8 cooking functions: Rice, Milk, Soup, Water, Fry, Stir-Fry, BBQ, and Hot Pot
- 8 power levels with preset temperature and power range (80°C-600°C and 200W-2000W)
- 4 hours timer
- Up to 24 hours preset timer
- Suitable for any cookware on heating base
- Child-lock safety feature
- Overheating protection
- Cool touch handles for easy carrying
- Non-slip feet
- Accessories: BBQ tray and wire rack

### 3. Setup

- 
1. **Unpacking:** Carefully remove the cooker and all accessories from the packaging. Retain packaging for future storage or transport.
  2. **Placement:** Place the cooker on a stable, flat, heat-resistant surface. Ensure there is sufficient space around the unit for proper ventilation (at least 10-15 cm from walls or other appliances). Do not place on or near a hot gas or electric burner, or in a heated oven.
  3. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the outlet voltage matches the appliance's requirements.
  4. **Initial Cleaning:** Before first use, wipe the ceramic surface with a soft, damp cloth. Ensure it is completely dry before plugging in.

## 4. Operating Instructions

---

### Control Panel Overview:

The cooker features a sensor touch control panel with an LED display. Gently touch the icons to activate functions.

- **Power Button (On/Off):** To turn the unit on or off.
- **Function Icons:** Rice, Milk, Soup, Water, Fry, Stir-Fry, BBQ, Hot Pot. Select desired cooking mode.
- **'+' / '-' Buttons:** Adjust power levels, temperature, or timer settings.
- **Timer Button:** Set cooking duration or preset timer.
- **Child Lock Button:** Activates/deactivates the child lock feature.
- **LED Display:** Shows power level, temperature, time, or error codes.

### Basic Operation:

1. Place suitable cookware with food on the center of the ceramic heating surface.
2. Press the Power button to turn on the cooker. The LED display will light up.
3. Select your desired cooking function by touching the corresponding icon (e.g., Rice, Soup, Fry).
4. Adjust the power level or temperature using the '+' and '-' buttons. The cooker offers 8 power levels, with a temperature range of 80°C-600°C and power range of 200W-2000W.
5. To set a cooking timer, press the Timer button, then use '+' and '-' to set the desired duration (up to 4 hours). The cooker will automatically turn off when the timer expires.
6. To use the preset timer (delay start), set the cooking function and then press the Timer button repeatedly until the preset indicator appears. Use '+' and '-' to set the delay time (up to 24 hours). The cooker will start cooking automatically after the preset time.
7. To activate the Child Lock, press and hold the Child Lock button for a few seconds. The control panel will be locked to prevent accidental changes. Repeat to deactivate.
8. After cooking, press the Power button to turn off the cooker. The heating surface will remain hot for some time; allow it to cool down completely before cleaning.

## 5. Maintenance and Cleaning

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Mayer Ceramic Cooker.

- **Always unplug the cooker and allow it to cool completely before cleaning.**
- **Ceramic Surface:** Wipe the ceramic surface with a soft, damp cloth and mild detergent. For stubborn stains, use a

non-abrasive ceramic hob cleaner. Do not use abrasive pads, scouring powders, or harsh chemicals, as these can scratch or damage the surface.

- **Body and Control Panel:** Wipe the exterior body and control panel with a soft, damp cloth. Ensure no water enters the internal components.
- **Accessories:** Wash the BBQ tray and wire rack with warm soapy water, rinse thoroughly, and dry completely before storing.
- **Storage:** Store the cooker in a cool, dry place when not in use. Ensure it is clean and dry before storing.

## 6. Troubleshooting

---

If you encounter issues with your Mayer Ceramic Cooker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooker does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the power cord is securely plugged into a working outlet. Check your household circuit breaker.
Cooker turns off unexpectedly.	Overheating protection activated; timer expired.	Allow the unit to cool down. Ensure proper ventilation. Check if the timer has reached its set limit.
Control panel is unresponsive.	Child lock is active; dirty control panel.	Deactivate the child lock by pressing and holding the child lock button. Clean the control panel surface.
Food not heating properly.	Incorrect power level; unsuitable cookware; cookware not centered.	Increase power level. Ensure cookware has a flat bottom and is centered on the heating zone.
Unusual smell during first use.	Normal burning off of manufacturing residues.	This is normal for first use. Ensure good ventilation. The smell should dissipate quickly.

If the problem persists after attempting these solutions, please contact customer support.

## 7. Specifications

---

Attribute	Detail
Brand	Mayer
Model	MMCC317
Type	Ceramic Cooker
Material	Ceramic
Color	Black
Voltage	2000 Volts
Wattage	2000W
Product Dimensions (D x W x H)	35D x 36.1W x 0.7H centimetres
Control Type	Touch
Special Features	Child-lock safety feature, Cool touch handles, Non-slip feet, Overheating protection



Attribute	Detail
Included Accessories	BBQ tray, Wire rack

## 8. Warranty and Support






Your Mayer Ceramic Cooker MMCC317 comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details.


For technical support, service, or inquiries regarding your product, please contact Mayer customer service through their official website or the contact information provided on your purchase receipt.

**Note:** Keep your proof of purchase (receipt or invoice) as it will be required for any warranty claims.

© 2023 Mayer. All rights reserved.
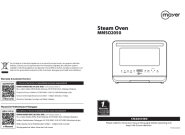
### Related Documents - MMCC317

	<p><a href="#">Mayer Digital Air Pot (3L) MMAP30D User Manual</a></p> <p>User manual for the Mayer Digital Air Pot, model MMAP30D, part of the Paradise Collection. Provides instructions and specifications for the 3L air pot.</p>
	<p><a href="#">Mayer Fabrics Spacer Mesh Upholstery Cleaning Guide (Pattern 301)</a></p> <p>Comprehensive cleaning instructions for Mayer Fabrics Spacer Mesh upholstery, pattern 301. Learn how to spot clean with water/solvent cleaners, including important pre-testing and ventilation advice.</p>
	<p><a href="#">Mayer MMSO2050 Steam Oven User Manual</a></p> <p>Comprehensive user manual for the Mayer MMSO2050 Steam Oven, covering safety instructions, operating features, cleaning, maintenance, and troubleshooting for optimal use.</p>
	<p><a href="#">Mayer MM076 Electric Oven - User Manual</a></p> <p>Instruction manual for the Mayer MM076 Electric Oven, The Professional Chef Series. Includes safety instructions, parts introduction, controls and operations, function guide, and cleaning and maintenance.</p>
	<p><a href="#">Mayer Fabrics Forte 298 Upholstery Cleaning Guide</a></p> <p>Detailed cleaning instructions for Mayer Fabrics Forte 298 upholstery, specifying Water/Solvent (WS) cleaning methods and precautions. Learn how to properly care for your Mayer Fabrics Forte upholstery to ensure longevity and appearance.</p>




**mayer**  
Food Steamer  
MMFS28

Please read this instruction manual thoroughly before operating and keep it for future reference

[Mayer MMFS28 Food Steamer: Instruction Manual and User Guide](#)

Comprehensive guide for the Mayer MMFS28 Food Steamer, covering safety instructions, assembly, operation, cleaning, maintenance, and warranty information.

Documents - Mayer – MMCC317

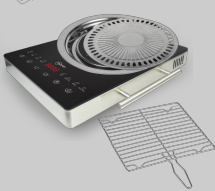

**mayer**

**Ceramic Cooker**  
MMCC317

- Sensor touch control panel with LED display
- 8 cooking functions: Rice, Milk, Soup, Water, Fry, Stir Fry, BBQ and Hot Pot
- 8 power levels with preset temperature and power range, between 80°C-600°C and 200W-2000W respectively
- 4 hours timer
- Up to 24 hours preset timer
- Suitable for any cookware on heating base
- Child lock safety feature
- Overheating protection
- Cool touch handles for easy to carry
- Non-slip feet
- Accessories: BBQ tray and wire rack

Model	MMCC317
Voltage	220-240V-50/60Hz
Wattage	2000W
Product Dimension	1450*450*1745.5 mm
Packaging Dimension	1450*450*1827.8 mm
Net Weight	3.05 kg
Gross Weight	4.2 kg

Warranty registration: [www.mmcc.com.my/register](http://www.mmcc.com.my/register)

[\[pdf\]](#) Specifications Warranty Accessories

MMCC317 Ceramic Cooker Specification Sheet Mayer Malaysia v 5089121810568614011

mayermalaysia cdn shop files |||

8 Power Level Overheating Protection Ceramic Cooker **MMCC317** Sensor touch control panel with LED display 8 cooking functions: Rice, Milk, Soup, Water, Fry, Stir Fry, BBQ and Hot Pot 8 power levels with preset temperature and power range, between 80C-600C and 200W-2000W respectively 4 hours timer...

lang:de score:30 filesize: 651.05 K page\_count: 1 document date: 2023-08-30