

Timex TW2T48700

Timex Women's Digital Quartz Watch Instruction Manual

Model: TW2T48700

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Timex Women's Digital Quartz Watch, Model TW2T48700. Please read this manual thoroughly to ensure proper use and care of your timepiece.

PRODUCT OVERVIEW

The Timex Women's Digital Quartz Watch features a digital display, a durable black plastic case, and a black plastic strap with a stainless steel buckle. It includes functions such as time display, date, stopwatch, timer, and alarm.



Front view of the Timex Women's Digital Quartz Watch, displaying the digital time, day, and date. The watch has a black case and strap, with "TIMEX" printed above the display and "WATER RESISTANT" below.

Key Features:

- Digital time display with day and date
- Stopwatch function
- Timer function
- Alarm function
- Water resistance: 3 bars (30 meters)
- Durable plastic case and strap

SETUP

Initial Power On and Time Setting:

1. **Identify Buttons:** Locate the "MODE" button (typically on the left side) and the "ST./STP." (Start/Stop) and "RESET" buttons (typically on the right side).
2. **Enter Time Setting Mode:** Press and hold the "MODE" button until the time display starts flashing, indicating it is in setting mode.
3. **Adjust Time:** Use the "ST./STP." button to increase the flashing value (hours, minutes). Press the "RESET" button to cycle through the values (hours, minutes, 12/24-hour format).
4. **Set Date:** After setting the time, press "MODE" again to move to date setting (month, day, year). Use "ST./STP." to adjust and "RESET" to cycle.
5. **Exit Setting Mode:** Press the "MODE" button once more to exit the setting mode and save your changes.



Side view of the watch, highlighting the two control buttons on the right side of the case, used for adjusting settings and operating functions.

OPERATING INSTRUCTIONS

Changing Modes:

Press the "MODE" button repeatedly to cycle through the different functions: Time Display → Stopwatch → Timer → Alarm.

Stopwatch Function:

1. **Activate:** Navigate to the Stopwatch mode using the "MODE" button.
2. **Start/Stop:** Press the "ST./STP." button to start the stopwatch. Press it again to pause.
3. **Reset:** While the stopwatch is paused, press the "RESET" button to clear the time to zero.

Timer Function:

1. **Activate:** Navigate to the Timer mode using the "MODE" button.
2. **Set Timer:** Press and hold "ST./STP." to enter timer setting mode. Use "ST./STP." to adjust values and "RESET" to move between hours, minutes, and seconds.

3. **Start/Stop:** Press "ST./STP." to start the countdown. Press again to pause.
4. **Reset:** While paused, press "RESET" to return to the set timer value.

Alarm Function:

1. **Activate:** Navigate to the Alarm mode using the "MODE" button.
2. **Set Alarm:** Press and hold "ST./STP." to enter alarm setting mode. Use "ST./STP." to adjust values and "RESET" to move between hours and minutes.
3. **Turn On/Off:** In Alarm mode, press "RESET" to toggle the alarm on or off. An alarm icon will appear/disappear on the display.
4. **Snooze:** When the alarm sounds, press any button to stop it.

MAINTENANCE

Cleaning:

Wipe the watch case and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish.

Water Resistance:

This watch is water resistant up to 3 bars (30 meters). This means it is suitable for everyday use and can withstand splashes or brief immersion in water. It is **not** suitable for swimming, showering, or diving.

Important: Do not operate the buttons while the watch is wet or submerged, as this can compromise the water resistance.

Battery Replacement:

The watch uses 1 Lithium Ion battery (CR1620). When the display dims or functions become erratic, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.



Rear view of the watch, displaying the stainless steel case back with engraved information including "TIMEX", "CR 1620 BATTERY", "WATER RESISTANT 30 M", and the model number "TW2T48700".

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead battery.	Replace the battery (CR1620).
Time is incorrect.	Time not set correctly or accidental button press.	Refer to the "Setup" section to reset the time.

Problem	Possible Cause	Solution
Buttons are unresponsive.	Watch may be wet, or internal issue.	Ensure watch is dry. If issue persists, contact customer support.
Water inside the display.	Water resistance compromised.	Stop using the watch immediately and seek professional repair.

SPECIFICATIONS

- Model Number:** TW2T48700
- Brand:** Timex
- Movement:** Digital Quartz
- Case Material:** Plastic
- Strap Material:** Plastic
- Case Height:** 9 mm
- Water Resistance:** 3 ATM (30 meters / 100 feet)
- Battery Type:** CR1620 Lithium Ion (1 required)
- Weight:** 15 g



WARRANTY AND SUPPORT





For warranty information and customer support, please refer to the official Timex website or contact your local Timex service center. Keep your purchase receipt as proof of purchase for warranty claims.

Official Timex Website: www.timex.com

© 2023 Timex. All rights reserved.

Related Documents - TW2T48700

	<p>Timex Atelier Marine M1a User Manual and International Warranty</p> <p>Comprehensive user manual and international warranty details for the Timex Atelier Marine M1a watch. Includes product specifications, instructions for setting the time and adjusting the bracelet, and warranty coverage information.</p>
	<p>Timex Analog Watch User Manual - Features, Settings, and Care</p> <p>Comprehensive user guide for Timex Analog watches, covering setup, features like INDIGLO® Night-Light, water resistance, alarms, perpetual calendar, and maintenance. Available in multiple languages.</p>

	<p>Timex Watch User Manual - Instructions and Guides</p> <p>Comprehensive user manual for Timex watches, providing detailed instructions, setup guides, and troubleshooting tips in multiple languages. Learn how to operate your Timex timepiece effectively.</p>
	<p>Timex Diamond Collection Watch User Manual and Instructions</p> <p>Official user manual and guide for the Timex Diamond Collection watch, providing instructions on operation, water resistance, time setting, bracelet adjustment, and warranty information.</p>
	<p>Timex Combination Watch User Manual and Instructions</p> <p>Comprehensive user manual for the Timex Combination Analog/Digital Watch, detailing features like INDIGLO night-light, various time modes, chronograph, countdown timer, second time zone, water resistance, and warranty information.</p>
	<p>Руководство по эксплуатации часов Timex</p> <p>Подробное руководство по эксплуатации часов Timex, охватывающее настройку времени, использование хронографа, водонепроницаемость, регулировку браслета и функции подсветки INDIGLO® для различных механизмов Timex.</p>

Documents - Timex – TW2T48700

no relevant documents