

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [PayLessHere](#) /
- › [PayLessHere Ergonomic Racing Desk Chair Gaming Chair User Manual](#)

PayLessHere B0CHMM43H7

PayLessHere Ergonomic Racing Desk Chair Gaming Chair User Manual

Model: B0CHMM43H7

INTRODUCTION

Thank you for choosing the PayLessHere Ergonomic Racing Desk Chair Gaming Chair. This manual provides comprehensive instructions for the assembly, operation, and maintenance of your new chair. Please read this manual carefully before assembly and use to ensure proper function and safety. Keep this manual for future reference.

SAFETY INFORMATION

- Always assemble the chair according to the provided instructions.
- Keep the chair secured when not in use to prevent unexpected movement.
- Do not exceed the maximum weight capacity to ensure stability and safety.
- Ensure all screws and bolts are tightened securely before use. Periodically check and re-tighten as necessary.
- Avoid standing on the chair or using it as a step stool.
- Keep children and pets away from the chair during assembly.

PACKAGE CONTENTS

Before beginning assembly, please ensure all parts are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Backrest
- Seat Cushion
- Armrests (2)
- Star Base
- Casters (5)
- Gas Lift Cylinder
- Gas Lift Cover

- Mechanism Plate
- Lumbar Pillow
- Headrest Pillow
- Hardware Pack (screws, washers, Allen wrench)

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly of the PayLessHere Gaming Chair is designed to be straightforward. Follow these steps carefully.

Step 1: Attach Casters to the Base

Insert each of the five casters into the holes at the end of each leg of the star base. Push firmly until they click into place.



Figure 1: The five-star foot design with smooth casters, illustrating the 360-degree movement capability. This image shows the base of the chair with casters installed.

Step 2: Install Gas Lift

Place the gas lift cylinder into the center hole of the assembled star base. Cover the gas lift with the telescopic plastic cover.

Step 3: Attach Mechanism Plate to Seat Cushion

Align the mechanism plate with the pre-drilled holes on the underside of the seat cushion. Ensure the front of the mechanism faces the front of the seat. Secure with screws using the provided Allen wrench.

Step 4: Attach Armrests to Seat Cushion

Attach the armrests to the sides of the seat cushion using the designated screws. Ensure they are oriented correctly (left and right).

Step 5: Attach Backrest to Seat Cushion and Armrests

Align the backrest with the mounting plates on the seat cushion and armrests. Secure with screws. Ensure all connections are firm.

Step 6: Connect Seat Assembly to Gas Lift

Carefully place the assembled seat and backrest onto the gas lift cylinder. Press down firmly to secure the connection.

Step 7: Attach Lumbar and Headrest Pillows

Attach the lumbar support pillow and headrest pillow to the backrest using their integrated straps.

Esports Chair

DETAIL DISPLAY

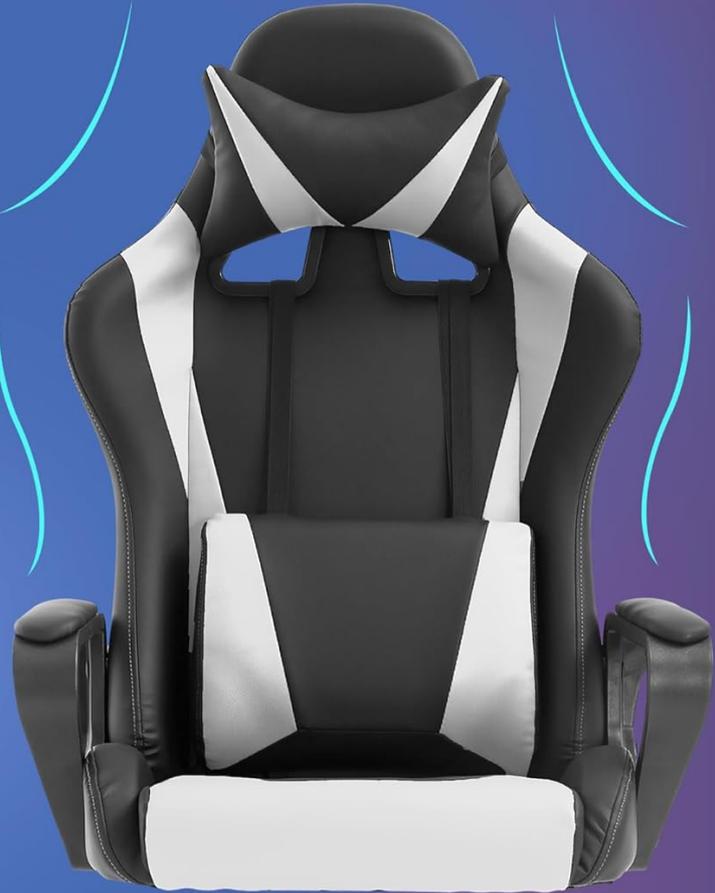


Figure 2: Detail display of the chair, highlighting the head restraint design and the adjustable lumbar support pillow.

Assembly Video Guide

For a visual guide on the assembly process, please watch the video below:



Video 1: Detailed assembly and feature overview of the PayLessHere Gaming Chair. This video provides step-by-step visual instructions for putting the chair together.

OPERATING INSTRUCTIONS

Your PayLessHere Gaming Chair offers several adjustable features to customize your seating experience.

Height Adjustment

To adjust the chair's height, locate the lever on the right side beneath the seat. While seated, pull the lever up to lower the chair. To raise the chair, stand up and pull the lever up. Release the lever at your desired height.



Figure 3: The adjustable height mechanism of the chair, showing the lever used to raise or lower the seat by approximately 3.9 inches.

Rocking Mode and Tilt Lock

The chair features a rocking function for added comfort. Pull out the control handle (the same lever used for height adjustment) to enable the rocking motion. Push the handle in to lock the chair in an upright position and prevent tilting.

You can also adjust the tension of the rocking mechanism using the round knob located beneath the seat. Turn clockwise to increase tension (making it harder to rock) and counter-clockwise to decrease tension (making it easier to rock).



Suitable for various scenarios

- Playing games
- Direct seeding
- Work
- Leisure



Figure 4: Illustration of the chair's rocking mode, detailing various recline angles (90° for work, 105° for reading, 120° for watching movies) and the tension control knob.

Lumbar and Headrest Support

The chair includes an adjustable lumbar pillow and a headrest pillow. Position these to best support your lower back and neck for optimal ergonomic comfort.

Operating Features Video Guide

For a visual demonstration of the chair's adjustable features, please refer to the video below:



Video 2: Demonstration of the various adjustable features and ergonomic design elements of the PayLessHere Gaming Chair.

MAINTENANCE

- **Cleaning:** The chair's PU leather upholstery is oil and water-resistant. For general cleaning, wipe with a soft, damp cloth. For tougher stains, use a mild soap solution and wipe dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Hardware Check:** Periodically check all screws and bolts to ensure they are tight. Re-tighten as needed to maintain stability and prevent squeaking.
- **Caster Care:** Keep casters free of hair and debris to ensure smooth rolling.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause the PU leather to fade or crack.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Chair is unstable or wobbly.	Loose screws or improper assembly.	Check all screws and bolts, especially those connecting the backrest, seat, and armrests. Re-tighten as necessary. Ensure the gas lift is fully seated in the base.
Chair makes squeaking noises.	Loose connections or friction between parts.	Tighten all screws. Apply a small amount of silicone lubricant to moving parts or connection points if tightening does not resolve the issue.
Chair height adjustment not working.	Gas lift malfunction or lever issue.	Ensure the lever is fully engaged. If the issue persists, the gas lift cylinder may need replacement. Contact customer support.
Chair does not rock or is stuck.	Tilt lock engaged or tension too high.	Pull the control handle out to enable rocking. Adjust the tension knob counter-clockwise to reduce tension.
Casters not rolling smoothly.	Debris caught in casters.	Turn the chair over and remove any hair, dust, or debris from the caster wheels.

SPECIFICATIONS



Figure 5: Product dimensions and parameters, including overall height, width, and depth measurements.

Feature	Detail
Brand	PayLessHere
Model	B0CHMM43H7

Feature	Detail
Color	White
Product Dimensions	27"D x 24"W x 51"H
Material	Faux Leather, Foam Fill
Back Style	Solid Back
Special Features	Cushion Availability, Ergonomic, Rolling, Adjustable Height, Rocking Function, Lumbar Support, Headrest
Recommended Uses	Gaming, Office
Arm Style	With arms
Seat Height	22.8 Inches (adjustable range)
Item Weight	30 pounds
UPC	195030091538

WARRANTY AND SUPPORT

PayLessHere stands by the quality of its products. Your gaming chair comes with a customer satisfaction guarantee. If you encounter any issues with your chair, or if you have questions regarding assembly, operation, or parts, please do not hesitate to contact our support team.

For assistance, please visit the PayLessHere official website or contact the seller directly through your purchase platform. Please have your model number (B0CHMM43H7) and purchase date ready when contacting support.