

[manuals.plus](#) /

› [MASINGO](#) /

› [MASINGO Cantando C2 Portable Karaoke Machine User Manual](#)

**MASINGO C2**

# **MASINGO Cantando C2 Portable Karaoke Machine User Manual**

Model: C2 | Brand: MASINGO

## **1. INTRODUCTION**

---

Thank you for choosing the MASINGO Cantando C2 Portable Karaoke Machine. This manual provides essential information for setting up, operating, and maintaining your device to ensure optimal performance and enjoyment. Please read this manual thoroughly before use and retain it for future reference.



*Image 1.1: The MASINGO Cantando C2 Portable Karaoke Machine, showcasing its compact design, integrated LED ring light, and two wireless microphones.*

## **2. WHAT'S IN THE Box**

---

Verify that all components are present upon unboxing:

- 1x MASINGO Cantando C2 Karaoke Machine
- 2x Wireless Microphones
- 1x 3.5 mm AUX Cable
- 1x 3.5 mm AUX-RCA TV Cable
- 1x USB-C to USB-A Charging Cable
- 1x User Manual

# EVERYTHING YOU NEED FOR KARAOKE



*Image 2.1: All items included in the MASINGO Cantando C2 package, laid out for inspection.*

## 3. SETUP

### 3.1 Initial Charging

Before first use, fully charge the karaoke machine using the provided USB-C to USB-A charging cable. The charging port is located on the rear panel. A full charge typically takes 3-4 hours.

### 3.2 Microphone Battery Installation

Each wireless microphone requires 2x AA batteries (not included). Unscrew the bottom part of each microphone to insert the batteries, ensuring correct polarity. The microphones will automatically connect to the karaoke machine when powered on.

### 3.3 Attaching Microphone Holders

Insert the two plastic microphone holders into the designated slots on the sides of the karaoke machine for convenient storage.

## 4. OPERATING INSTRUCTIONS

## 4.1 Power On/Off

Locate the power switch on the rear panel of the karaoke machine. Slide it to the 'ON' position to power on the device. To power off, slide the switch to the 'OFF' position.

## 4.2 Bluetooth Connectivity

Upon powering on, the machine will automatically enter Bluetooth pairing mode. Activate Bluetooth on your smartphone or other device and select 'MASINGO C2' from the list of available devices. A voice prompt will confirm successful pairing.

## 4.3 Microphone Usage

Press and hold the power button on each wireless microphone to turn it on. The microphones will automatically connect to the karaoke machine. Use the '+' and '-' buttons on the microphone to adjust its individual volume. To turn off a microphone, press and hold its power button until the indicator light turns off.



*Image 4.1: Close-up of the two wireless microphones, highlighting their power and volume adjustment buttons.*

## 4.4 LED Light Show

The Cantando C2 features a mesmerizing ring light LED. Press the 'LED' button on the control panel to

cycle through five pre-installed light patterns or turn them off.

## 4.5 Versatile Connectivity Options

The karaoke machine supports multiple input sources:

- **Bluetooth:** Connect wirelessly to your smartphone or tablet.
- **AUX:** Use the provided 3.5mm AUX cable to connect external audio devices.
- **USB:** Insert a USB drive with music files into the USB port.
- **MicroSD (TF Card):** Insert a MicroSD card with music files into the TF card slot.
- **FM Radio:** Switch to FM Radio mode to tune into local radio stations.
- **TV Connection:** Use the included Aux to RCA cable to connect to your TV for audio output.



Image 4.2: The top control panel of the Cantando C2, illustrating the various ports (USB, AUX, TF Card) and control buttons for mode selection, volume, and LED lights.

## 4.6 Voice Changer and Echo Effects

The karaoke machine offers voice distortion and echo effects. Experiment with the 'Voice' and 'ECH' (Echo) buttons on the control panel to modify your vocal output. The 'EQ' button allows for equalization adjustments.

#### 4.7 Portable Design

The Cantando C2 is designed for portability with a removable handle and lightweight build. This allows for easy transport to various locations.



*Image 4.3: The portable design of the Cantando C2, featuring a convenient carrying handle.*

#### 4.8 Dynamic Sound Output

The Cantando C2 delivers 25W of powerful sound through a 4-inch front speaker and dual 2-inch side speakers, ensuring clear audio for all performances.

# PITCH-PERFECT 3D PLAYBACK



## SPEAKER SIZE

4" speaker plus  
two 2" speakers



## SPEAKER POWER

25 watts for pure  
audio bliss

*Image 4.4: An exploded view illustrating the three-speaker system (one 4-inch, two 2-inch) for dynamic sound output.*

### 4.9 Connecting to TV

The Cantando C2 can be connected to a TV via Bluetooth or the provided Aux to RCA cable. This allows for displaying lyrics on the TV screen while using the karaoke machine for enhanced audio.

**EASILY CONNECT TO TV**  
With Bluetooth or RCA TV cable

*Image 4.5: The Cantando C2 connected to a TV, demonstrating how lyrics can be displayed for a full karaoke experience.*

#### 4.10 Product Overview Video

Your browser does not support the video tag.

*Video 4.6: An official product video from MASINGO, introducing the Cantando C2 karaoke machine and its key features.*

### 5. MAINTENANCE

- Keep the device clean by wiping it with a soft, dry cloth.
- Avoid exposing the device to water or excessive moisture.
- Store the karaoke machine and microphones in a cool, dry place when not in use.
- Remove batteries from microphones if storing for extended periods to prevent leakage.

### 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Low battery; Power switch off	Charge the machine; Turn on the power switch
Microphone not working	Low microphone batteries; Microphone not paired	Replace AA batteries; Power on microphone and ensure it pairs automatically
No sound from speaker	Volume too low; Incorrect input mode; Device not connected	Increase volume; Select correct input mode (Bluetooth, AUX, USB, TF); Ensure device is properly connected
Bluetooth pairing failed	Device too far; Bluetooth not enabled on source device	Move device closer; Enable Bluetooth on source device and re-scan

## 7. SPECIFICATIONS

---

- **Item Weight:** 4.74 pounds
- **Product Dimensions:** 10.24 x 6.93 x 10.63 inches
- **Item Model Number:** C2
- **Batteries:** 1 Lithium Ion battery required (included for machine), 2 AA batteries per microphone (not included)
- **Color:** Ebony
- **Compatible Devices:** Smartphone
- **Connector Type:** 3.5 mm Jack
- **Speaker Count:** 1 (main) + 2 (side)
- **Battery Type:** Lithium Ion
- **Media Format:** WAV
- **Power Source:** Battery Powered
- **Voltage:** 3.7 Volts (DC)
- **Wattage:** 15 watts (total 25W dynamic output)

## 8. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the contact details provided in the packaging or visit the official MASINGO website. Keep your purchase receipt as proof of purchase.