



Manuals.plus /

› Philips /

› Philips Series 3000X Electric Shaver User Manual

Philips X3053/00

Philips Series 3000X Electric Shaver

Model: X3053/00

Brand: Philips

INTRODUCTION

The Philips Series 3000X electric shaver is designed to provide a comfortable and precise shave, even on sensitive skin. Featuring SkinProtect technology, self-sharpening PowerCut blades, and Flex 4D heads, it adapts to your facial contours for a smooth result. This manual provides essential information on how to set up, operate, and maintain your shaver for optimal performance.



Image: The Philips Series 3000X electric shaver, shown with its retail packaging, a protective cap, and the included USB charging cable.

SAFETY INFORMATION

Please read all safety warnings and instructions before using the appliance to avoid injury or damage.

- **Voltage Check:** Always check the rated voltage on the shaver and ensure it matches the voltage of your power supply before charging.
- **Water Safety:** This appliance is suitable for use in the bath or shower. For safety reasons, it can only be used cordless.

- **Children:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- **Damage:** Do not use the appliance if it is damaged in any way.
- **Adapter:** Only use the original USB charging cable provided. An adapter is not included.

WHAT'S IN THE BOX

The Philips Series 3000X Electric Shaver package includes the following components:

- 1x Philips Series 3000X Electric Shaver for men
- 1x Protective Cap
- 1x USB-A Charging Cable (power adapter not included)



Image: The Philips Series 3000X shaver and its accompanying USB charging cable.

PRODUCT FEATURES

- **SkinProtect Technology:** Offers a comfortable and precise shave, even on sensitive skin.
- **PowerCut Blades:** Equipped with 27 self-sharpening blades that cut up to 55,000 times per minute, ensuring a consistently perfect and uniform shave.

- **Flex 4D Heads:** Oscillating heads flex in four directions to maintain uniform contact with the skin, protecting against cuts and scratches.
- **Wet & Dry Shave:** Designed for both dry shaving and refreshing wet shaves with foam, gel, or even in the shower.
- **Pop-up Trimmer:** An integrated pop-up trimmer is perfect for shaping sideburns and moustaches.
- **Ergonomic Grip:** Ensures the shaver never slips from your hand, even when wet.
- **Long-lasting Battery:** Lithium-ion battery provides 60 minutes of cordless shaving after a 1-hour charge. A 5-minute quick charge offers enough power for one shave.
- **Durable Design:** Self-sharpening steel blades are designed to last up to 2 years.



Image: A detailed view of the Philips PowerCut blades, designed for a precise and comfortable shave.



Le testine Flex 4D seguono
le linee del viso per una
rasatura precisa

Image: The Flex 4D shaver heads are shown adapting to the contours of a man's face for a precise shave.



Image: A composite image highlighting key features: PowerCut blades for precise cutting, the option for wet or dry shaving, and Flex 4D heads that follow facial lines for a precise shave.

SETUP

Charging the Shaver

Before first use, or when the battery is low, charge your shaver. The shaver is designed for cordless use only.

1. Connect the USB-A charging cable to the shaver.
2. Plug the other end of the USB-A cable into a compatible USB power adapter (not included).
3. A full charge takes approximately 1 hour and provides up to 60 minutes of shaving time.
4. For a quick shave, a 5-minute charge provides enough power for one shave.

OPERATING INSTRUCTIONS

Shaving

The Philips Series 3000X shaver can be used for both dry and wet shaving.

- **Dry Shaving:** For a quick and convenient shave, simply turn on the shaver and move it in circular motions over your face.
- **Wet Shaving:** For a refreshing shave, apply shaving foam or gel to your skin. You can also use the shaver in the shower. Move the shaver in circular motions over your face.



Image: A man using the Philips electric shaver to shave his chin, demonstrating its ergonomic design.

Rasatura su pelle asciutta o bagnata, con schiuma, gel o anche sotto la doccia



Image: A man performing a wet shave with the Philips electric shaver, using shaving foam for added comfort.

Using the Pop-up Trimmer

The integrated pop-up trimmer is ideal for precise grooming of sideburns and moustaches.

1. Locate the pop-up trimmer on the back of the shaver.
2. Slide the trimmer upwards to activate it.
3. Use the trimmer to define lines and edges as desired.
4. Slide the trimmer back down when finished.



Rifinitore a scomparsa perfetto per basette e baffi

Image: A man utilizing the integrated pop-up trimmer on the Philips shaver to precisely trim his sideburns.

MAINTENANCE

Cleaning the Shaver

Regular cleaning ensures optimal performance and hygiene.

1. After each use, turn off the shaver.
2. Press the one-touch release button to open the shaver head.
3. Rinse the shaver head thoroughly under running tap water.
4. Shake off excess water and allow the shaver head to air dry before closing.

Replacing the Shaving Head

For continued optimal performance, it is recommended to replace the shaving head unit every two years. Refer to the Philips website or authorized retailers for replacement heads compatible with your model (SH30).

TROUBLESHOOTING

If you encounter any issues with your Philips Series 3000X shaver, please refer to the following common solutions:

- **Shaver not turning on:** Ensure the shaver is fully charged. If the battery is completely depleted, it may take a few minutes of charging before the shaver responds.
- **Poor shaving performance:** Clean the shaving heads thoroughly. If performance does not improve, the shaving heads may need to be replaced.
- **Charging issues:** Verify that the USB cable is properly connected to both the shaver and the power adapter. Ensure the power adapter is functioning correctly.

For more detailed troubleshooting or persistent issues, please contact Philips customer support.

SPECIFICATIONS

Feature	Specification
Model Number	X3053/00
Product Name	X3053/00 SHAVER W. P-CAP
Brand	Philips
Manufacturer	Philips Consumer Lifestyle B.V.
Country of Origin	Indonesia
Package Dimensions	19.9 x 10.1 x 8.5 cm
Weight	380 grams
Recommended Uses	Moustache, Beard, Face
Special Features	Wet & Dry, SkinProtect Technology, PowerCut Blade System, Ergonomic, USB Rechargeable
Power Source	Battery Powered
Battery Life	60 minutes (after 1-hour charge)
Color	Off-white (Sky Blue)
Blade Material	Stainless Steel
Head Type	Rotary

WARRANTY AND SUPPORT

For warranty information, product registration, and customer support, please visit the official Philips website or contact their customer service department.

You can find more information and support resources on the Philips Brand Store on Amazon.