

Vimorg Vi23090803

Vimorg 66Ft 200 LED Christmas Tree Ribbon Lights

Model: Vi23090803 | Brand: Vimorg

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Vimorg 66Ft 200 LED Christmas Tree Ribbon Lights. Please read this manual thoroughly before operation and retain it for future reference.

2. SAFETY INFORMATION

- For indoor use only.
- Do not expose the battery box to water or extreme moisture.
- Ensure batteries are inserted with correct polarity.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the product is not used for an extended period.
- Keep out of reach of children to prevent choking hazards from small parts.
- Do not attempt to modify or repair the product. Contact customer support for assistance.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Vimorg 66Ft 200 LED Christmas Tree Ribbon Light (Silver/White)
- 1 x Battery Box (requires 3 AA batteries, not included)
- 1 x USB Power Cable
- 1 x Remote Control
- 1 x User Manual



An overview of the Vimorg 66Ft 200 LED Christmas Tree Ribbon Lights, showing the ribbon lights wrapped around a Christmas tree, the remote control, and the battery box with USB connection.

Your browser does not support the video tag.

An official product video from Vimorg showcasing the 'Ultra Long Christmas Ribbon Lights' in various decorative settings, highlighting their length and visual appeal.

4. SETUP

4.1. Battery Installation

1. Locate the battery box.
2. Open the battery compartment cover.
3. Insert 3 AA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

4.2. USB Power Connection

- Alternatively, connect the provided USB cable to the battery box.
- Plug the other end of the USB cable into a compatible USB power source (e.g., USB adapter, power bank, computer USB port).
- The USB lead length is approximately 16.5 feet.

4.3. Placement

- Unroll the ribbon lights carefully to avoid tangling.
- The copper wire within the ribbon is bendable, allowing you to shape it as desired for decoration.
- Suitable for decorating Christmas trees between 6ft and 8ft in height.



A close-up of the battery box for the ribbon lights, illustrating both the battery compartment (for 3 AA batteries) and the USB power input. The image also highlights the 8 lighting modes and the auto-timer function.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

- **Using the Battery Box:** Press the button on the battery box to cycle through lighting modes and turn the lights on/off.
- **Using the Remote Control:** Press the "ON" button to turn on the lights and the "OFF" button to turn them off.

5.2. Lighting Modes

The lights feature 8 different lighting modes. Cycle through them using the button on the battery box or the "MODE" button on the remote control:

1. Combination
2. In Waves

3. Sequential
4. Slo-Glo
5. Chasing/Flash
6. Slow Fade
7. Twinkle/Flash
8. Steady On

5.3. Timer Function

- The lights have a built-in auto timer function: 6 hours ON, 18 hours OFF.
- To activate the timer, turn on the lights at the desired time using the button on the battery box. The timer will automatically activate and repeat daily.
- The timer function is not affected by using the remote control for initial activation.
- To deactivate the timer, simply turn off the lights manually.

5.4. Brightness Adjustment (Remote Control Only)

- Use the "DIM -" button on the remote control to decrease brightness.
- Use the "DIM +" button on the remote control to increase brightness.

6. MAINTENANCE

- **Cleaning:** Gently wipe the ribbon and lights with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, carefully roll the ribbon lights back onto their spool or store them in a way that prevents tangling. Store in a cool, dry place away from direct sunlight.
- **Battery Replacement:** Replace all 3 AA batteries simultaneously when they run low to ensure optimal performance.



A detailed view of the 2.5-inch wide ribbon lights, showcasing the integrated LED bulbs and the decorative pattern on the sheer organza fabric.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not turn on.	Batteries are dead or incorrectly inserted. USB cable is not connected or power source is off.	Replace batteries, ensuring correct polarity. Check USB connection and power source.
Remote control is not working.	Remote battery is dead. Obstruction between remote and receiver.	Replace the remote control battery. Ensure a clear line of sight to the battery box.
Lights turn off unexpectedly.	Timer function is active. Batteries are low.	Check if the timer is set (6 hours ON, 18 hours OFF). Replace batteries.

8. SPECIFICATIONS

Feature	Detail
Model Number	Vi23090803

Feature	Detail
Ribbon Lights Length	66 Ft (20 meters)
Ribbon Width	2.5 inches
LED Quantity	200 LEDs
Light Color	White
Power Source	3 x AA Batteries (not included) or USB Powered
USB Lead Length	16.5 Ft
Lighting Modes	8 Different Modes
Timer Function	6 hours ON / 18 hours OFF
Control Method	Button Control on Battery Box, Remote Control
Material	Copper Wire, Organza Sheer Ribbon
Indoor/Outdoor Usage	Indoor

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Vimorg customer service through your original purchase platform or refer to the contact details provided with your product packaging.

Vimorg 66Ft 200 LED Christmas Tree Ribbon Lights User Manual | Model: Vi23090803

Documents - Vimorg – Vi23090803

no relevant documents