

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Akai](#) /
- › [Akai AKTV434JWB 43-inch 4K Smart LED TV User Manual](#)

Akai AKTV434JWB

Akai AKTV434JWB 43-inch 4K Smart LED TV User Manual

Model: AKTV434JWB

1. INTRODUCTION

Thank you for purchasing the Akai AKTV434JWB 43-inch 4K Smart LED TV. This manual provides essential information for the safe and efficient operation of your television. Please read these instructions thoroughly before using the product and retain them for future reference.



Image: The Akai AKTV434JWB 43-inch 4K Smart LED TV, featuring a sleek black frame and two bottom stands, displaying a vibrant image of a lion with a colorful, abstract background.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not expose the TV to rain or moisture.
- Do not block ventilation openings.
- Ensure the power cord is not walked on or pinched.
- Disconnect the power plug during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Please check that the following items are included in your product package:

- Akai AKTV434JWB 43-inch 4K Smart LED TV
- Remote Control
- Power Cable
- Tabletop Stands (2)
- Screws for Stand Assembly
- User Manual

4. SETUP

4.1 Stand Assembly

1. Carefully place the TV face-down on a soft, clean surface to prevent screen damage.
2. Align each tabletop stand with the corresponding slots on the bottom of the TV.
3. Secure the stands using the provided screws. Ensure they are firmly attached.

4.2 Wall Mounting (Optional)

This TV supports wall mounting. A VESA-compatible wall mount kit (not included) is required. Please consult a professional for wall mount installation to ensure safety and proper setup.

4.3 Connecting Devices

Your Akai AKTV434JWB TV offers various connectivity options:

- **HDMI Ports:** Connect external devices such as Blu-ray players, game consoles, or set-top boxes.
- **USB Ports (2):** Connect USB storage devices for media playback.
- **Optical Audio Output:** Connect to an external sound system for enhanced audio.
- **Ethernet (LAN) Port:** Connect to your home network via a wired connection.
- **Wi-Fi:** Connect to your home network wirelessly for Smart TV features.
- **Bluetooth:** Connect compatible wireless accessories.

4.4 Power Connection

After all connections are made, plug the power cable into the TV's power input and then into a wall outlet.

5. OPERATING INSTRUCTIONS

5.1 First Time Setup

Upon first power-on, the TV will guide you through the initial setup process, which includes:

- Language selection.
- Network connection (Wi-Fi or Ethernet).
- Channel scanning for DVB-T2 HEVC Main10 digital terrestrial television.
- Time zone and other basic settings.

5.2 Basic TV Functions

- **Power On/Off:** Press the power button on the remote control or TV.
- **Volume Control:** Use the VOL +/- buttons on the remote.
- **Channel Selection:** Use the CH +/- buttons or number buttons.
- **Input Source:** Press the SOURCE button to select between HDMI, TV, USB, etc.
- **Menu Navigation:** Use the arrow keys and OK button to navigate on-screen menus.

5.3 Smart TV Features

With an internet connection, your Smart TV provides access to:

- Pre-installed applications.
- Web browsing.
- Streaming services.
- Software updates.

6. MAINTENANCE

6.1 Cleaning the Screen

Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, use a screen cleaner specifically designed for LED displays, applied to the cloth, not directly to the screen.

6.2 Cleaning the Cabinet

Wipe the TV cabinet with a soft, dry cloth. Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common solutions:

Problem	Possible Solution
No power	Check if the power cable is securely connected to the TV and the wall outlet. Try a different outlet.
No picture, but sound is present	Ensure the correct input source is selected. Check cable connections to external devices.
No signal	Verify antenna/cable connection. Perform a channel scan. Check external device power and connections.
Remote control not working	Replace batteries. Ensure no obstructions between the remote and the TV's IR sensor.
Cannot connect to Wi-Fi	Check your router and modem. Re-enter the Wi-Fi password. Try restarting the TV and router.

If the problem persists, please contact Akai customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Akai
Model	AKTV434JWB
Screen Size	43 Inches
Display Technology	LED
Resolution	4K (3840 x 2160)
Refresh Rate	60 Hz
Hardware Interface	Bluetooth, HDMI, USB
Connectivity Technology	Ethernet, Wi-Fi
Total USB Ports	2
Audio Input	Optical
Aspect Ratio	16:9
Response Time	9.5 Seconds
Additional Features	Flat Screen
Installation Type	Wall Mount, Tabletop Support
Model Year	2022

9. WARRANTY AND SUPPORT

Your Akai AKTV434JWB TV comes with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included in your package or visit the official Akai website. For technical support, troubleshooting assistance, or service inquiries, please contact Akai customer support through their official channels.