

AKAI AP880K

Akai AP880K Cordless Handheld Vacuum Cleaner User Manual

INTRODUCTION

Welcome to the user manual for your Akai AP880K Cordless Handheld Vacuum Cleaner. This document provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read this manual thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance.

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.

- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Store your appliance indoors in a cool, dry area.

PRODUCT OVERVIEW

The Akai AP880K is a powerful 150-watt bagless handheld vacuum cleaner featuring cyclonic technology for efficient cleaning. Its lightweight and convenient design, combined with a detachable battery and washable HEPA filter, make it ideal for various cleaning tasks.



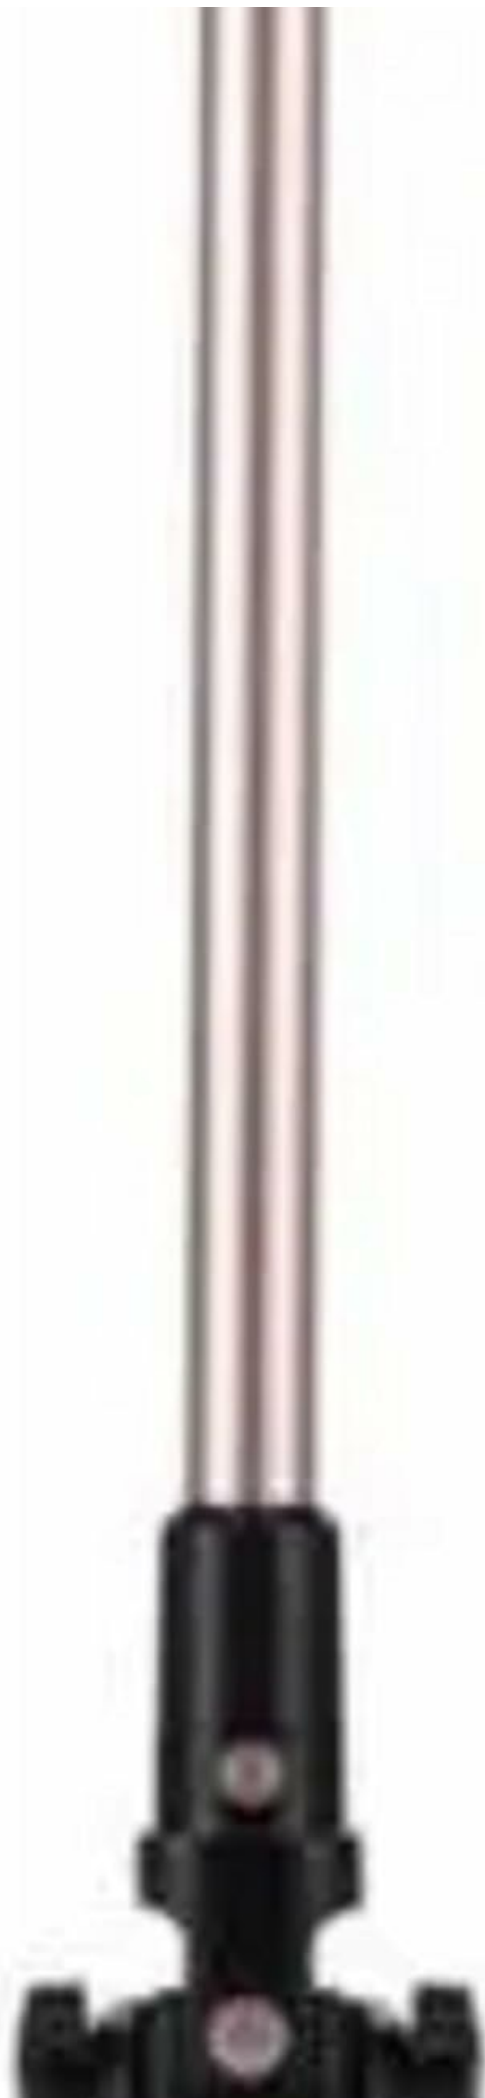




Image: The Akai AP880K Cordless Handheld Vacuum Cleaner, fully assembled.

Components Included:

- 1 x Power Supply
- 1 x Motorized Floor Brush
- 1 x Metal Extension Tube
- 1 x Crevice Nozzle
- 1 x Brush Nozzle
- 1 x Wall Mount

SETUP AND ASSEMBLY

Unpacking

Carefully remove all components from the packaging. Inspect for any damage. Keep packaging materials for storage or disposal according to local regulations.

Charging the Battery

The Akai AP880K is equipped with a 22.2V / 2200 mAh detachable battery. Before first use, fully charge the battery.

1. Connect the power supply to the charging port on the battery or the wall mount.
2. Plug the power supply into a suitable wall outlet.
3. The charging indicator light will illuminate. A full charge takes approximately 4-5 hours.
4. Once fully charged, disconnect the power supply.

Assembling the Vacuum Cleaner

1. Attach the metal extension tube to the main body of the vacuum cleaner until it clicks into place.
2. Connect the desired cleaning attachment (e.g., motorized floor brush, crevice nozzle) to the end of the extension tube or directly to the main body for handheld use.
3. Ensure all connections are secure before operation.

OPERATING INSTRUCTIONS

Powering On/Off

To turn the vacuum cleaner on, press the power button located on the handle. Press it again to turn the appliance

off.

Using Attachments

- **Motorized Floor Brush:** Ideal for cleaning carpets and hard floors.
- **Crevice Nozzle:** Use for narrow gaps, corners, and hard-to-reach areas.
- **Brush Nozzle:** Suitable for delicate surfaces, upholstery, and dusting.

Suction Power

The Akai AP880K provides a maximum suction power of 12 Kpa. The battery life ranges from 22 to 36 minutes, depending on the power setting and attachment used.

MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dust Tank

The dust tank has a capacity of 0.8 liters and should be emptied regularly, especially when the 'MAX' line is reached.

1. Ensure the vacuum cleaner is turned off and disconnected from any power source.
2. Locate the dust tank release button, usually near the handle.
3. Press the button to detach the dust tank from the main body.
4. Hold the dust tank over a waste bin and open the bottom flap to empty the contents.
5. Close the flap and reattach the dust tank to the vacuum cleaner until it clicks securely.

Cleaning the HEPA Filter

The washable HEPA filter is crucial for maintaining suction power and air quality. Clean it regularly.

1. With the dust tank removed, carefully pull out the HEPA filter.
2. Tap the filter gently over a waste bin to remove loose dust.
3. Rinse the filter under cold running water until the water runs clear. Do not use detergents.
4. Allow the filter to air dry completely for at least 24 hours before reinserting it. Do not use a hairdryer or other heating devices.
5. Ensure the filter is completely dry before placing it back into the dust tank and reassembling the vacuum cleaner.

TROUBLESHOOTING

If you encounter issues with your Akai AP880K, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery is not charged.	Charge the battery fully (4-5 hours).
Low suction power.	Dust tank is full.	Empty the dust tank.

Problem	Possible Cause	Solution
Low suction power.	HEPA filter is clogged.	Clean the HEPA filter as per maintenance instructions. Ensure it is completely dry before reinserting.
Low suction power.	Attachments or tube are blocked.	Check and clear any blockages in the extension tube or attachments.
Battery life is shorter than expected.	Battery not fully charged or aging.	Ensure battery is fully charged. If battery is old, consider replacement if available.
Unusual noise during operation.	Foreign object in brush or air path.	Turn off and unplug. Inspect brush roll and air paths for obstructions and remove them.

TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	AKAI
Model Number	AP880K
Power/Wattage	150 watts
Battery	22.2V / 2200 mAh
Dust Tank Capacity	0.8 liters
Suction Power (Max)	12 Kpa
Battery Duration (Min/Max)	22-36 minutes
Charging Time	4-5 hours
Noise Level	74 Decibels
Filter Type	Washable HEPA filter
Product Dimensions	230 x 206 x 1120 mm
Energy Source	Battery
Form Factor	Stick

WARRANTY AND CUSTOMER SUPPORT

For warranty information, technical support, or service inquiries regarding your Akai AP880K Cordless Handheld Vacuum Cleaner, please refer to the product packaging or contact Akai customer service directly. Keep your proof of purchase for warranty claims.