

## GREEN PARTY 16x20 FT

# GREEN PARTY 16x20FT Heavy Duty Party Tent

Model: 16x20 FT (3+3 Side Walls)

Brand: GREEN PARTY

## 1. INTRODUCTION AND OVERVIEW

Thank you for choosing the GREEN PARTY 16x20FT Heavy Duty Party Tent. This canopy is designed to provide reliable shelter for various outdoor events, offering protection from sun, wind, and rain. Its robust construction and versatile design make it suitable for weddings, parties, gatherings, and temporary shelters. This manual provides essential information for safe setup, operation, and maintenance of your tent.

## 2. SAFETY INSTRUCTIONS

- **Weather Conditions:** In severe weather conditions such as snowstorms, heavy rain, or strong winds, it is crucial to take down the PE cover to prevent it from being damaged or blown away by the elements.
- **Snow Accumulation:** Please keep the roof clear of snow. Heavy snow on the roof can damage the structure, making it unsafe.
- **Assembly Assistance:** While assembly is designed to be straightforward, it is recommended to have at least one assistant for safe and efficient setup, especially when raising the frame and attaching the canopy.
- **Secure Anchoring:** Always ensure the tent is properly anchored to the ground using all provided pegs, ropes, and spiral pegs to prevent movement or collapse due to wind.
- **Fire Safety:** Keep all heat sources and open flames away from the tent fabric. The material is not fireproof.
- **Site Selection:** Choose a flat, level area for setup, clear of overhead obstructions and sharp objects that could damage the canopy.


## 3. PACKAGE CONTENTS

Your GREEN PARTY 16x20FT Party Tent package includes the following components, organized in 3 premium extra-durable white carry bags for storage:

- Heavy-duty galvanized steel frame poles (1.5-inch diameter, 1.2-mm thick)
- Connectors for frame assembly
- Triple-layer 180g HDPE fabric roof cover (100% waterproof, 99% UV protection)

- Removable sidewalls with windows (3 per long side)
- Removable end walls (2 total)
- Short and long bungee balls for securing fabric
- Guy lines and hooks
- Pegs (short and spiral) for ground anchoring
- 3 Carry Bags for storage

## Product Dimensions

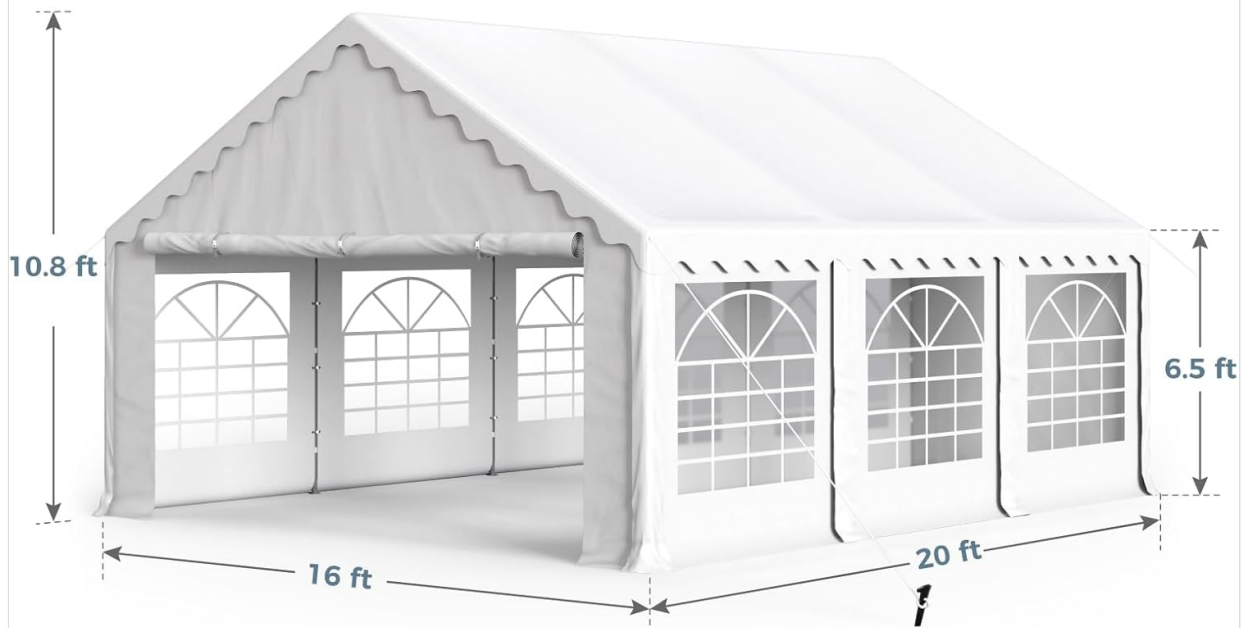

**3**

Number of Boxes



**169**

Box weight:  
45+70.5+53.8lb  
=169lbs



**55**

Number of People Stand:  
55

Figure 1: Product Dimensions and Key Information

## 4. SETUP INSTRUCTIONS

Follow these step-by-step instructions for assembling your GREEN PARTY Party Tent. An assistant is recommended for easier setup.

### 4.1. Frame Assembly

1. **Unpack and Organize:** Unpack all components from the carry bags and organize them by type and label (e.g., numbered poles, connectors).
2. **Lay Out Base Frame:** On a flat, level surface, lay out the base frame poles according to the diagram in the instruction manual. Ensure all pieces are correctly oriented.

3. **Erect Roof Frame:** Connect the roof frame poles and connectors. The design ensures specific pieces fit together, preventing incorrect assembly.
4. **Attach Roof Canopy:** Carefully drape the main roof canopy over the assembled roof frame. Secure it using the provided bungee balls and hooks, ensuring a snug fit.
5. **Install Legs:** Attach the leg poles to one side of the roof frame. Each leg has a footing piece and holes at the bottom for height adjustment and anchoring.
6. **Raise Tent:** With assistance, carefully lift the tent frame and attach the remaining leg poles to the other side. Ensure all legs are securely connected and the frame is stable.

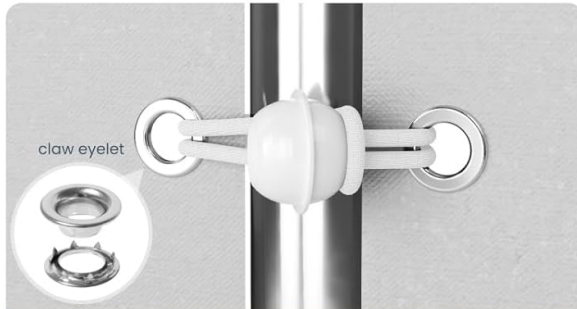 


Figure 2: Tent Assembly Stages

## 4.2. Attaching Sidewalls and End Walls

1. **Sidewalls:** Attach the removable sidewalls to the tent frame using the bungee balls. The bungee balls loop through the eyelets on the fabric and around the frame poles, keeping the fabric taut and secure.
2. **End Walls:** Attach the end walls to the tent frame. These panels typically require climbing a ladder for secure attachment at the top.
3. **Anchoring:** Use the provided pegs and guy lines to firmly anchor all legs and the base of the tent to the ground. For extra stability, especially in windy conditions, utilize the spiral pegs at the four corners.

 
## Highlight Detail



High Quality Elastic Ball Straps



Solid Base Plate

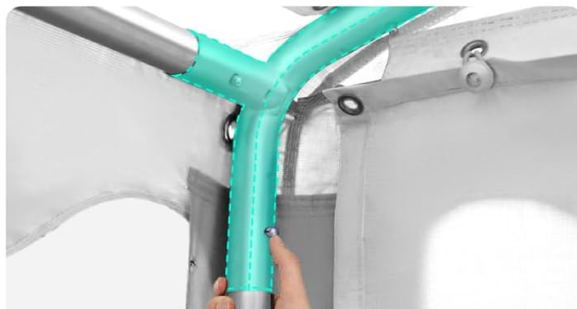

Solid Connecting



180g PE Fabric

Figure 3: Highlighted Construction Details

### 4.3. Official Setup Videos

For a visual guide on the assembly process, please refer to the official seller videos below:

Your browser does not support the video tag.

Video 1: GREEN PARTY 16x20FT Party Tent Heavy Duty (3+3 Side Walls) - A detailed assembly guide for the tent.

Your browser does not support the video tag.

Video 2: GREEN PARTY Outdoor Heavy Duty Canopy Tent Wedding Partytent - Overview of the tent's features and assembly.

Your browser does not support the video tag.

Video 3: GREEN PARTY Outdoor Heavy Duty Canopy Tent with Sidewall - Demonstrates the attachment of sidewalls.

## 5. OPERATING INSTRUCTIONS

The GREEN PARTY Party Tent offers flexible configurations to suit your event needs:

- **Removable Sidewalls:** The sidewalls can be easily attached or removed individually. This allows you to customize the tent's openness, providing shade and wind protection where needed, or allowing for an open-air feel.
- **Roll-Up End Walls:** The end walls feature zippers, allowing them to be rolled up to create entrances or exits. This provides convenient access and can be adjusted based on foot traffic or weather.
- **Combine Tents:** For a larger space, you can purchase an extra accessory (B0CYPM6SY9) to combine two

tents into one.

## 6. MAINTENANCE

---

- **Cleaning:** Clean the canopy fabric and frame with mild soap and water. Avoid harsh chemicals or abrasive cleaners that could damage the material or coating.
- **Drying:** Ensure all fabric components are completely dry before storing to prevent mold and mildew.
- **Storage:** Store the tent components in the provided carry bags in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect all poles, connectors, and fabric for any signs of wear or damage. Replace any damaged parts promptly to maintain the tent's integrity and safety.

## 7. TROUBLESHOOTING

---

- **Tent Instability:** Ensure all frame connections are secure and all pegs and guy lines are properly anchored. Check for loose bungee cords on the fabric.
- **Water Leakage:** Verify that the roof canopy is taut and evenly distributed over the frame. Ensure all bungee cords are properly secured to prevent sagging where water could pool.
- **Difficulty Assembling Poles:** Check that you are using the correct numbered poles and connectors as per the instruction manual. Ensure no debris is obstructing the connection points.

## 8. SPECIFICATIONS

---

<b>Brand</b>	GREEN PARTY
<b>Model</b>	16x20 FT (3+3 Side Walls)
<b>Material</b>	Heavy Duty Alloy Steel, Metal, Polyethylene (HDPE)
<b>Frame Material</b>	Alloy Steel
<b>Water Resistance Level</b>	Waterproof
<b>Ultraviolet Light Protection</b>	YES (Blocks 99% of harmful UV rays)
<b>Item Weight</b>	169 Pounds
<b>Product Dimensions</b>	240 x 240 x 240 inches (16x20 FT)
<b>Floor Area</b>	320 Square Feet
<b>Occupancy</b>	10-15 people
<b>Number of Guylines</b>	4

## 9. WARRANTY AND SUPPORT

---

Your GREEN PARTY Party Tent comes with comprehensive support:

- **Warranty:** Enjoy 1 year of protection for canopy frames and covers.
- **Lifetime Replacement:** Benefit from a lifetime replacement for connectors, pegs, ropes, elastic ropes, and other small accessories.
- **Customer Service:** If you encounter any issues with the party tent, our dedicated customer service team is

available to provide professional technical support and the best possible solution.

- **Return Policy:** A 30-day return policy is available for this product.