

**BMG20675**

# BPL Mixer Grinder User Manual

Model: BMG20675

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using the appliance. Retain this manual for future reference.

- Always unplug the mixer grinder from the power outlet before cleaning, assembling, or disassembling parts.
- Do not immerse the motor unit in water or any other liquid. Clean only with a damp cloth.
- Keep hands and utensils out of the jar while blending to prevent injury. Use a scraper only when the motor is not running.
- Ensure the jar is properly locked onto the motor unit before operating. This model features a safety lock mechanism.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner.
- This appliance is for household use only. Do not use outdoors.
- Do not overload the jars. Follow recommended capacities for ingredients.
- Keep out of reach of children.

## 2. PRODUCT OVERVIEW

---

The BPL BMG20675 Mixer Grinder is designed for efficient wet and dry grinding. It comes with a powerful 750W copper motor and three stainless steel jars.



Figure 2.1: BPL Mixer Grinder main unit with one jar attached.

### Components:

- **Motor Unit:** The main body housing the 750W copper motor and control knob.
- **Stainless Steel Jars (3):**
  - Large Jar (for wet grinding, e.g., idli/dosa batter)
  - Medium Jar (for dry grinding, e.g., spices, chutneys)
  - Small Jar (for small quantities, e.g., coffee beans, ginger-garlic paste)
- **Lids:** Transparent lids for each jar with secure locking mechanisms.
- **Blades:** Durable stainless steel blades for efficient grinding.
- **Knob Control:** For selecting speed settings and pulse function.



Figure 2.2: The BPL Mixer Grinder with its three accompanying stainless steel jars.

### 3. SETUP AND FIRST USE

---

1. **Unpack:** Carefully remove all components from the packaging. Check for any damage.
2. **Clean:** Before first use, wash the jars and lids thoroughly with mild soap and water. Rinse and dry completely. Wipe the motor unit with a damp cloth.
3. **Placement:** Place the motor unit on a clean, dry, stable, and flat surface, away from the edge of the counter. Ensure there is adequate ventilation around the unit.
4. **Attach Jar:** Select the appropriate jar for your task. Place the ingredients inside the jar. Secure the lid firmly onto the jar.
5. **Lock Jar:** Place the jar onto the motor unit. Rotate the jar clockwise until it locks securely into place. This model features a safety lock, preventing operation if the jar is not correctly seated.
6. **Connect Power:** Plug the power cord into a suitable electrical outlet.

### 4. OPERATING INSTRUCTIONS

---

Always ensure the jar is securely locked and the lid is properly closed before starting the mixer grinder.

## Using the Knob Control:

- **Pulse Function:** Turn the knob to the "Pulse" position and release. This provides short bursts of power, ideal for coarse grinding or quick mixing.
- **Speed Settings:** Turn the knob clockwise to select desired speed (1, 2, or 3). Start with a lower speed and gradually increase if needed.
- **Continuous Operation:** For continuous grinding, turn the knob to the desired speed setting. Do not operate continuously for more than 3-5 minutes to prevent overheating. Allow a cooling period between cycles.

## Grinding Tips:

- **Wet Grinding:** For batters and purees, add sufficient water to ensure smooth blending. Do not overfill.
- **Dry Grinding:** Ensure ingredients are completely dry. For hard spices, grind in small batches.
- **Overload Protection:** The mixer grinder is equipped with an overload protector. If the motor stops due to overloading, turn off the appliance, unplug it, remove some ingredients, and wait for a few minutes before restarting.

## 5. MAINTENANCE AND CLEANING

---

Regular cleaning ensures the longevity and hygiene of your mixer grinder.

1. **Unplug:** Always unplug the appliance from the power outlet before cleaning.
2. **Clean Jars and Lids:**
  - Remove any remaining food particles.
  - Wash jars and lids with warm soapy water. Use a brush for thorough cleaning of blades.
  - Rinse thoroughly under running water.
  - Dry all parts completely before storing to prevent rust.
3. **Clean Motor Unit:**
  - Wipe the exterior of the motor unit with a soft, damp cloth.
  - Do not use abrasive cleaners or immerse the motor unit in water.
  - Ensure no liquid enters the motor housing.
4. **Storage:** Store the mixer grinder and its accessories in a dry, safe place, away from direct sunlight and moisture.

## 6. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in. Jar not properly locked. Overload protector tripped.	Ensure power cord is securely plugged into a live outlet. Rotate jar clockwise until it clicks into the safety lock. Unplug, remove some ingredients, wait 2-3 minutes, then restart.

Problem	Possible Cause	Solution
Motor stops during operation.	Overloading. Continuous operation for too long.	Reduce quantity of ingredients. Allow motor to cool down for 10-15 minutes before resuming.
Leakage from jar.	Lid not properly closed. Jar overfilled. Gasket/seal worn out or missing.	Ensure lid is firmly pressed down and locked. Do not fill beyond the maximum fill line. Check and replace gasket/seal if necessary.

## 7. SPECIFICATIONS

---

- **Model:** BMG20675
- **Wattage:** 750 Watts
- **Motor:** 100% Copper Motor
- **Jars:** 3 Stainless Steel Jars
- **Blade Material:** Stainless Steel
- **Controls Type:** Knob Control
- **Special Feature:** Safety Lock
- **Colour:** BLACK
- **Product Dimensions:** 22D x 39W x 36H Centimeters
- **Manufacturer:** BPL

## 8. WARRANTY AND SUPPORT

---

For any product-related queries, service requests, or warranty information, please contact BPL customer support.

Please refer to your purchase receipt or warranty card for specific warranty terms and conditions applicable to your product.

Keep your model number (BMG20675) and purchase details handy when contacting support.