

[Manuals.plus](#) /

› [PocBuds](#) /

› PocBuds T60 Wireless Earbuds User Manual

PocBuds T60

PocBuds T60 Wireless Earbuds User Manual

Model: T60

INTRODUCTION

Thank you for choosing PocBuds T60 Wireless Earbuds. This manual provides detailed instructions on how to set up, operate, maintain, and troubleshoot your new earbuds. Please read this manual carefully before use to ensure optimal performance and longevity of your device.



Image: PocBuds T60 Wireless Earbuds in their charging case, showcasing the digital battery display.

WHAT'S IN THE BOX

Your PocBuds T60 package includes the following items:

- Wireless Earbuds (Left and Right)
- Wireless Charging Case
- Type-C Cable

- S/M/L Eartips (one set pre-installed, two additional sizes)
- User Manual (this document)

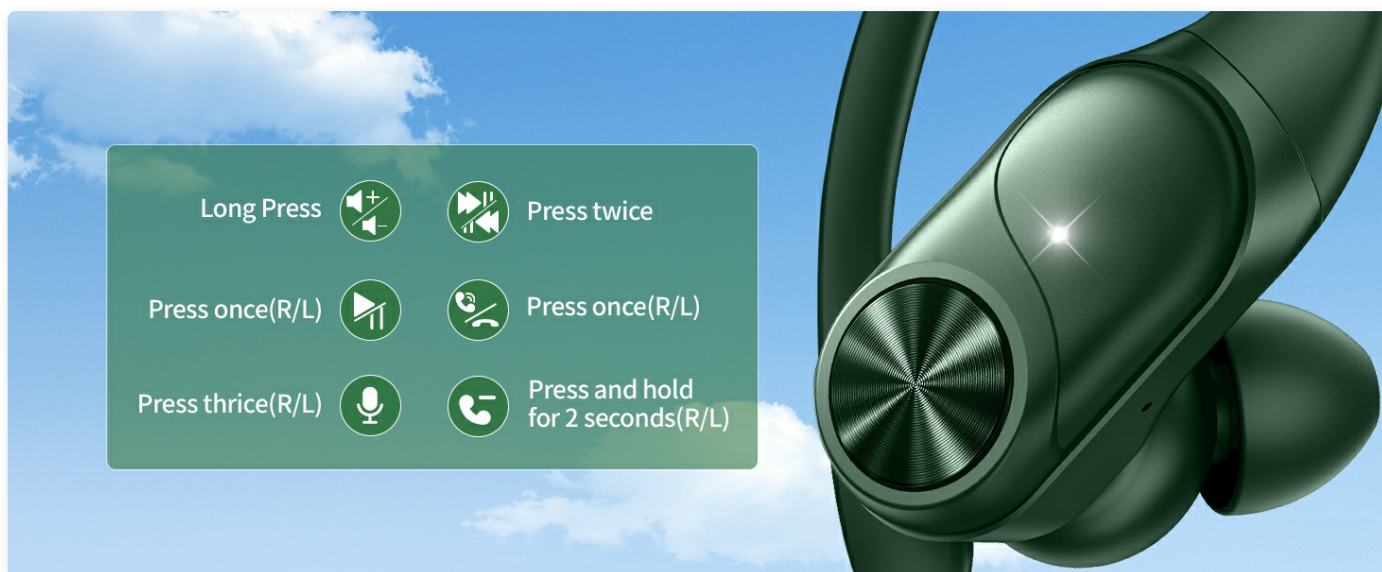 


Image: A visual representation of all items included in the PocBuds T60 package.

SETUP GUIDE

1. Initial Charge

Before first use, fully charge the earbuds and the charging case. Connect the Type-C cable to the charging case and a power source. The digital display on the case will show the charging progress. The earbuds will also charge when placed inside the case.

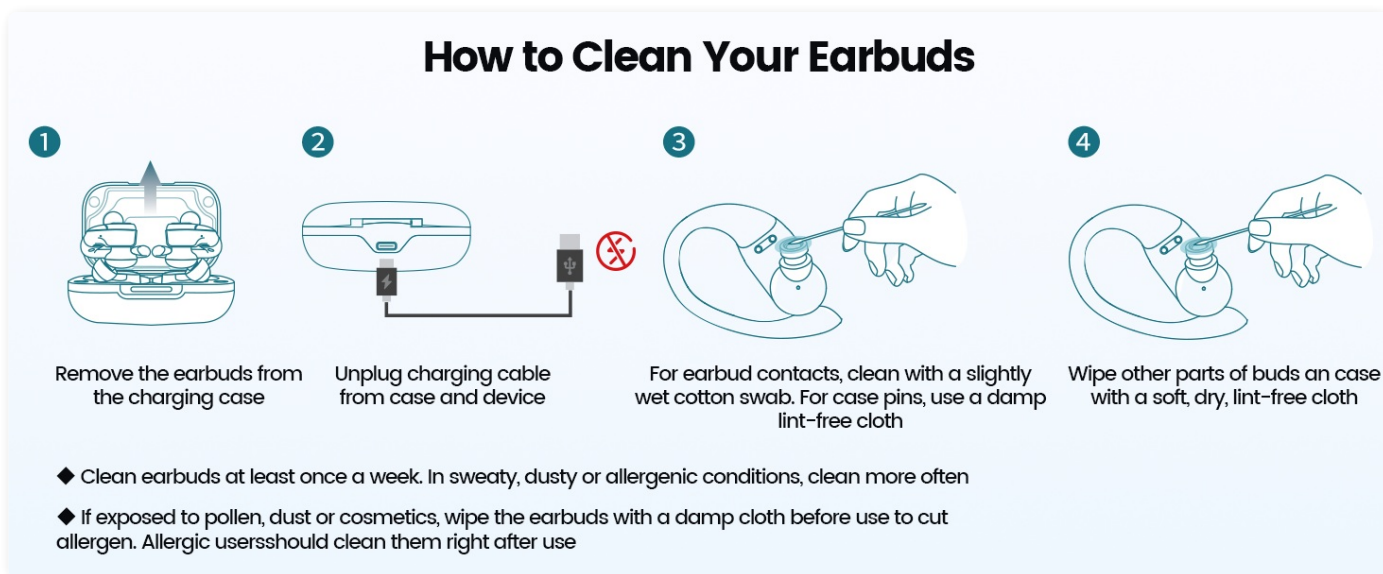 


Image: The charging case being charged wirelessly and via a Type-C cable, illustrating its dual charging capabilities.

2. Pairing with Your Device

1. Ensure your device's Bluetooth is turned on.
2. Open the charging case and take out both earbuds. They will automatically power on and enter pairing mode.
3. On your device, search for Bluetooth devices and select "T60" from the list.
4. Once connected, you will hear a confirmation prompt, and the earbuds will be ready for use.

One-Step Pairing

Pick the earbuds out of the case, auto connect with your device



Image: A smartphone screen displaying the Bluetooth pairing process, showing "T60" as a connected device.

3. Achieving a Perfect Fit

For optimal sound quality and comfort, select the correct eartip size and ensure a secure fit.

1. Put the ear hook over the back of your ear.
2. Insert the ear tip snugly into your ear canal.

3. Adjust for comfort and stability.

Important Notes:

- **Force Control:** Do not insert earbuds forcefully to protect ear canal. Adjust ear hooks gently to avoid over-pressing ear skin.
- **Stop if Uncomfortable:** If there's any discomfort like ear canal pain, skin itch or foreign body feeling, stop using earbuds, check, and seek medical help if needed.
- **Adaptation for Sports:** Ensure ear hook positions are right and stable before exercise to prevent shaking/friction harm like abrasions.



Image: Step-by-step guide on how to correctly wear the PocBuds T60 earbuds for a secure and comfortable fit.

Your browser does not support the video tag.

Video: A short demonstration on how to achieve a perfect fit with the PocBuds T60 earbuds.

OPERATING INSTRUCTIONS

Touch Controls

The PocBuds T60 earbuds feature intuitive touch controls for easy management of music and calls.

Action	Function
Long Press (L/R)	Volume Up/Down (specific earbud)
Press once (L/R)	Play/Pause music, Answer/End call
Press twice (L/R)	Next Track (Right earbud), Previous Track (Left earbud)
Press thrice (L/R)	Activate Voice Assistant
Press and hold for 2 seconds (L/R)	Reject Call



Image: A visual guide to the touch controls on the PocBuds T60 earbuds for various functions.

Battery Life and Digital Display

The charging case features a dual LED digital display to show the remaining power of the charging case and the charging status of each earbud (L/R). Each earbud provides up to 8 hours of listening time, and the charging case extends total playtime to 80 hours.

80hrs Long Battery Life



Image: The PocBuds T60 charging case with its digital display highlighting the 80-hour total playtime.

Dual LED Battery Display

Remaining Power of
Charging Case



Charging Status
of Earbud



Image: A close-up of the dual LED digital display on the PocBuds T60 charging case, indicating battery levels for both the case and individual earbuds.

MAINTENANCE AND CARE

Cleaning Your Earbuds

Regular cleaning helps maintain sound quality and hygiene.

1. Remove the earbuds from the charging case.
2. Unplug the charging cable from the case and device.
3. For earbud contacts, clean with a slightly wet cotton swab. For case pins, use a damp lint-free cloth.
4. Wipe other parts of the earbuds and case with a soft, dry, lint-free cloth.

Recommendations:

- Clean earbuds at least once a week. In sweaty, dusty, or allergenic conditions, clean more often.
- If exposed to pollen, dust or cosmetics, wipe the earbuds with a damp cloth before use to cut allergen. Allergic users should clean them right after use.

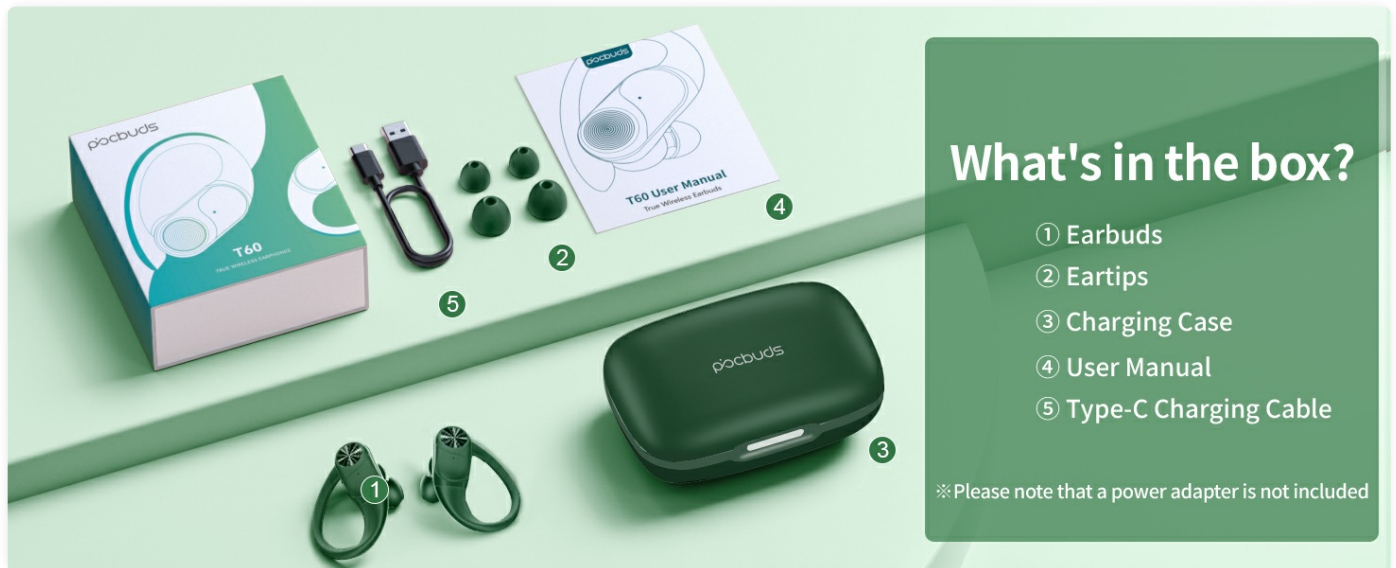 


Image: A step-by-step visual guide on how to properly clean your PocBuds T60 earbuds and charging case.

Your browser does not support the video tag.

Video: A demonstration video on the proper method to clean the PocBuds T60 earbuds.

Water Resistance (IPX7)

The PocBuds T60 earbuds are IPX7 sweat-resistant, meaning they can withstand sweat and light rain. This protection helps safeguard internal components from damage during workouts or outdoor activities.

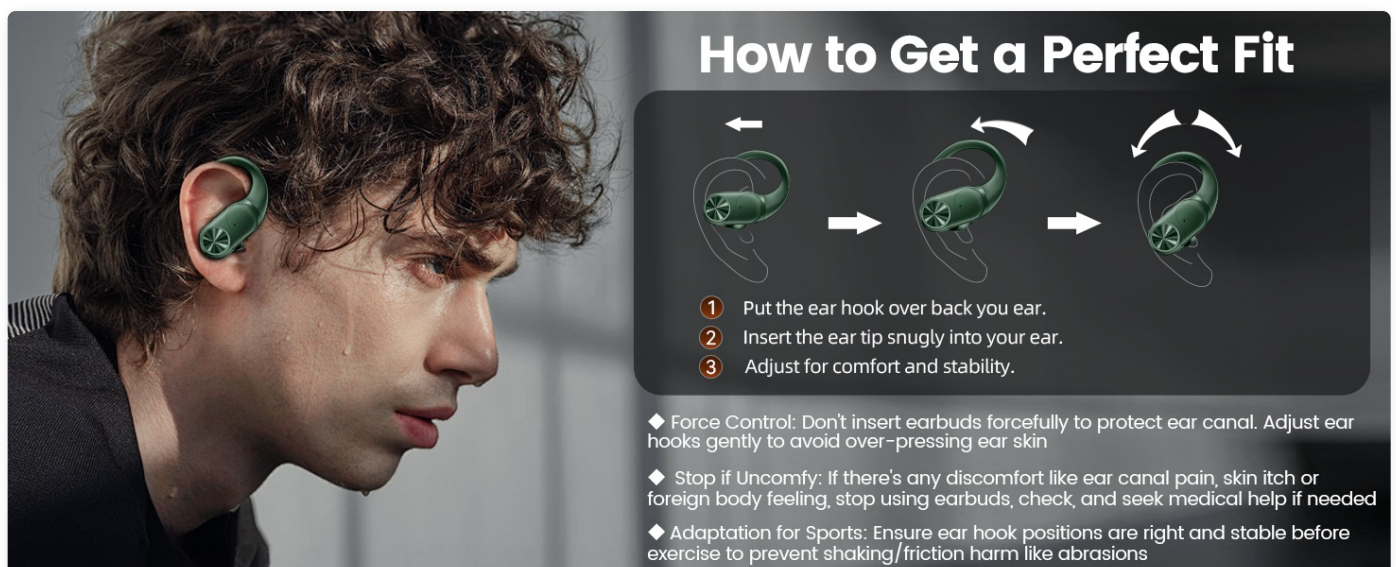 


Image: The PocBuds T60 earbuds shown with water splashes, illustrating their IPX7 sweat-resistant feature.

TROUBLESHOOTING

If you encounter any issues with your PocBuds T60 earbuds, please refer to the common solutions below.

Common Issues and Solutions:

- **Earbuds not pairing or connecting:**
 - Ensure both earbuds are taken out of the charging case.
 - Turn off and on Bluetooth on your device.
 - Forget "T60" from your device's Bluetooth list and try pairing again.
 - Ensure earbuds are charged.
- **Only one earbud working:**
 - Place both earbuds back into the charging case, close the lid, wait a few seconds, then take them out again.
 - Perform a factory reset (see video below).
- **Poor sound quality or low bass:**
 - Ensure eartips are properly seated in your ear canal. Try different sized eartips for a better seal.
 - Clean the earbud mesh and contacts.
 - Ensure your device's volume is not too low.
- **Charging issues:**
 - Check the Type-C cable and charging adapter.
 - Ensure the charging pins on the earbuds and in the case are clean and free of debris.
 - If using wireless charging, ensure the case is correctly placed on the Qi-certified charging pad.

Factory Reset

Your browser does not support the video tag.

Video: Instructions on how to restore PocBuds T60 earbuds to factory settings.

SPECIFICATIONS

Feature	Detail
Model Name	T60
Brand	PocBuds
Connectivity Technology	Wireless (Bluetooth 5.3)
Ear Placement	Over Ear
Noise Control	Sound Isolation
Frequency Response	20 KHz
Battery Life (Earbuds)	Up to 8 hours (single charge)
Total Playtime (with case)	Up to 80 hours

Feature	Detail
Charging Time	Approximately 1 hour
Water Resistance Level	IPX7 Sweat-resistant
Control Type	Touch, Volume Control
Material	Acrylonitrile Butadiene Styrene (ABS)
Item Weight	1.41 Ounces
Product Dimensions	3.54 x 2.36 x 1.5 inches
Compatible Devices	Smartphones, TVs, Computers, Laptops, Smartwatches, and various Bluetooth-enabled devices.

WARRANTY AND SUPPORT

PocBuds is committed to providing high-quality products and excellent customer service.

- **Lifetime Warranty:** The product comes with a lifetime warranty.
- **Free Replacement for Lost Earbuds:** Contact customer support for details on replacing lost earbuds.
- **24 Hours Support:** For any inquiries or assistance, please contact PocBuds customer support.

For further assistance, please visit the official PocBuds store or contact their customer service directly. You can find additional resources and support on their [Amazon Store Page](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question