

Speaka SP-11198892

SpeaKa Professional SP-TVC-900 Motorized TV Mount User Manual

INTRODUCTION

This manual provides detailed instructions for the safe and efficient installation, operation, and maintenance of your SpeaKa Professional SP-TVC-900 Motorized TV Mount. This mount is designed to support televisions ranging from 55 to 100 inches (139.7 cm to 254.0 cm) with a maximum load capacity of 120 kg. Please read this manual thoroughly before installation and keep it for future reference.

Safety Instructions

- Ensure all components are present and undamaged before beginning installation. Do not use damaged parts.
- Installation should be performed by at least two people to prevent injury or damage.
- Verify that the mounting surface can safely support the combined weight of the mount and the television.
- Do not exceed the maximum load capacity of 120 kg (264 lbs).
- Keep children and pets away during installation.
- Ensure all cables are properly routed and secured to prevent pinching or damage during operation.
- Only use the provided hardware or manufacturer-approved replacements.

SETUP AND INSTALLATION

Careful installation is crucial for the safe and proper functioning of your motorized TV mount. Follow these steps precisely.

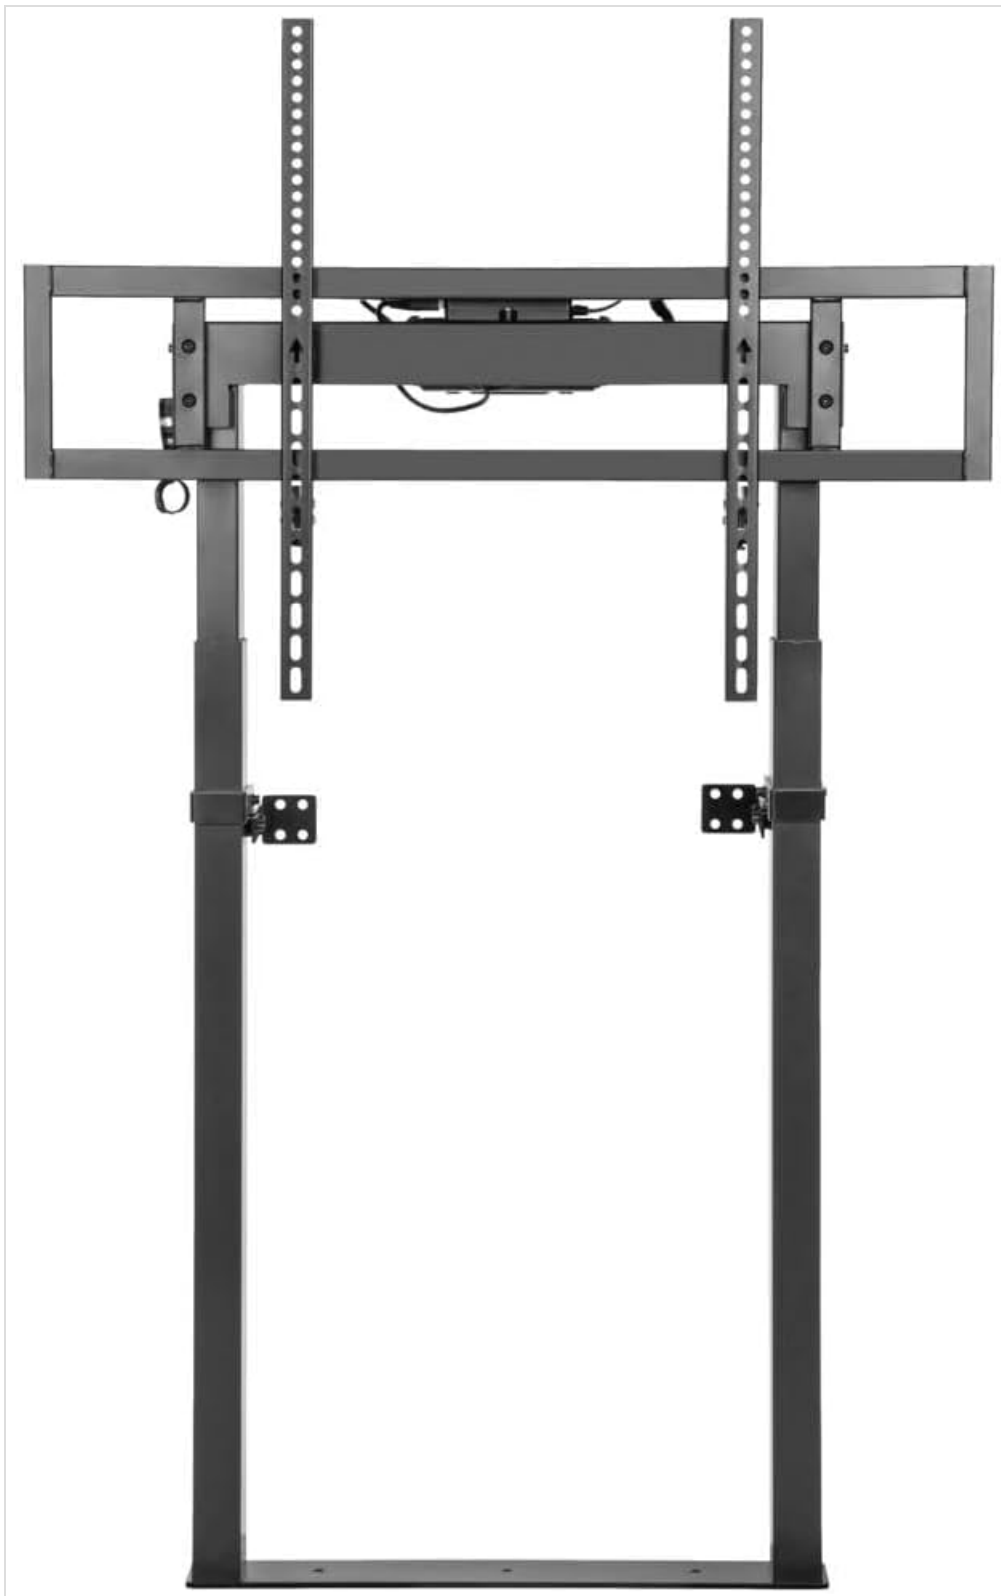


Figure 1: Front view of the SpeaKa Professional SP-TVC-900 motorized TV mount. This image displays the main structure, including the two vertical support columns and the horizontal bracket where the television will be attached. The VESA mounting arms are visible, ready for TV attachment.

Step 1: Unpacking and Component Check

Carefully unpack all components and compare them against the parts list (not provided in this document, refer to your product packaging for a complete list). Ensure no parts are missing or damaged. If any parts are missing or damaged, do not proceed with installation and contact customer support.

Step 2: Assembling the Base and Vertical Columns

Assemble the base frame and attach the vertical support columns. Ensure all screws are tightened securely. The motorized mechanism is integrated into these columns, allowing for height adjustment.



Figure 2: Angled view of the SpeaKa Professional SP-TVC-900 motorized TV mount. This perspective highlights the robust construction and the mechanism for height adjustment. The lower support brackets for additional equipment are also visible.

Step 3: Attaching the TV Mounting Bracket

Attach the horizontal TV mounting bracket to the top of the vertical columns. This bracket supports the VESA arms. Ensure it is level and securely fastened.

Step 4: Attaching VESA Arms to Your TV

Identify the VESA mounting holes on the back of your television. Select the appropriate screws and spacers (if necessary) from your TV's accessories or the mount's hardware kit. Attach the VESA arms to the back of your TV. This mount supports various VESA standards. Refer to your TV's manual and the mount's packaging for specific VESA compatibility and screw requirements.



Figure 3: Rear angled view of the SpeakA Professional SP-TVC-900 motorized TV mount. This view illustrates the rear of the mounting plate and potential cable management options, ensuring a tidy setup once the TV is installed.

Step 5: Mounting the TV onto the Stand

With assistance, carefully lift the television with the attached VESA arms and hook it onto the horizontal mounting bracket of the stand. Secure the TV using the safety screws or locking mechanisms provided. Ensure

the TV is centered and level.

Step 6: Connecting Power and Cables

Connect the power cable for the motorized mount to a suitable power outlet. Route all TV and mount cables neatly using the integrated cable management features to prevent interference with the motorized movement.

OPERATING INSTRUCTIONS

Your SpeakA Professional SP-TVC-900 mount features motorized height adjustment and tilt functionality for optimal viewing.

Motorized Height Adjustment

Use the provided remote control (if applicable, refer to product packaging for remote details) to adjust the height of your television. Press the "Up" button to raise the TV and the "Down" button to lower it. The mount will move smoothly to your desired viewing height. Avoid placing obstacles in the path of the moving parts.

Tilt Adjustment

The mount also allows for tilt adjustment. Depending on the model, this may be motorized via the remote or require manual adjustment. If manual, loosen the tilt locking knobs on the side of the TV bracket, adjust the TV to the desired angle, and then securely tighten the knobs. Do not overtighten.

Memory Presets (If applicable)

Some motorized mounts offer memory presets to save your favorite viewing positions. Refer to your remote control's specific instructions for programming and recalling these presets.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your TV mount.

- **Cleaning:** Dust the mount regularly with a soft, dry cloth. For stubborn marks, use a slightly damp cloth with mild detergent, then wipe dry immediately. Avoid abrasive cleaners or solvents.
 - **Inspection:** Periodically check all screws and connections to ensure they remain tight. Over time, vibrations can loosen fasteners.
 - **Cable Management:** Ensure all cables are still securely routed and not interfering with the mount's movement.
 - **Motor Check:** Listen for any unusual noises during operation. If you hear grinding or straining, discontinue use and consult the troubleshooting section or contact support.
-

TROUBLESHOOTING

If you encounter issues with your SpeaKa Professional SP-TVC-900 mount, refer to the following common problems and solutions.

- **Mount is not responding to remote control:**
 - Check if the mount is properly plugged into a working power outlet.
 - Ensure the remote control batteries are not depleted and are inserted correctly.
 - Verify there are no obstructions between the remote and the mount's receiver.
 - Try resetting the mount by unplugging it for 30 seconds and then plugging it back in.
- **Mount makes unusual noises during operation:**
 - Check for any loose screws or components. Tighten if necessary.
 - Ensure no cables or foreign objects are interfering with the moving parts.
 - If the noise persists, discontinue use and contact customer support.
- **TV appears uneven or tilted:**
 - Ensure the TV is properly centered on the mounting bracket.
 - Check the tilt adjustment knobs (if manual) and ensure they are securely tightened after adjustment.
 - Verify that the VESA arms are evenly attached to the TV.

If these steps do not resolve the issue, please contact SpeaKa Professional customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	SpeaKa Professional
Model Number	SP-11198892
ASIN	B0CHP1ZK16
Mount Type	Motorized, Height Adjustable, Tilttable
Compatible Display Sizes	139.7 cm (55 inches) - 254.0 cm (100 inches)
Maximum Load Capacity	120 kg (264 lbs)
VESA Compatibility	Supports various VESA standards (e.g., 200x200mm, 300x300mm, 300x200mm, 400x200mm, etc.)
Material	Metal
Color	Matte Black
Compatible Devices	Monitor, Television

WARRANTY AND SUPPORT

Parts Availability: Spare parts for this product are guaranteed to be available for 1 year from the date of purchase.

For technical support, warranty claims, or further assistance, please contact SpeaKa Professional customer service. Refer to your product packaging or the official SpeaKa Professional website for contact details.