

- Manuals.plus /
- › CozyPhones /
- › CozyPhones Toddler Wireless Headphones (Pink Unicorn Wireless) Instruction Manual

CozyPhones Cozy 3.0 2024 - UNICORN

CozyPhones Toddler Wireless Headphones (Pink Unicorn Wireless) Instruction Manual

Model: Cozy 3.0 2024 - UNICORN

INTRODUCTION

The CozyPhones Toddler Wireless Headphones offer a comfortable and safe audio solution for children. Designed with a soft, stretchy headband, these headphones provide both wired and wireless connectivity options, ensuring versatility for various activities and travel. The integrated volume limiting feature protects young ears by maintaining sound output at a safe level.

This manual provides essential information on setting up, operating, maintaining, and troubleshooting your CozyPhones headphones. Please read it carefully to ensure proper use and longevity of the product.



Image: CozyPhones Pink Unicorn Wireless Headphones in use, demonstrating comfort and design.

SETUP

1. Speaker Placement

The ultra-thin speakers are located within sewn-in pockets inside the headband. Gently adjust their position to align with your child's ears for optimal sound and comfort. The headband is designed to be lightweight and stretchy.

LIGHTWEIGHT AND COMFORTABLE DESIGN



Lightweight,
Breathable,
Stretchable

3.5mm Jack



Easy Access
Buttons for
Wireless Control

Speaker
Pocket



MACHINE WASHABLE
Simply remove
the speakers

Auxiliary
3.5mm Cable

Speaker Pocket

In-line Control

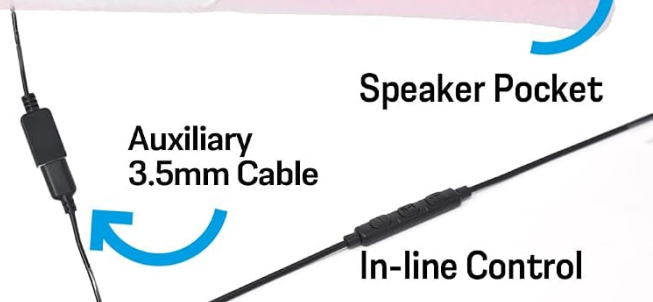


Image: View of the CozyPhones headband interior, showing the speaker pocket and the 3.5mm jack connection point.

2. Charging the Headphones

1. Locate the USB-C charging port on the control module.
2. Connect the provided USB-C charging cable to the port.
3. Plug the other end of the USB-C cable into a compatible USB power source (e.g., wall adapter, computer USB port).
4. A full charge typically takes approximately 2 hours. The indicator light will change to show charging status.



LONG LASTING, RECHARGEABLE BATTERY

-  **3 HOURS**
Charging Time
-  **13 HOURS**
Play Time
-  **65 HOURS**
Standby Time

AUXILIARY CABLE



Battery Not Required

USB-C MULTI-PORT



Connect Multi-port
for wireless charging
or wired auxiliary cable



Image: Graphic illustrating charging time, play time, and the USB-C charging port.

3. Bluetooth Pairing (Wireless Mode)

1. Ensure the headphones are charged.
2. Press and hold the Power On/Off button (usually the play/pause button) on the control module until the indicator light flashes, indicating pairing mode.
3. On your device (smartphone, tablet, etc.), go to Bluetooth settings and search for available devices.
4. Select "CozyPhones" from the list.
5. Once connected, the indicator light will stop flashing and remain solid.

4. Wired Connection (Auxiliary Cable)

For situations where Bluetooth is unavailable or the battery is low, use the included 3.5mm auxiliary cable.

1. Locate the 3.5mm jack on the control module.
2. Insert one end of the auxiliary cable into the headphone jack.
3. Plug the other end of the auxiliary cable into your audio device's 3.5mm port.
4. The headphones will now function in wired mode, and battery power is not required.

THE PERFECT COMFY WEARABLE HEADPHONES!

CozyPhones[®] 3.0



WIRED + WIRELESS CONNECTION



VOLUME LIMITING
FOR EAR
PROTECTION



COMPATIBLE
WITH ALL YOUR
DEVICES



Auxiliary
3.5mm Cable



Speaker
Pocket



In-Line Controls



USB-C Charging



Travel Bag

Image: Overview of wired and wireless connection options, highlighting the 3.5mm auxiliary cable and Bluetooth functionality.

OPERATING INSTRUCTIONS

Control Module Functions

The control module, located on the headband, provides easy access to audio and call functions. Refer to the image below for button identification.



EASY AUDIO CONTROLS

CozyPhones

— Turn Down Volume (long press)
Play Previous Song (short press)

+ Turn Up Volume (long press)
Play Next Song (short press)

⏸ Power On/Off (long press)
Play/Pause (short press)
Answer/Hang Up (short press)
Redial Last Call (double click)
Reject Call (long press)

AWARD WINNING SOUND

Built In Microphone

WIRED **WIRELESS**

For Phone Calls

Image: Detailed diagram of the control module buttons and their functions.

- **Power On/Off:** Press and hold the Play/Pause button.
- **Play/Pause:** Short press the Play/Pause button.
- **Volume Up:** Long press the '+' button.
- **Volume Down:** Long press the '-' button.
- **Next Track:** Short press the '+' button.
- **Previous Track:** Short press the '-' button.
- **Answer/Hang Up Call:** Short press the Play/Pause button during a call.
- **Redial Last Call:** Double click the Play/Pause button.
- **Reject Call:** Long press the Play/Pause button during an incoming call.

Volume Limiting

The headphones are designed with a built-in volume limiter set to 90 dB to protect children's hearing. This feature is active in both wired and wireless modes.

MAINTENANCE

Cleaning the Headband

The fabric headband is machine washable. To clean:

1. Gently remove the thin speakers from their pockets within the headband.
2. Remove the control module and any connected cables.
3. Machine wash the headband on a gentle cycle with cold water.
4. Air dry the headband completely before reinserting the speakers and control module.

Battery Care

To maximize battery life:

- Charge the headphones fully before first use.
- Avoid completely draining the battery regularly.
- Store the headphones in a cool, dry place when not in use.
- The battery provides approximately 12 hours of play time on a full charge.

Storage and Travel

Use the included mesh travel bag to store the headphones and all accessories. This helps protect them from damage and keeps components organized, especially during travel.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones not turning on	Battery is depleted.	Charge the headphones for at least 2 hours.
Cannot pair via Bluetooth	Headphones not in pairing mode; device Bluetooth off; interference.	Ensure headphones are charged and in pairing mode (flashing light). Turn device Bluetooth off and on. Move closer to the device.
No sound in wireless mode	Not paired; volume too low; speakers misaligned.	Confirm successful Bluetooth pairing. Increase volume on both headphones and device. Adjust speaker position within the headband.
No sound in wired mode	Auxiliary cable not fully inserted; cable damaged; device volume too low.	Ensure both ends of the 3.5mm auxiliary cable are fully inserted. Try a different auxiliary cable if available. Increase volume on the connected device.
Headphones not holding charge	Charging cable issue; battery degradation.	Try a different USB-C charging cable and power source. If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	CozyPhones
Model Number	Cozy 3.0 2024 - UNICORN
Color	PINK UNICORN WIRELESS
Ear Placement	On Ear
Form Factor	On Ear
Impedance	32 ohm
Age Range Description	Kid
Item Weight	3 ounces
Noise Control	None
Frequency Range	20 Hz - 20,000 Hz
Compatible Devices	WIRELESS / WIRED
Cable Features	Detachable
Water Resistance Level	Not Water Resistant
Additional Features	Volume Control
Headphone Jack	3.5 mm Jack
Connectivity Technology	Wireless
Wireless Technology	Bluetooth
Bluetooth Range	9.14 meters
Bluetooth Version	5
Control Type	Volume Control
Control Method	Touch
Controller Type	Wired and Wireless
Battery Charge Time	2 hours
Battery Average Life	12 hours

Size Chart

To ensure the best fit, measure your child's head circumference.



Image: CozyPhones size chart indicating minimum and maximum head circumference for different models, including kids' sizes.

Size	Min (inches/cm)	Max (inches/cm)
KIDS	18" (46 cm)	20" (51 cm)

WARRANTY AND SUPPORT

CozyPhones is a USA and Veteran-Owned company committed to customer satisfaction. We provide hassle-free service and friendly, easy-to-reach support. Your satisfaction is 100% guaranteed. For any questions, concerns, or support needs, please contact CozyPhones customer service through the retailer's platform or visit the official CozyPhones website for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CHQTMSGC>

More documents and user manuals: <https://manuals.plus/>