

Locksworth ET535

Locksworth 2.0 Cubic Feet Electronic Digital Keypad Safe Box User Manual

Model: ET535 | Brand: Locksworth

INTRODUCTION

Thank you for choosing the Locksworth 2.0 Cubic Feet Electronic Digital Keypad Safe Box. This manual provides essential information for the proper setup, operation, and maintenance of your safe. Please read these instructions carefully before use to ensure optimal security and functionality.

SAFETY INFORMATION

- Do not store emergency keys inside the safe. Keep them in a secure, separate location.
- Ensure the safe is installed on a stable surface or securely mounted to a wall or floor to prevent unauthorized removal.
- Keep the safe away from moisture and direct heat sources.
- Regularly check battery levels and replace them as needed to avoid being locked out.
- Do not share your digital code with unauthorized individuals.

PACKAGE CONTENTS

Verify that all components are present in the package:

- Locksworth 2.0 Cubic Feet Safe Box
- 2 Emergency Keys
- 2 Sets of Expansion Bolts (for mounting)
- User Manual (this document)
- Removable Shelf

PRODUCT OVERVIEW

The Locksworth 2.0 Cubic Feet Safe Box is designed for secure storage with advanced features.

- **Electronic Digital Keypad:** For quick and secure access with a programmable code.
- **Dual-Access System:** Electronic keypad and emergency key access.
- **Solid Steel Construction:** Reinforced for enhanced security.
- **0.8-inch Locking Bolts:** Two robust locking bolts for pry resistance.
- **Concealed Hinges:** Further deterring forced entry.
- **Removable Interior Shelf:** Allows for organized storage of various items.
- **Felt-Lined Base:** Protects valuables from scratches.
- **Alarm System:** Activates after three incorrect code attempts.
- **Pre-drilled Mounting Holes:** For permanent installation to a wall or floor.

Ways to open the safe



Mechanical manual

Keys+Knob



Electronic keyboard

Password + Knob

Figure 1: Ways to open the safe, illustrating both mechanical key and electronic keypad methods.



Figure 2: Internal features of the safe, highlighting the locking bolts, reset button, felt lining, and removable shelf.

SETUP

1. Initial Opening

Upon receiving your safe, use one of the emergency keys to open it for the first time. Insert the key into the keyhole, turn it clockwise, and simultaneously turn the knob to open the door.

2. Battery Installation

Locate the battery compartment inside the safe door. Insert 4 AA batteries (not included), ensuring correct polarity. Close the battery compartment cover.

3. Setting Your Digital Code

1. With the safe door open, locate the red reset button on the inside of the door (refer to Figure 2).
2. Press the red reset button. You will hear a beep, and the yellow indicator light on the keypad will illuminate.
3. Within 5 seconds, enter your desired 3-8 digit code on the keypad, then press the "#" button.
4. The safe will beep twice, and the yellow light will turn off, indicating the new code is set.
5. Test the new code with the door open before closing it. Enter your code, then press "#". Turn the knob to confirm it opens.

Important: If the yellow light flashes and the safe beeps three times, the code was not set correctly. Repeat the steps.

4. Mounting Instructions

For enhanced security, it is recommended to mount the safe to a wall or floor using the provided expansion bolts.

1. Choose a suitable location for mounting.
2. Mark the positions for drilling through the pre-drilled holes on the back or bottom of the safe.
3. Drill pilot holes in the wall or floor using an appropriate drill bit.
4. Align the safe with the drilled holes and insert the expansion bolts.
5. Tighten the bolts securely to fix the safe in place.



Figure 3: Installation steps for mounting the safe to a wall.

OPERATING INSTRUCTIONS

1. Opening with Digital Code

1. Enter your 3-8 digit code.
2. Press the "#" button.
3. The green indicator light will illuminate. Within 5 seconds, turn the knob clockwise to open the safe door.

2. Opening with Emergency Key

In case of forgotten code or dead batteries, use the emergency key:

1. Remove the small cover plate next to the knob to reveal the emergency keyhole.
2. Insert the emergency key and turn it clockwise.
3. Simultaneously turn the knob clockwise to open the safe door.

Note: Always keep emergency keys stored outside the safe in a secure location.

3. Alarm System

The safe is equipped with an intelligent alarm system. If three consecutive incorrect password attempts are made, a loud 70-decibel alarm will sound. The alarm will also activate if the safe experiences strong vibrations or tampering.



ALARM SYSTEM

Enter Incorrect passwords for
3 times, Can Activate The Alarm System

Figure 4: Alarm system activation after three incorrect password entries.

4. Silent Mode

To operate the safe without audible beeps (e.g., for nighttime use), activate silent mode. Consult the full manual for specific instructions on enabling/disabling silent mode, as this feature may vary.

MAINTENANCE

- **Cleaning:** Wipe the safe's exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries annually or when the low battery indicator light appears. Always use 4 new AA batteries.
- **Lock Mechanism:** Do not lubricate the lock mechanism. If the lock feels stiff, contact customer support.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with digital code.	Incorrect code entered; Dead batteries.	Re-enter the correct code. Replace batteries. Use emergency key.

Problem	Possible Cause	Solution
Keypad is unresponsive.	Dead batteries.	Replace batteries. Use emergency key.
Alarm sounds unexpectedly.	Three incorrect code attempts; Safe was tampered with or moved.	Enter the correct code to disarm. Check for signs of tampering.
Cannot set a new code.	Code entry too slow; Incorrect procedure.	Ensure code is entered within 5 seconds after pressing the reset button. Follow steps precisely.

SPECIFICATIONS

Brand	Locksworth
Model Number	ET535
Exterior Dimensions (D x W x H)	12.99" x 13.78" x 19.69" (33cm x 35cm x 50cm)
Interior Dimensions (D x W x H)	11.81" x 13.38" x 18.89" (30cm x 34cm x 48cm)
Capacity	2.0 Cubic Feet (1.8 cu ft interior)
Material	Alloy Steel
Lock Type	Electronic Combination Lock, Key
Locking Bolts	Two 0.8-inch (20mm) thick steel bolts
Special Features	Alarm System, Anti-Theft, Removable Shelf, Scratch Resistant
Item Weight	36 Pounds (16.3 kg)

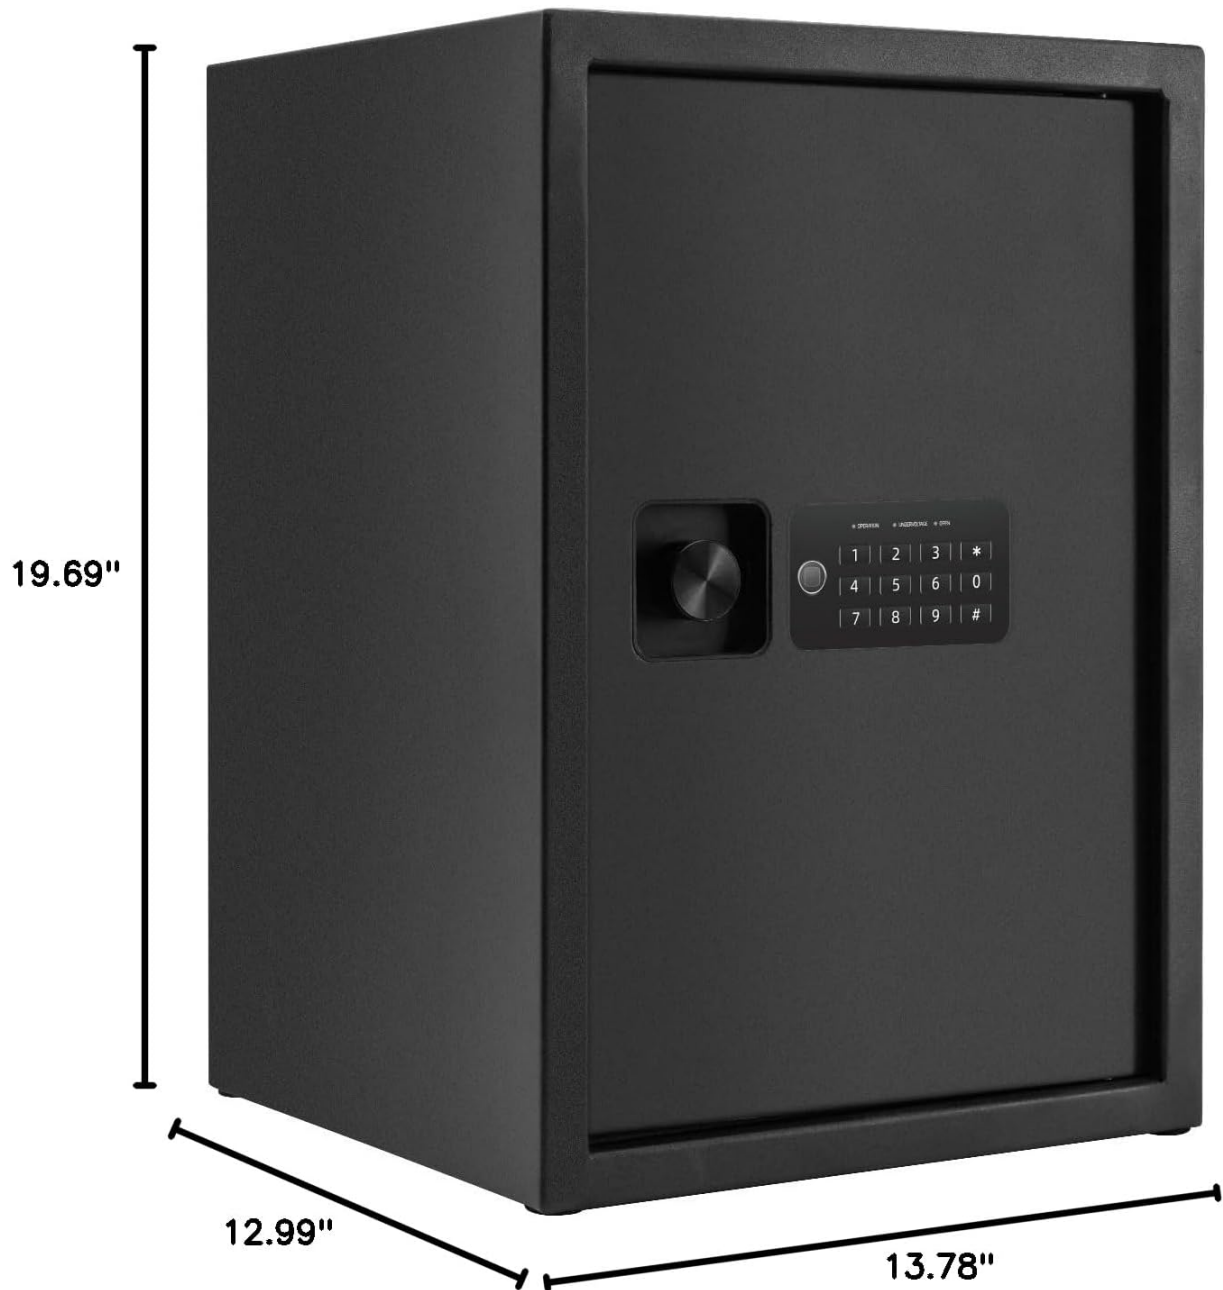


Figure 5: Exterior dimensions of the 2.0 Cubic Feet Safe Box.

WARRANTY & SUPPORT

Locksworth provides a satisfaction guarantee for this product. For warranty claims, technical support, or any questions regarding your safe, please contact Locksworth customer service through the retailer's platform or the official Locksworth website. Please have your model number (ET535) and purchase information ready when contacting support.