

[Manuals.plus](#) /

› [IWEGGO](#) /

› IWEGGO Android 15 Tablet CP20MAX User Manual

IWEGGO CP20MAX

IWEGGO Android 15 Tablet CP20MAX User Manual

Model: CP20MAX | Brand: IWEGGO

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your IWEGGO Android 15 Tablet CP20MAX. Please read it thoroughly before using your device and retain it for future reference.

2. SAFETY INFORMATION

- Do not expose the tablet to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the tablet to strong impacts.
- Use only the provided charger and accessories to prevent damage and ensure safety.
- Keep the tablet away from water and other liquids.
- Do not attempt to disassemble or repair the tablet yourself. Contact customer support for assistance.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x IWEGGO Android 15 Tablet (10.1 inch)
- 1 x Bluetooth Keyboard
- 1 x Wireless Mouse
- 1 x Protective Case
- 1 x Stylus

- 1 x USB-C Cable
- 1 x User Manual (this document)



Image: The IWEGGO Android 15 Tablet shown with its full set of accessories, including the tablet, keyboard, mouse, stylus, protective case, and USB-C charging cable.

4. PRODUCT OVERVIEW

Familiarize yourself with the physical components of your tablet.

Tablet Components

- **10.1-inch HD Touch Screen:** Main display for interaction.
- **Front Camera (2MP):** For video calls and selfies.
- **Rear Camera (8MP):** For taking photos and videos.
- **Power Button:** Turns the tablet on/off or puts it to sleep.
- **Volume Buttons:** Adjusts audio volume.

- **USB-C Port:** For charging and data transfer.
- **MicroSD Card Slot:** For expandable storage up to 2TB.
- **3.5mm Headphone Jack:** For wired audio output.

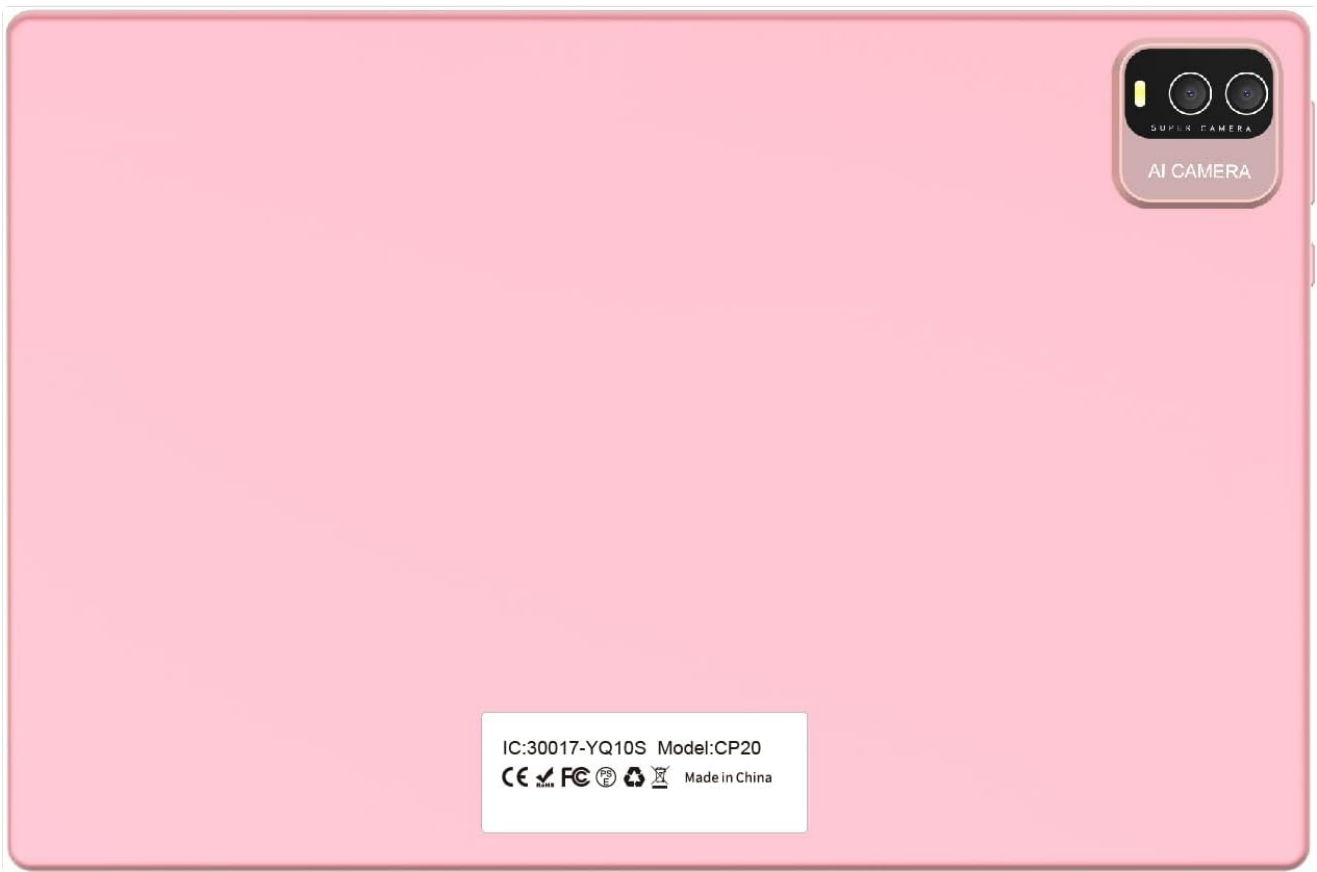


Image: The back of the IWEGGO Android 15 Tablet, showing the rear camera module and regulatory markings.

5. SETUP

5.1 Charging the Tablet

1. Connect the provided USB-C cable to the tablet's USB-C port.
2. Plug the other end of the cable into a compatible USB power adapter (not always included) and then into a power outlet.
3. The battery icon on the screen will indicate charging status. Fully charge the tablet before first use.

5.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the screen lights up.
- **To Power Off:** Press and hold the Power button, then select 'Power off' from the options on the screen.
- **To Sleep/Wake:** Briefly press the Power button.

5.3 Initial Setup

Upon first power-on, follow the on-screen prompts to:

- Select your language.
- Connect to a Wi-Fi network.

- Sign in with your Google account or create a new one.
- Set up screen lock and other preferences.

5.4 Connecting Accessories (Keyboard, Mouse, Stylus)

The included keyboard and mouse connect via Bluetooth. The stylus is typically passive and does not require pairing.

1. **For Keyboard/Mouse:** Turn on the accessory. On your tablet, go to **Settings > Connected devices > Bluetooth**. Enable Bluetooth and search for available devices. Select the keyboard or mouse from the list to pair.
2. **Protective Case:** Insert the tablet into the protective case for enhanced protection and to use its stand functionality.

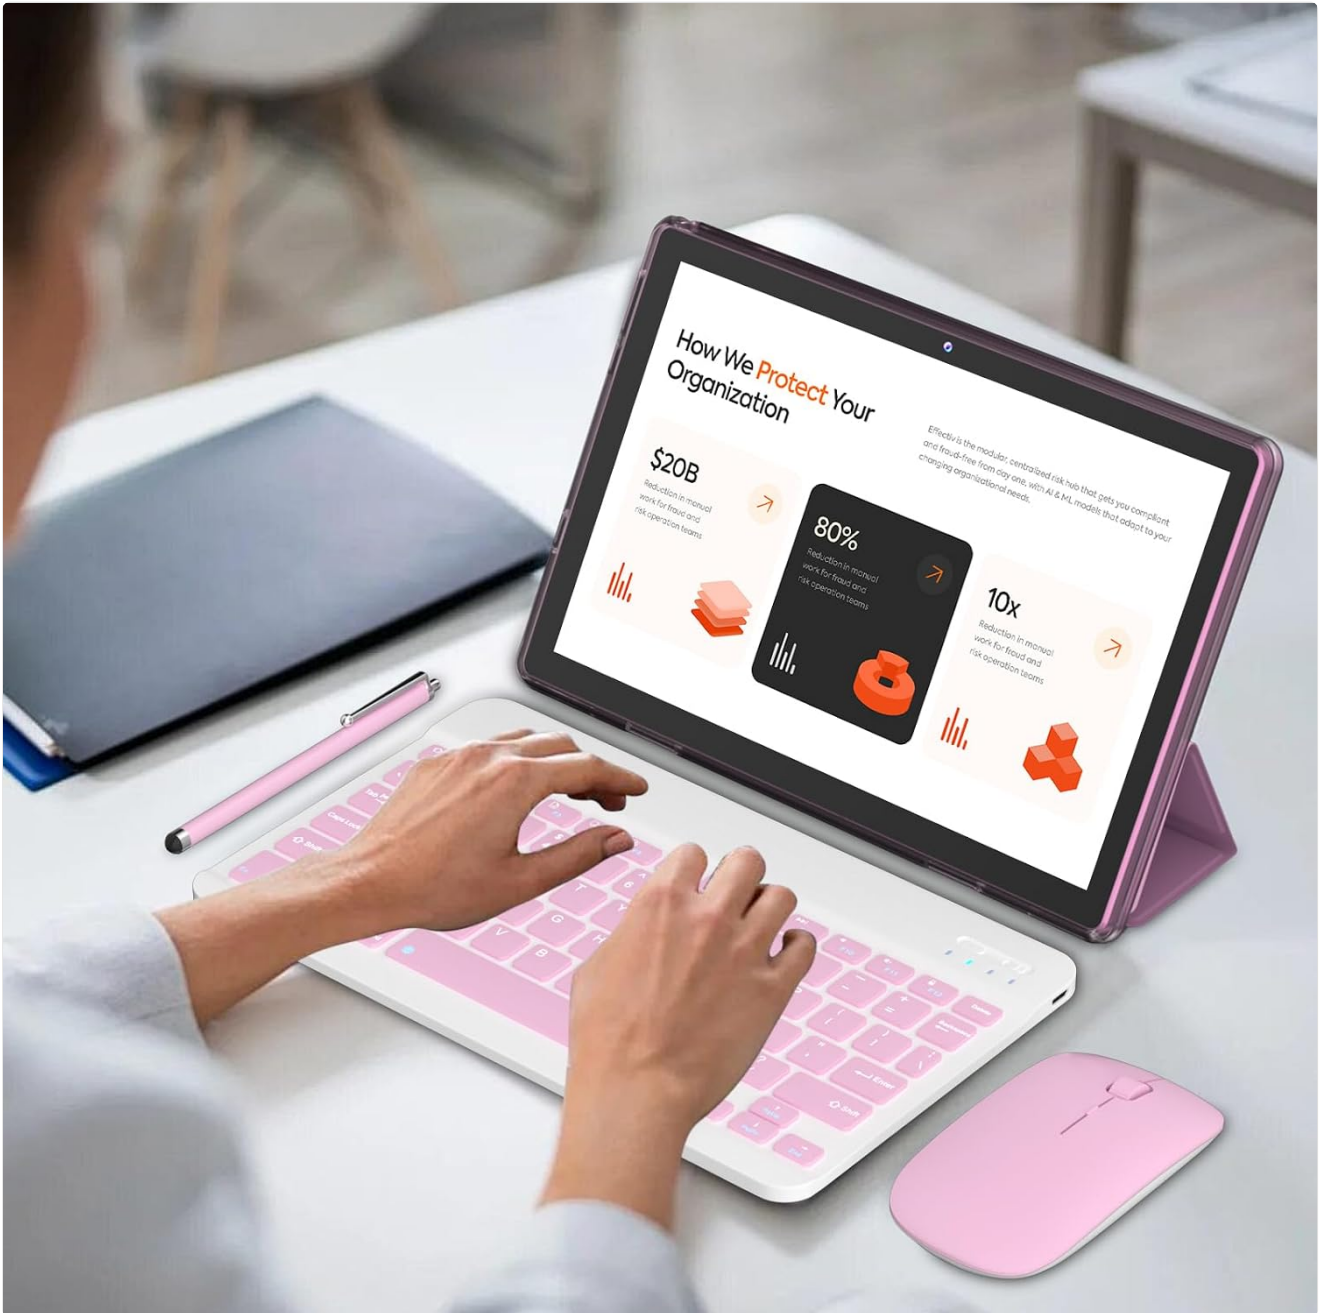


Image: A person using the IWECCO Android 15 Tablet in a productivity setup with the included keyboard and mouse, demonstrating its 2-in-1 functionality.

6. OPERATING THE TABLET

6.1 Basic Navigation

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through pages or lists.
- **Pinch-to-Zoom:** Zoom in or out on images and web pages.
- **Long Press:** Access contextual menus or move icons.

6.2 Wi-Fi Connection

1. Go to **Settings > Network & internet > Wi-Fi**
2. Toggle Wi-Fi on.
3. Select your desired network from the list and enter the password if prompted.

6.3 Bluetooth Pairing

To connect other Bluetooth devices (e.g., headphones):

1. Go to **Settings > Connected devices > Bluetooth**.
2. Ensure Bluetooth is enabled on both your tablet and the device you wish to pair.
3. Select 'Pair new device' and choose your device from the list.

6.4 Using the Camera

1. Open the 'Camera' app.
2. Tap the shutter button to take a photo or start/stop video recording.
3. Switch between front and rear cameras using the camera toggle icon.

Dual Camera



2MP

Front Camera



8MP

Rear Camera



Record Beautiful Moments



Image: The IWECCO Android 15 Tablet highlighting its dual camera system (2MP front, 8MP rear) with example photos taken by the tablet.

6.5 Storage Management

Your tablet comes with 128GB of internal storage. You can expand this:

1. **Insert MicroSD Card:** Gently insert a MicroSD card (up to 2TB, not included) into the designated slot.
2. **Manage Storage:** Go to **Settings > Storage** to view storage usage and manage files.

6.6 Google Play Store

Access millions of apps, games, movies, and books:

1. Tap the 'Play Store' icon on your home screen or app drawer.
2. Browse or search for content.
3. Tap 'Install' to download apps.

From the office to the coffee shop it's your best assistant



 Android 15.0	 CPU Quad Core 2.0Ghz	 RAM 4GB+14GB	 ROM 128GB
 Screen IPS 1280*800	 Camera 2MP / 8MP	 Battery 6000mAh	 WiFi 5G+WiFi6

Image: The IWEGGO Android 15 Tablet displaying its home screen with various applications, including the Google Play Store, indicating GMS certification.

7. MAINTENANCE

7.1 Cleaning the Tablet

- Use a soft, lint-free cloth to wipe the screen and body.
- For stubborn marks, slightly dampen the cloth with water or a screen cleaner.
- Avoid harsh chemicals or abrasive materials.

7.2 Battery Care

- Avoid fully discharging the battery frequently.
- Do not leave the tablet charging for extended periods after it's full.
- Store the tablet in a cool, dry place if not used for a long time.

6000mAh large capacity battery



Game



Video



Music



Read



Image: The IWEGGO Android 15 Tablet displaying its 6000mAh battery capacity, along with a USB-C charging cable, emphasizing its power features.

7.3 Software Updates

Regularly check for and install system updates to ensure optimal performance and security:

1. Go to **Settings > System > System update**
2. Follow the on-screen instructions to download and install any available updates.

8. TROUBLESHOOTING

Problem	Solution
Tablet won't turn on	Ensure the battery is charged. Connect to charger for at least 30 minutes. If still unresponsive, perform a forced restart by holding the Power button for 10-15 seconds.

Problem	Solution
Wi-Fi connection issues	Restart the tablet and your Wi-Fi router. Forget the network in Wi-Fi settings and reconnect. Ensure you are within range of the Wi-Fi signal.
Tablet is slow or freezes	Close unused apps. Clear cache for problematic apps (Settings > Apps > [App Name] > Storage & cache). Restart the tablet. Consider a factory reset if issues persist (backup data first).
Accessories not connecting	Ensure accessories are charged and in pairing mode. Re-pair them via Bluetooth settings. Check if other Bluetooth devices interfere.

9. SPECIFICATIONS

Feature	Detail
Operating System	Android 15
Processor	Quad-core 2.0GHz ARM
RAM	18GB (4GB physical + 14GB extended)
Internal Storage	128GB
Expandable Storage	Up to 2TB via microSD card
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 Pixels (HD IPS)
Wireless Connectivity	2.4G/5G WiFi 6 (802.11ax), Bluetooth 5.0
Cameras	Front: 2MP, Rear: 8MP
Battery Capacity	6000mAh (up to 10 hours average battery life)
Dimensions (LxWxH)	9.5 x 6.5 x 0.3 inches
Item Weight	2.2 pounds
Model Number	CP20MAX

10.1 inch IPS Display



10.1 inch
Touch Screen



1280*800
Resolution



16:10
Golden ratio



Vivid IPS
Display



Widevine L1 Support

Widevine L1 support enables tablet to easily access FHD and UHD videos in high-resolution streaming media. Such as Netflix, Amazon Prime Video, Hulu.etc



Image: The IWE GGO Android 15 Tablet highlighting its 10.1-inch IPS HD display with 1280x800 resolution and Widevine L1 support for high-resolution streaming.

10. WARRANTY AND SUPPORT

Your IWE GGO Android 15 Tablet CP20MAX is covered by a standard manufacturer's warranty. For specific warranty terms, please refer to the warranty card included in your package or contact IWE GGO customer support. For technical assistance, troubleshooting, or warranty claims, please contact IWE GGO customer support through the contact information provided on the product packaging or the official IWE GGO website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question