

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KOKODI](#) /

› [KOKODI Kids Smart Phone Instruction Manual - Model B0CHRF5LMX](#)

KOKODI B0CHRF5LMX

KOKODI Kids Smart Phone Instruction Manual

Model: B0CHRF5LMX

1. INTRODUCTION

Welcome to the KOKODI Kids Smart Phone! This device is designed to provide a safe and engaging experience for children aged 3 and above, offering various educational and entertainment features without requiring Wi-Fi. This manual will guide you through the setup, operation, and maintenance of your new smart phone toy.

2. WHAT'S IN THE BOX

- KOKODI Kids Smart Phone Body
- Protective Silicone Case
- Charging Cable
- Lanyard
- User Guide

3. PRODUCT FEATURES

- **All-in-one Kids Phone Toy:** Offers various applications including photo and video capture, ABC learning, story mode, painting, and habit tracking to cultivate empathy and logical thinking skills.
- **Effortless Shooting:** Features auto-focus for people, pets, and birds, allowing kids to take photos or selfies with 23 funny stickers. The 2.8-inch sensitive touchscreen simplifies recording.
- **Pre-loaded & Play:** Includes 31 pre-installed educational puzzle games with easy, normal, and hard modes. Supports thousands of music tracks and hundreds of stories with large memory for pre-downloading.
- **Built For Everyday Use:** Comes with a premium silicone case for drop protection. All buttons and ports are easily accessible. Available in multiple colors with unique dinosaur or unicorn textures.
- **Safety First:** Designed for children aged three years and above, with no Wi-Fi required. Tested for safety in accordance with CPC and CPSIA regulatory standards.



KOKODI Kids Smart Phone displaying various applications.



KOKODI Kids Smart Phone in pink with a unicorn protective case.



KOKODI Kids Smart Phone showing educational apps for learning.



KOKODI Kids Smart Phone highlighting dual cameras and fun stickers.



KOKODI Kids Smart Phone with its durable silicone case for drop protection.



KOKODI Kids Smart Phone showcasing its wide range of pre-loaded applications.

4. SETUP

1. **Charging the Device:** Connect the provided charging cable to the phone's charging port and a suitable USB power source. Ensure the device is fully charged before first use.
2. **Power On:** Press and hold the power button (located on the side) to turn on the smart phone toy.
3. **Attach Protective Case:** Carefully place the smart phone into its silicone protective case to ensure durability and protection against accidental drops.



The KOKODI Kids Smart Phone with its protective unicorn case.

5. OPERATING INSTRUCTIONS

Navigate the device using the touchscreen. Swipe left or right to browse through the available applications.

1. **Power On/Off:** Press the power button to turn on or off the device.
2. **Camera Function:** To take a photo or video, tap the 'Camera' icon. Press the camera button on the screen to capture.
3. **Accessing Games:** Tap the 'Games' icon to access the pre-installed educational puzzle games. Choose from easy, normal, or hard modes.
4. **Music and Stories:** Tap the 'Music' or 'Story' icon to listen to pre-loaded content. You can also pre-download additional content.
5. **Flashlight:** Locate and tap the 'Flashlight' icon to activate the built-in flashlight.
6. **Volume Control:** Use the volume buttons on the side of the device to adjust the sound level.

Your browser does not support the video tag.

Video demonstrating the KOKODI Kids Smart Phone's camera, games, and flashlight features.

Your browser does not support the video tag.

Video showcasing the KOKODI Kids Smart Phone's touch screen and various games.

Your browser does not support the video tag.

Video highlighting the KOKODI Kids Smart Phone's user interface and camera functionality.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the screen and body of the device. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Protection:** Always use the provided silicone case to protect the device from bumps and drops.

7. TROUBLESHOOTING

- **Device Freezes:** If the device freezes or becomes unresponsive, insert a paperclip into the small reset hole located below the power button to perform a reset.
- **Overheating:** Avoid using the phone while it is charging, when the battery is critically low, or if it is already heating up, as this can lead to overheating and freezing.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	3.5 x 1.5 x 5.9 inches
Item Weight	7.4 ounces
Item Model Number	B0CHRF5LMX
Manufacturer Recommended Age	36 months - 3 years
Batteries	1 A battery required (included)
Manufacturer	KOKODI

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or visit the official KOKODI website. Keep your purchase receipt for any warranty claims.