

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PERFASCIN](#) /

› [PERFASCIN DG11J1-32 Replacement Remote Control Instruction Manual](#)

PERFASCIN DG11J1-32

Instruction Manual

PERFASCIN DG11J1-32 Replacement Remote Control

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your PERFASCIN DG11J1-32 replacement remote control. This remote is designed to function as a direct replacement for specific Whirlpool Air Conditioner models, including DG11J1-35, DG11J1-41, G11J1-31, and DG11J1-32.

It is important to note that this is a replacement infrared remote control and may not support all advanced functions present on the original equipment manufacturer's remote. No programming or pairing is required for its operation.

PRODUCT OVERVIEW

Key Features

- No programming or pairing required.
- Direct replacement for specified Whirlpool Air Conditioner remote models.
- Utilizes infrared technology for strong signal transmission.
- Buttons constructed from silicone for tactile feedback and dust resistance.
- Fast response time, typically under 0.2 seconds.

Compatible Models

This remote control is compatible with the following Whirlpool Air Conditioner remote models:

- DG11J1-35
- DG11J1-41
- G11J1-31
- DG11J1-32

Note: This list is not exhaustive. If your model is not listed, please refer to the product description or contact support for compatibility verification.

Battery Installation

The remote control requires two (2) AAA alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.


Important: Use only new alkaline batteries. Rechargeable batteries may not provide sufficient power for optimal operation.



Image: Rear view of the remote control with the battery cover removed, revealing the empty battery slots for two AAA batteries.

OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready for use. Point the remote directly at the infrared receiver on your Whirlpool Air Conditioner unit.

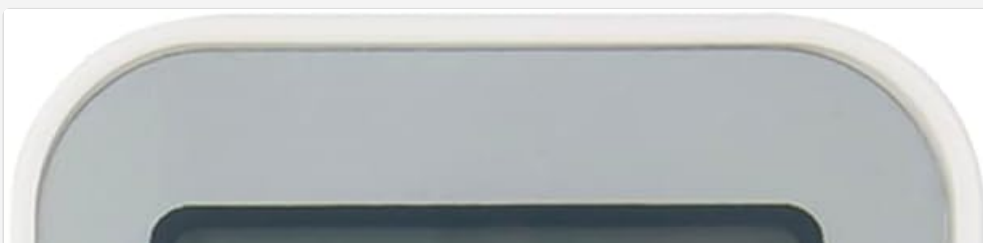




On/Off




Mode



 
Fan



Swing

 


Sleep

 


Jet



 
6th Sense




Around U

 


Dim

 

Timer On
Clock

 

Timer Off

 

Power
Save

Image: Front view of the PERFASCIN DG11J1-32 remote control, displaying its buttons and LCD screen.

Basic Functions

- **On/Off Button:** Press to power the air conditioner unit on or off.
- **Mode Button:** Cycles through available operating modes (e.g., Cool, Fan, Dry, Heat, Auto).
- **Fan Button:** Adjusts the fan speed.
- **Temperature Adjustment Buttons (▲/▼):** Increases or decreases the set temperature.
- **Swing Button:** Controls the louver swing function.
- **Sleep Button:** Activates or deactivates sleep mode.
- **Jet Button:** Engages a rapid cooling/heating function.
- **6th Sense Button:** Activates the 6th Sense intelligent operating mode (if supported by AC unit).
- **Around U Button:** Activates the "Follow Me" function, sensing temperature at the remote's location.
- **Dim Button:** Adjusts the brightness of the air conditioner's display.
- **Timer On/Clock Button:** Sets the timer for the unit to turn on or adjusts the clock.
- **Timer Off Button:** Sets the timer for the unit to turn off.
- **Power Save Button:** Activates energy-saving mode.

Note: The functionality of specific buttons may vary slightly depending on your air conditioner model. Refer to your air conditioner's manual for detailed function descriptions.

MAINTENANCE

Cleaning the Remote Control

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or the air conditioner unit does not respond to commands. Always replace both batteries simultaneously with new alkaline batteries.

Caution: Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote control not working.	<ul style="list-style-type: none"> Batteries are dead or inserted incorrectly. Infrared signal is blocked. Remote is out of range. Incorrect remote for the AC unit. 	<ul style="list-style-type: none"> Replace with new alkaline batteries, ensuring correct polarity. Ensure nothing is blocking the line of sight between the remote and the AC unit's receiver. Move closer to the AC unit. Verify your AC unit model is listed as compatible.
Some functions do not work.	<ul style="list-style-type: none"> The replacement remote may not support all original functions. AC unit does not support the specific function. 	<ul style="list-style-type: none"> This remote is a replacement and may have limited functionality compared to the original. Refer to your air conditioner's manual to confirm if the function is supported by your unit.

If troubleshooting steps do not resolve the issue, please contact customer support for further assistance. It is helpful to provide a picture of your original remote control if you are experiencing compatibility issues.

SPECIFICATIONS

Model Number:	DG11J1-32
Brand:	PERFASCIN
Compatible Devices:	Whirlpool Air Conditioners (Specific models: DG11J1-35, DG11J1-41, G11J1-31, DG11J1-32)
Power Source:	2 x AAA Alkaline Batteries (not included)
Product Dimensions:	6 x 3 x 0.5 inches (approximately)
Item Weight:	2 ounces (approximately)
Color:	Black
Special Feature:	Ergonomic design

WARRANTY AND SUPPORT

This product has been tested to ensure perfect functionality prior to shipping. As a replacement remote control, specific warranty details may vary. Please refer to the seller's return policy or contact the seller directly for information regarding warranty coverage and support.

For any questions or assistance, please reach out to the seller through the platform where the product was purchased. Providing your order details and a description of the issue will help expedite support.

Note: The package includes one new remote control. Batteries are not included.