

[Manuals.plus](#) /

› [Audecook](#) /

› Audecook Hot Pot Electric, 1.5L Rapid Noodles Cooker Instruction Manual

Audecook AC800

Audecook Hot Pot Electric, 1.5L Rapid Noodles Cooker Instruction Manual

Model: AC800

[Safety Instructions](#)

[Product Components](#)

[Setup](#)

[Operating Instructions](#)

[Care and](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions carefully before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.
- Do not attempt to repair the appliance yourself. Contact qualified service personnel.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Audecook Hot Pot Electric:

- **Main Pot Body:** The primary cooking vessel with non-stick coating.
- **Glass Lid:** Transparent lid with a wooden knob and steam vent for monitoring cooking.
- **Power Cord:** Detachable power cord for electrical connection.
- **Control Knob:** For selecting power levels (OFF, 250W, 600W).
- **Wooden Handle:** Ergonomically designed for safe and comfortable grip.
- **Steamer Tray (Optional):** A separate tray for steaming food (may not be included with all models).



Image: The Audecook Hot Pot Electric with its lid open, revealing cooked noodles, shrimp, and vegetables inside. The pot features a wooden handle and control knob.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.

2. **Clean:** Before first use, wash the interior of the main pot, the glass lid, and the steamer tray (if included) with warm, soapy water. Rinse thoroughly and dry completely. Do not immerse the main pot body or power cord in water.
3. **Placement:** Place the hot pot on a stable, flat, heat-resistant surface away from flammable materials. Ensure adequate ventilation around the appliance.
4. **Connect Power:** Insert the power cord into the appliance's power inlet, then plug the other end into a standard 110V electrical outlet.

OPERATING INSTRUCTIONS

The Audecook Hot Pot Electric offers dual power control for versatile cooking.

General Cooking

1. **Add Ingredients:** Place your desired food and liquid (if necessary) into the main pot. Do not overfill beyond the maximum fill line.
2. **Select Power:** Turn the control knob to select the desired power level:
 - **250W (Low Power):** Ideal for gentle cooking such as eggs, oatmeal, or simmering soups.
 - **600W (High Power):** Suitable for rapid boiling, searing steaks, cooking noodles, or preparing hot pot.
3. **Cook:** Place the glass lid on the pot. Monitor your food through the transparent lid. Stir occasionally if needed.
4. **Finish Cooking:** Once cooking is complete, turn the control knob to "OFF" and unplug the appliance from the wall outlet.
5. **Serve:** Use the provided ladle or appropriate utensils to serve. Exercise caution as the pot and its contents will be hot.



Image: Detail of the control knob on the Audecook Hot Pot Electric, illustrating the dual power settings for 250W (low) and 600W (high).

Steaming (If Steamer Tray is Included)

1. **Add Water:** Pour an appropriate amount of water into the main pot, ensuring it does not touch the bottom of the steamer tray.
2. **Place Steamer Tray:** Insert the steamer tray into the main pot.
3. **Add Food:** Place vegetables, buns, or other items to be steamed onto the steamer tray.
4. **Steam:** Cover with the glass lid and select the 600W power setting for rapid steaming.
5. **Monitor:** Steam until food is cooked to your preference.
6. **Finish:** Turn the control knob to "OFF" and unplug. Carefully remove the lid and steamer tray, as steam will be hot.

1.5L Portable Multicooker

One pot can cook many different dishes



Soup



Steak



Egg



Pasta



Oatmeal



Broccoli



Image: A visual representation of the Audecook Hot Pot Electric's versatility, showing examples of dishes like soup, steak, eggs, pasta, oatmeal, and broccoli that can be prepared.

CARE AND MAINTENANCE

Proper care ensures the longevity and performance of your Audecook Hot Pot Electric.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Clean Interior:** The non-stick interior can be easily cleaned with a soft sponge and mild dish soap. Avoid abrasive cleaners or metal scouring pads that can damage the non-stick coating.
3. **Clean Exterior:** Wipe the exterior of the pot with a damp cloth. Do not immerse the main pot body in water.
4. **Lid and Steamer Tray:** The glass lid and steamer tray are dishwasher safe or can be hand-washed with warm, soapy water.
5. **Storage:** Ensure all parts are dry before storing. Store the appliance in a cool, dry place.



Image: A hand cleaning the non-stick interior of the Audecook Hot Pot Electric, highlighting its easy-to-clean design.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; control knob not set.	Ensure power cord is securely plugged into both the appliance and a working 110V outlet. Turn the control knob to 250W or 600W.
Food is not cooking evenly.	Insufficient liquid; uneven distribution of food; incorrect power setting.	Ensure adequate liquid for cooking. Stir food occasionally. Adjust power setting as needed for the type of food.
Pot automatically shuts off.	Overheating or dry-burn protection activated.	Unplug the appliance and allow it to cool down. Check for sufficient liquid before restarting. This is a safety feature.

Problem	Possible Cause	Solution
Food sticks to the bottom.	Insufficient oil/liquid; food cooked at too high a temperature for too long.	Add a small amount of cooking oil or liquid. Adjust power setting to a lower level if food is sticking. Ensure non-stick coating is not damaged.

PRODUCT SPECIFICATIONS

- **Brand:** Audecook
- **Model:** AC800
- **Capacity:** 1.5 Liters
- **Material:** Nonstick
- **Product Dimensions:** 7.6"D x 7.6"W x 6.8"H
- **Special Features:** Non-Stick Coating, Temperature Control (Dual Power)
- **Wattage:** 250W / 600W
- **Voltage:** 110 Volts
- **Item Weight:** 2.6 Pounds
- **Control Method:** Touch (Knob)
- **Dishwasher Safe:** No (Main Pot Body)

WARRANTY AND SUPPORT

For any questions or concerns regarding your Audecook Hot Pot Electric, please contact our customer service team. We are committed to providing assistance within 12 hours.

Please refer to your purchase documentation for specific warranty details. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question