

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ARCADE1UP](#) /

› [Arcade1Up NFL Blitz Legends Arcade Machine and Pub Stool User Manual](#)

ARCADE1UP B0CHRPPPFT

Arcade1Up NFL Blitz Legends Arcade Machine and Pub Stool User Manual

Brand: ARCADE1UP | Model: B0CHRPPPFT

1. INTRODUCTION

This manual provides essential information for the safe and proper assembly, operation, and maintenance of your Arcade1Up NFL Blitz Legends Arcade Machine and the accompanying NFL Blitz Logo Pub Stool. Please read all instructions carefully before use and retain this manual for future reference.

2. SAFETY INFORMATION

- Ensure the arcade machine is placed on a stable, level surface to prevent tipping.
- Connect the machine to a grounded AC outlet. Do not overload electrical circuits.
- Keep liquids away from the arcade machine to prevent electrical shock or damage.
- Do not attempt to open or repair the machine yourself. Refer all servicing to qualified personnel.
- Supervise children during use.
- The pub stool has adjustable height. Ensure it is locked securely at the desired height before sitting.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Arcade1Up NFL Blitz Legends Arcade Machine cabinet components
- 17-inch LCD screen
- Control panel with 49-way joysticks and buttons
- Light-up marquee
- Custom 13-inch arcade game riser
- Power adapter (Corded Electric)
- Anti-tip over strap
- Assembly hardware and tools (if included)

- NFL Blitz Logo Pub Stool components

4. SETUP AND ASSEMBLY

4.1 Arcade Machine Assembly

Follow the detailed assembly instructions provided in the separate assembly guide included with your product. Ensure all connections are secure and components are correctly aligned. The assembled machine stands approximately 5 feet tall with the riser.



Figure 1: Front view of the assembled Arcade1Up NFL Blitz Legends Arcade Machine.



Figure 2: Side view of the assembled Arcade1Up NFL Blitz Legends Arcade Machine, showing the cabinet artwork.



Figure 3: Opposite side view of the assembled Arcade1Up NFL Blitz Legends Arcade Machine.

4.2 Pub Stool Assembly

Assemble the NFL Blitz Logo Pub Stool according to its separate instructions. Ensure all parts are securely fastened. The stool's height is adjustable from 21.5 inches to 29.5 inches to accommodate different user preferences.

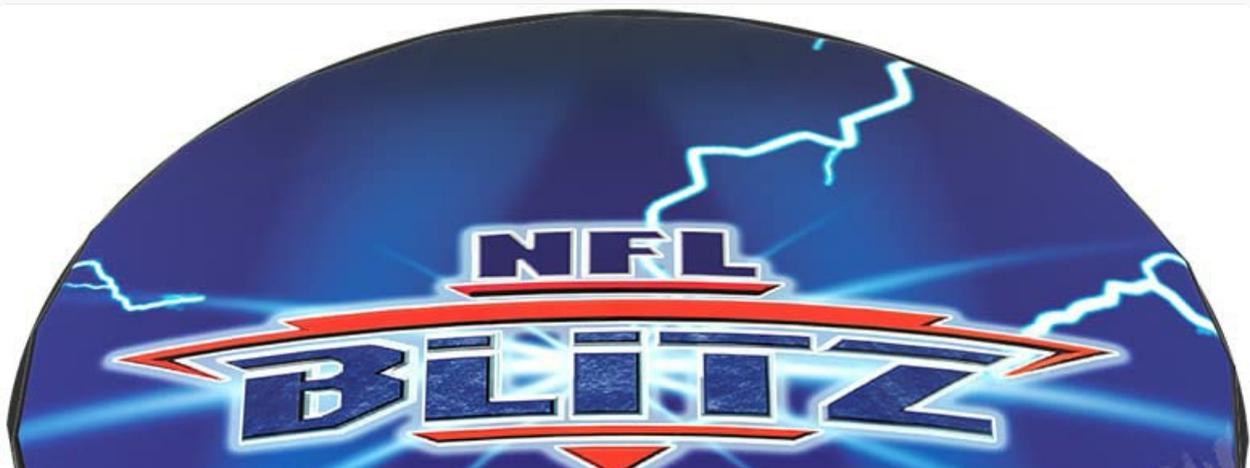




Figure 4: The NFL Blitz Logo Pub Stool, featuring a padded seat and adjustable height.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

1. Connect the power adapter to the arcade machine and then to a wall outlet.
2. Locate the power button on the control panel. Press it to turn the machine on. The screen will display a loading sequence.

3. To power off, press the power button again. The screen will display a 'Powering Off' message.

5.2 Game Selection

The Arcade1Up NFL Blitz Legends machine includes the following games:

- NFL BLITZ
- NFL BLITZ '99
- NFL BLITZ 2000: GOLD EDITION

Use the joysticks and buttons on the control panel to navigate the on-screen menus and select your desired game.

5.3 Controls

The control panel supports up to four players simultaneously. Each player station features a joystick and multiple action buttons for gameplay. Refer to the on-screen prompts or the control panel overlay for specific button functions (e.g., Jump, Tackle, Pass, Change Player, Turbo).

5.4 Volume Adjustment

Volume controls are located on the control panel. Use these buttons to increase or decrease the game audio to your preferred level.

5.5 Online Features (WiFi and Leaderboards)

This arcade machine supports WiFi connectivity for online multiplayer and leaderboards. Follow the on-screen instructions to connect to your wireless network and access these features. Online play allows you to compete with other players and track your scores globally.

6. MAINTENANCE

6.1 Cleaning

- Always power off and unplug the machine before cleaning.
- Wipe down the cabinet, screen, and control panel with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- For the screen, use a screen-specific cleaner and a microfiber cloth to prevent scratches.
- Clean the pub stool with a damp cloth and mild soap if necessary.

6.2 Storage

Store the arcade machine and stool in a dry, temperature-controlled environment. Avoid direct sunlight or extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not power on.	Power cord not connected; outlet not active.	Ensure power cord is securely plugged into the machine and a working outlet. Test the outlet with another device.
No image on screen.	Machine is off; screen connection loose.	Verify the machine is powered on. Check internal screen connections (refer to assembly guide if comfortable).

Problem	Possible Cause	Solution
No sound.	Volume is too low or muted.	Adjust the volume using the controls on the panel.
Controls are unresponsive.	Loose connections; software issue.	Power cycle the machine. Check control panel connections (refer to assembly guide).
Cannot connect to WiFi.	Incorrect password; weak signal; network issue.	Double-check WiFi password. Move machine closer to router. Restart router.

8. SPECIFICATIONS

- **Product Type:** Arcade Machine with Pub Stool
- **Brand:** ARCADE1UP
- **Model:** B0CHRPPPFT
- **Games Included:** NFL BLITZ, NFL BLITZ '99, NFL BLITZ 2000: GOLD EDITION
- **Players:** 4 simultaneous players
- **Screen Type:** 17-inch LCD Display
- **Controller Type:** Joysticks and Buttons
- **Connectivity:** WiFi for online multiplayer and leaderboards
- **Power Source:** Corded Electric
- **Material:** Plastic
- **Arcade Machine Dimensions (with riser):** 25 inches (D) x 31 inches (W) x 60.7 inches (H)
- **Pub Stool Height Adjustment:** 21.5 inches to 29.5 inches

9. WARRANTY AND SUPPORT

For warranty information, technical support, or replacement parts, please refer to the official Arcade1Up website or contact their customer service directly. Keep your proof of purchase for warranty claims.