

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [COSORI](#) /

› [COSORI Food Dehydrator Instruction Manual, Model B0CHRWLM5Z](#)

## COSORI B0CHRWLM5Z

# COSORI Food Dehydrator Instruction Manual

Model: B0CHRWLM5Z

## INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your COSORI Food Dehydrator. Designed for preparing a variety of dried foods, this appliance features precise temperature control, multiple trays, and user-friendly presets. Please read all instructions thoroughly before first use and retain this manual for future reference.

## PRODUCT OVERVIEW

The COSORI Food Dehydrator is engineered for optimal food drying, offering a range of features to simplify the process:

- **Temperature Control:** Adjustable from 95°F to 176°F in 1°F increments, allowing for precise drying of various foods, including jerky (USDA recommended 165°F).
- **Capacity:** Equipped with 5 stainless steel trays, providing ample space for drying meat, fruit, vegetables, and snacks. The compact design (13.9" x 11.3" x 8.9") fits conveniently on most countertops.
- **Presets:** Features 4 user-friendly presets for common items like jerky, fruit, vegetables, and yogurt, with adjustable time and temperature settings.
- **Even Drying:** A rear-mounted fan ensures consistent hot air circulation across all trays, preventing over-drying or uneven moisture.
- **Materials:** Constructed with food-grade stainless steel, ensuring durability and easy cleaning. Includes a fruit roll sheet and mesh screen for diverse drying needs.
- **Timer:** A 48-hour timer with 30-minute increments allows for extended drying cycles and automatic shut-off.



Image: The COSORI Food Dehydrator, showcasing its sleek design and front-facing controls.

## SETUP

1. **Unpacking:** Carefully remove all packaging materials from the dehydrator and its accessories.
2. **Initial Cleaning:** Before first use, wash all stainless steel trays, the fruit roll sheet, and the mesh screen with warm, soapy water. Rinse thoroughly and dry completely. Wipe the interior and exterior of the dehydrator with a damp cloth.
3. **Placement:** Place the dehydrator on a stable, heat-resistant, and level surface. Ensure there is adequate ventilation around the unit, at least 5 inches (12.7 cm) of space from walls or other appliances.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

## OPERATING INSTRUCTIONS

### Preparing Food for Dehydration

- Wash and prepare your food items (e.g., slice fruits, vegetables, or meat to desired thickness).
- Arrange food evenly on the stainless steel trays, ensuring not to overlap pieces for optimal airflow.

- For liquid or sticky items, use the included fruit roll sheet or mesh screen.

## Using the Control Panel

1. **Power On:** Plug in the dehydrator. The display will illuminate.
2. **Select Preset (Optional):** Press one of the preset buttons (JERKY, FRUIT, VEG, YOGURT) for pre-programmed time and temperature settings.
3. **Adjust Temperature:** Press the "TEMP/TIME" button once. Use the "+" and "-" buttons to adjust the temperature from 95°F to 176°F.
4. **Adjust Time:** Press the "TEMP/TIME" button a second time. Use the "+" and "-" buttons to adjust the drying time from 30 minutes to 48 hours.
5. **Start Dehydration:** Press the "START/STOP" button to begin the dehydration process. The fan will activate, and the display will show the remaining time.
6. **Pause/Stop:** To pause or stop the process, press the "START/STOP" button. To resume, press it again.



Image: Close-up of the control panel, highlighting the temperature/time display and preset buttons.

## Monitoring and Completion

- The transparent door allows you to monitor the drying progress without opening the unit.
- When the timer reaches zero, the dehydrator will automatically shut off and beep.
- Allow food to cool completely before storing. Store dehydrated foods in airtight containers in a cool, dark place.

Your browser does not support the video tag.

Video: A brief product overview demonstrating the dehydrator's features and operation.

## MAINTENANCE AND CLEANING

### Daily Cleaning

1. Unplug the dehydrator and allow it to cool completely before cleaning.
2. Remove all trays and accessories.
3. Wash the stainless steel trays, fruit roll sheet, and mesh screen with warm, soapy water. Rinse and dry thoroughly. Note: The item is not dishwasher safe.
4. Wipe the interior and exterior of the dehydrator with a damp cloth. For stubborn stains, use a mild detergent. Do not immerse the main unit in water.

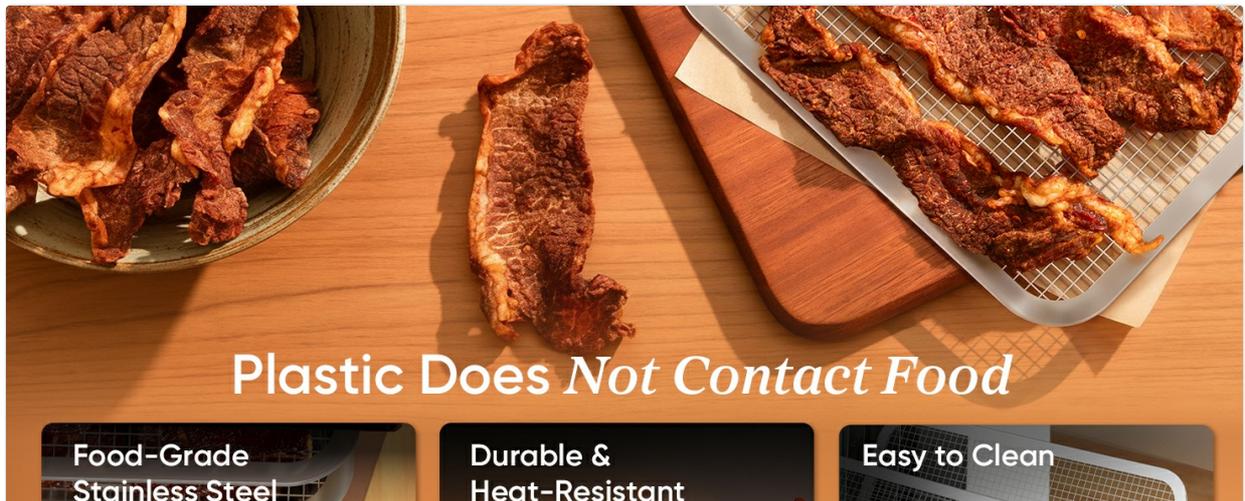


Image: Illustration of the stainless steel trays, emphasizing their durability and ease of cleaning.

### Storage

- Ensure the dehydrator is clean and dry before storing.
- Store the appliance in a cool, dry place away from direct sunlight.

## TROUBLESHOOTING

If you encounter any issues with your COSORI Food Dehydrator, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dehydrator does not turn on.	Not plugged in; power outlet malfunction; unit malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.

Problem	Possible Cause	Solution
Food is not drying evenly.	Overcrowded trays; uneven food thickness.	Ensure food is spread in a single layer without overlapping. Slice food to a consistent thickness.
Dehydrator is too loud.	Normal fan operation; unit not on a stable surface.	A low humming sound from the fan is normal. Ensure the unit is on a flat, stable surface to minimize vibration.

## SPECIFICATIONS

- **Brand:** COSORI
- **Model:** B0CHRWLM5Z
- **Material:** Stainless Steel
- **Color:** Bright-Silver
- **Wattage:** 480 watts
- **Voltage:** 110 Volts
- **Product Dimensions:** 13.9"D x 11.3"W x 8.9"H
- **Number of Trays:** 5
- **Operating Frequency:** 60 Hz
- **Temperature Range:** 95-176°F
- **Item Weight:** 10.8 Pounds
- **Included Components:** 1 x Stainless Steel Food Dehydrator, 5 x Stainless Steel Trays, 1 x Fruit Roll Sheet, 1 x Mesh Screen, 1 x Recipe Book, 1 x User Manual, 1 x QSG

## WARRANTY AND SUPPORT

Your COSORI Food Dehydrator comes with a **2-year manufacturer's warranty**. For warranty claims, technical support, or any product-related inquiries, please visit the official COSORI Store or contact their customer service directly.

For additional information and products, visit the [COSORI Store](#).