

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SoBuy](#) /

› [SoBuy Wall Mounted Entryway Shelf with 2 Drawers and 5 Hooks, Black, Model FRG178-SCH User Manual](#)

SoBuy FRG178-SCH

SoBuy Wall Mounted Entryway Shelf

Model: FRG178-SCH

INTRODUCTION

Thank you for choosing the SoBuy Wall Mounted Entryway Shelf, Model FRG178-SCH. This versatile furniture piece is designed to enhance organization and add a touch of elegance to your entryway, hallway, bathroom, kitchen, or office. It features two convenient drawers and five sturdy hooks for storing various items such as coats, bags, scarves, and towels. This manual provides essential information for safe assembly, installation, and proper use of your new shelf. Please read all instructions carefully before proceeding.

SAFETY INFORMATION

WARNING:

- Always follow the assembly instructions provided to ensure secure wall installation. Improper installation can lead to injury or damage to the product and property.
- Do not exceed the maximum load capacity of 22.5 kg (49.6 lbs). Overloading can cause the shelf to detach from the wall, resulting in accidents or damage.
- Handle all components with care during assembly to prevent damage or personal injury.
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Ensure the wall material is suitable for mounting and can support the weight of the shelf and its contents. If unsure, consult a professional.

PACKAGE CONTENTS

Before beginning assembly, please verify that all parts listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Wall Mounted Shelf Unit (1)
- Drawers (2)
- Hooks (5)
- Mounting Hardware (screws, wall anchors, etc.)
- Assembly Instructions Manual (this document)



Figure 1: Rear view of the shelf, illustrating the mounting points for wall installation.

SPECIFICATIONS

Feature	Detail
Model Number	FRG178-SCH
Dimensions (L x W x H)	60 x 15 x 27 cm (23.6 x 5.9 x 10.6 inches)
Material	E1 Grade MDF Wood, Black Lacquered
Color	Black
Weight	4.2 kg (9.26 lbs)
Maximum Load Capacity	22.5 kg (49.6 lbs)
Number of Drawers	2
Number of Hooks	5
Installation Method	Wall Mounted



Figure 2: Dimensional drawing of the shelf, indicating key measurements.

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly of the SoBuy Wall Mounted Entryway Shelf is straightforward. Please follow these steps carefully. It is recommended to have two people for wall mounting.

Tools Required (Not Included):

- Pencil
- Measuring Tape
- Drill
- Spirit Level
- Hammer (for wall anchors)
- Screwdriver (Phillips head)

Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Drawers:** Follow the numbered instructions provided in the separate assembly guide for the drawers. Ensure all screws are tightened securely.
3. **Attach Hooks:** Secure the five hooks to the designated positions on the lower part of the shelf using the provided screws.
4. **Mark Wall for Mounting:**
 - Determine the desired height and location for your shelf.
 - Hold the shelf against the wall and use a spirit level to ensure it is perfectly horizontal.
 - Mark the positions of the mounting holes on the wall with a pencil.
5. **Drill Pilot Holes:** Using an appropriate drill bit for your wall type and the provided wall anchors, drill pilot holes at the marked positions.
6. **Insert Wall Anchors:** Gently tap the wall anchors into the drilled holes until they are flush with the wall surface.
7. **Mount the Shelf:** Align the shelf's mounting holes with the wall anchors. Insert the mounting screws through the shelf and into the anchors. Tighten the screws firmly but do not overtighten.
8. **Insert Drawers:** Slide the assembled drawers into their respective compartments.



Figure 3: The fully assembled and mounted shelf, ready for use.



Figure 4: Detail of the five hooks, ideal for hanging various items.

OPERATING INSTRUCTIONS (USAGE)

The SoBuy Wall Mounted Entryway Shelf is designed for convenient storage and organization.

- **Hooks:** Use the five hooks to hang coats, jackets, scarves, hats, bags, or towels. Distribute weight evenly across the hooks.
- **Drawers:** The two drawers are suitable for storing smaller items such as keys, wallets, gloves, mail, or other entryway essentials.
- **Top Shelf:** The flat top surface can be used to display decorative items, small plants, or to temporarily place items like sunglasses or phones.

Important:

- Do not place excessively heavy items on the top shelf or in the drawers.
- Avoid hanging sharp or abrasive objects directly on the lacquered surface to prevent scratches.



Figure 5: An open drawer demonstrating storage capacity for small items.

MAINTENANCE

To ensure the longevity and appearance of your SoBuy Wall Mounted Entryway Shelf, follow these maintenance guidelines:

- **Cleaning:** Wipe the surface with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or scouring pads, as these can damage the lacquered finish.
- **Dusting:** Regularly dust the shelf with a dry, soft cloth.
- **Inspection:** Periodically check all mounting screws and hardware to ensure they remain tight. Retighten if necessary.
- **Avoid Moisture:** While suitable for bathrooms, avoid prolonged exposure to excessive moisture. Wipe up any spills immediately.
- **Sunlight:** Avoid placing the shelf in direct sunlight for extended periods, as this may cause fading or discoloration over time.

TROUBLESHOOTING

If you encounter any issues with your SoBuy Wall Mounted Entryway Shelf, please refer to the following

common problems and solutions:

Problem	Possible Cause	Solution
Shelf feels wobbly or loose after installation.	Mounting screws are not fully tightened, or wall anchors are not secure.	Carefully retighten all mounting screws. If the issue persists, the wall anchors may need to be re-installed or replaced with more suitable ones for your wall type. Ensure the wall material can support the weight.
Drawers do not slide smoothly.	Drawers were not assembled correctly, or there is an obstruction.	Check the drawer assembly according to the instructions. Ensure nothing is blocking the drawer slides.
Scratches or marks on the surface.	Abrasive cleaning, sharp objects, or impact during handling.	Use a soft cloth for cleaning. Avoid sharp objects. Minor scratches may be touched up with a suitable furniture repair pen in black.
Hooks are loose.	Screws securing the hooks are loose.	Tighten the screws holding the hooks in place.

WARRANTY AND SUPPORT

SoBuy provides a customer service tailored to your needs, available before and after your purchase. For any questions, missing parts, or issues not covered in this manual, please contact SoBuy customer support directly.

While specific warranty details are not provided in this document, SoBuy generally offers support for product defects. Please retain your proof of purchase for any warranty claims.

For further assistance, please visit the official SoBuy store or contact their customer service through the platform where you made your purchase.

SoBuy Brand Store: [Visit SoBuy Store](#)