



Manuals.plus /

› **Bosch** /

› Bosch SMI4HVS00E Dishwasher Instruction Manual

Bosch SMI4HVS00E

Bosch SMI4HVS00E Dishwasher

INSTRUCTION MANUAL

[Overview](#)

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

Product Overview

The Bosch SMI4HVS00E is a partially integrated dishwasher designed for efficient and convenient dishwashing. It features a range of programs and special functions to cater to various cleaning needs, combined with smart connectivity via the Home Connect app.

Key highlights include:

- **Extra Drying:** An optional function for thorough drying, especially for difficult-to-dry items.
- **3-fold Rackmatic:** The upper basket can be adjusted in height by up to 5 cm in 3 stages, even when fully loaded.
- **VarioDrawer:** Provides extra space for larger cutlery items or smaller dishes.
- **Silence on Demand:** Noise reduction for up to 30 minutes, controllable via the Home Connect App.
- **Silence Program:** Automatically reduces operating noise to the lowest level.



Figure 1: Front view of the Bosch SMI4HVS00E dishwasher.

Setup and Installation

Proper installation is crucial for the optimal performance and longevity of your Bosch dishwasher. This model is designed for partial integration into your kitchen cabinetry.

Dimensions and Placement

Ensure that the installation space meets the required dimensions for the appliance. The dishwasher measures 81.5 cm (H) x 59.8 cm (W) x 57.3 cm (D).


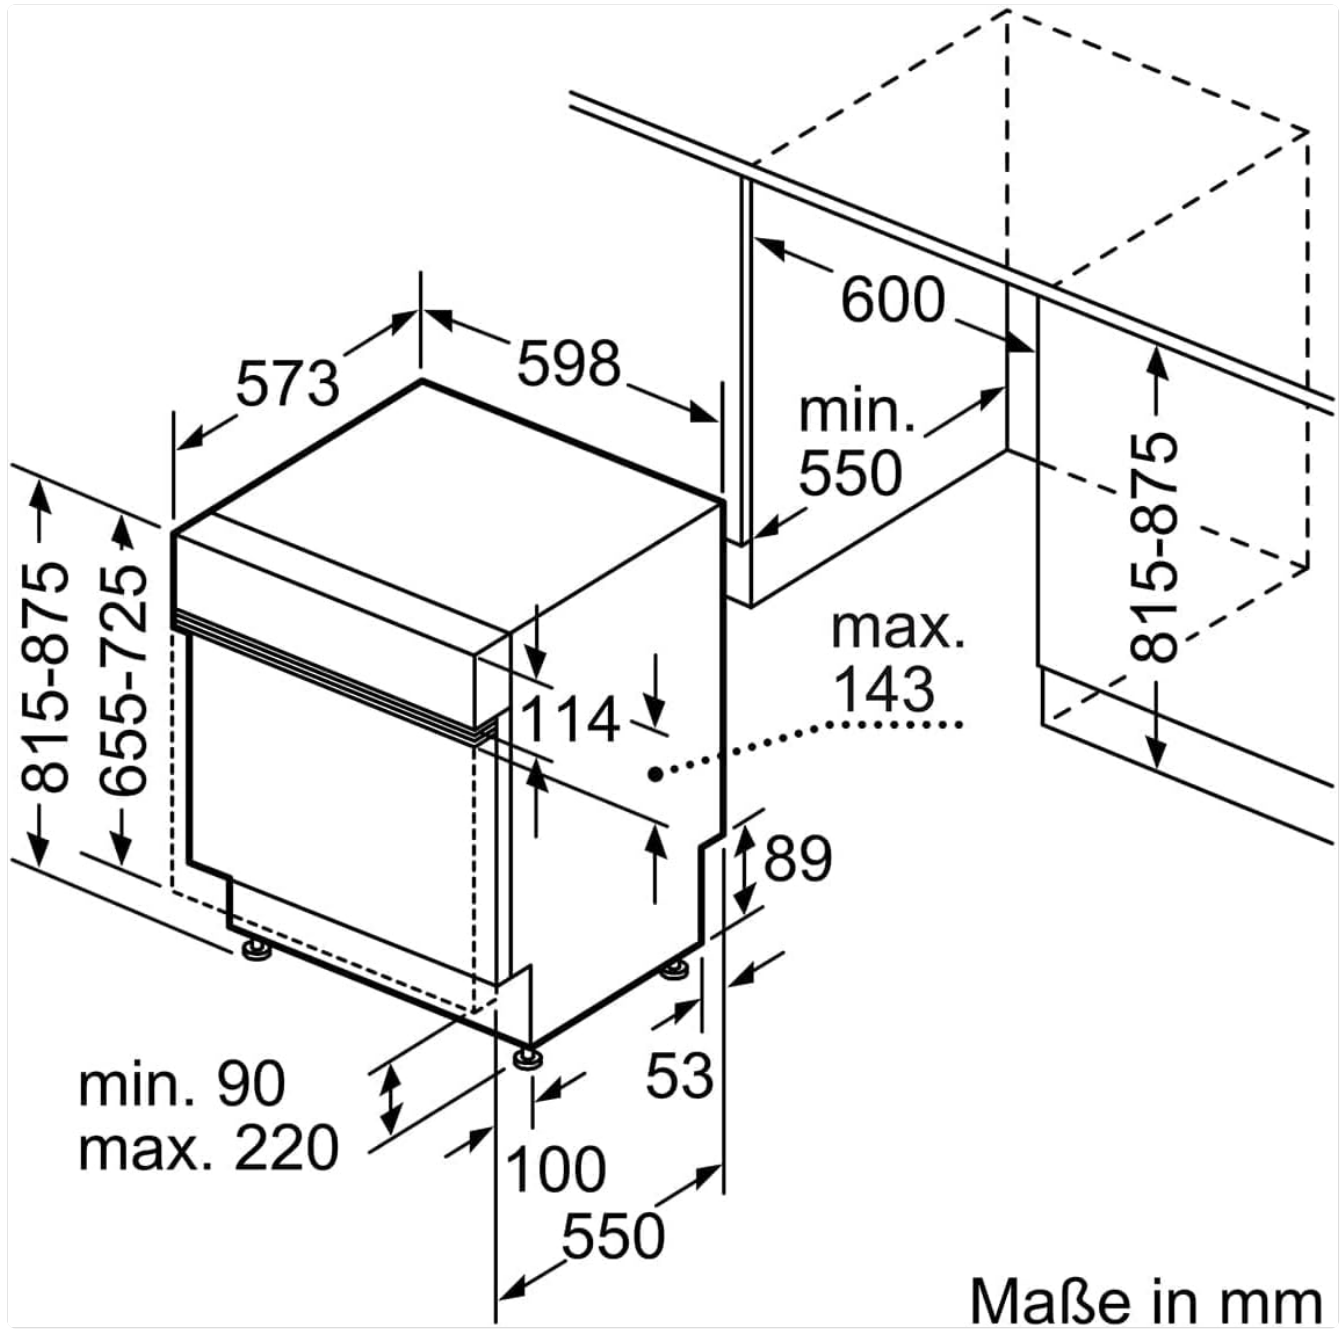


Figure 2: Detailed dimensions for installation (all measurements in mm).

Connections

Connect the dishwasher to the water supply (inlet hose), drainage (drain hose), and power supply (power cable). Ensure all connections are secure and free from leaks.

Maße in mm

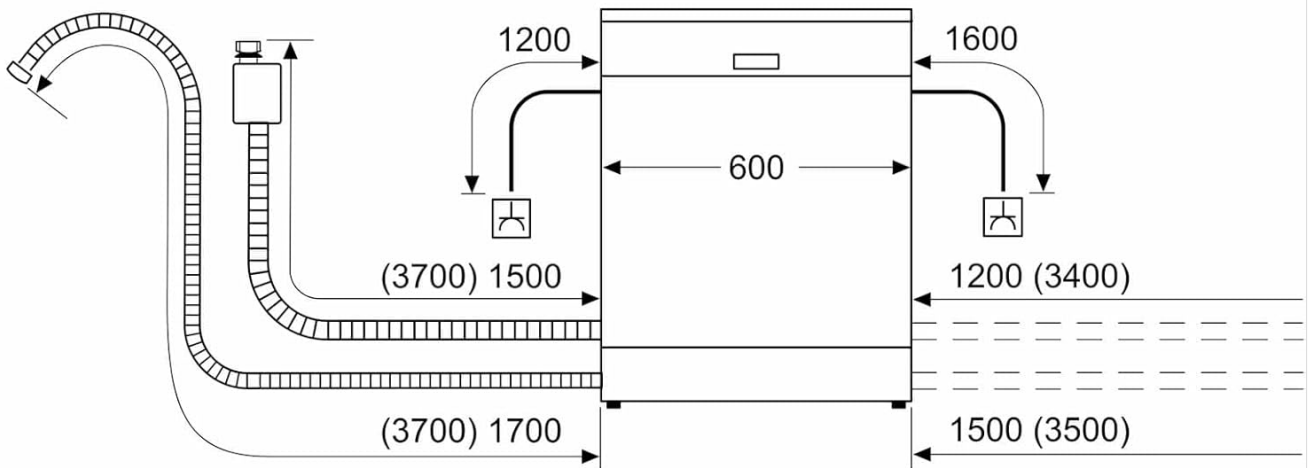

⚡ Steckdose

() Werte mit Verlängerungssatz

Figure 3: Connection points for water inlet, drain, and power supply.

Included Components

The product package includes the user manual, drain hose, inlet hose, and power cable. Please ensure all components are present before beginning installation.

Operating Your Dishwasher

Your Bosch SMI4HVS00E dishwasher offers a variety of programs and functions for optimal cleaning results.

Control Panel Overview

The control panel provides access to all programs and settings. It features a plain text label display and electronic remaining time display.



Dieses Szenebild ist beispielhaft. Alle Informationen entnehmen Sie bitte der Artikelbeschreibung.

Figure 4: Detailed view of the control panel.

Wash Programs

Select the appropriate program based on the type and soil level of your dishes:

- **Eco 50 °C:** Energy-efficient program for normally soiled dishes.
- **Auto 45-65 °C:** Automatically adjusts cleaning based on soil level.
- **Intensive 70 °C:** For heavily soiled pots and pans.
- **1h 65 °C:** Quick program for normally soiled dishes.
- **Silence 50 °C:** Operates at a reduced noise level.
- **Favorite:** Customizable program.
- **Pre-rinse:** For rinsing dishes before a full wash cycle.

Special Functions

Enhance your wash cycle with these special functions:

- **Remote Start:** Initiate or manage cycles remotely via the Home Connect app.
- **Extra Drying:** Provides a more thorough drying result.
- **Half Load:** Optimizes water and energy consumption for smaller loads.
- **SpeedPerfect+:** Reduces program duration while maintaining cleaning performance.

Loading the Dishwasher

The VarioFlex basket system and VarioDrawer offer flexible loading options:


- **VarioFlex Basket System:** Provides flexibility for various dish sizes.
- **Rackmatic:** Adjust the height of the upper basket to accommodate taller items below or above.
- **VarioDrawer:** A dedicated third loading level for cutlery and small kitchen utensils.
- Foldable tines in both upper and lower baskets (4x in lower) for versatile loading.

- Cup shelves (2 pieces) in the upper basket.



Dieses Szenebild ist beispielhaft. Alle Informationen entnehmen Sie bitte der Artikelbeschreibung.

Figure 5: Rackmatic feature for adjustable upper basket height.

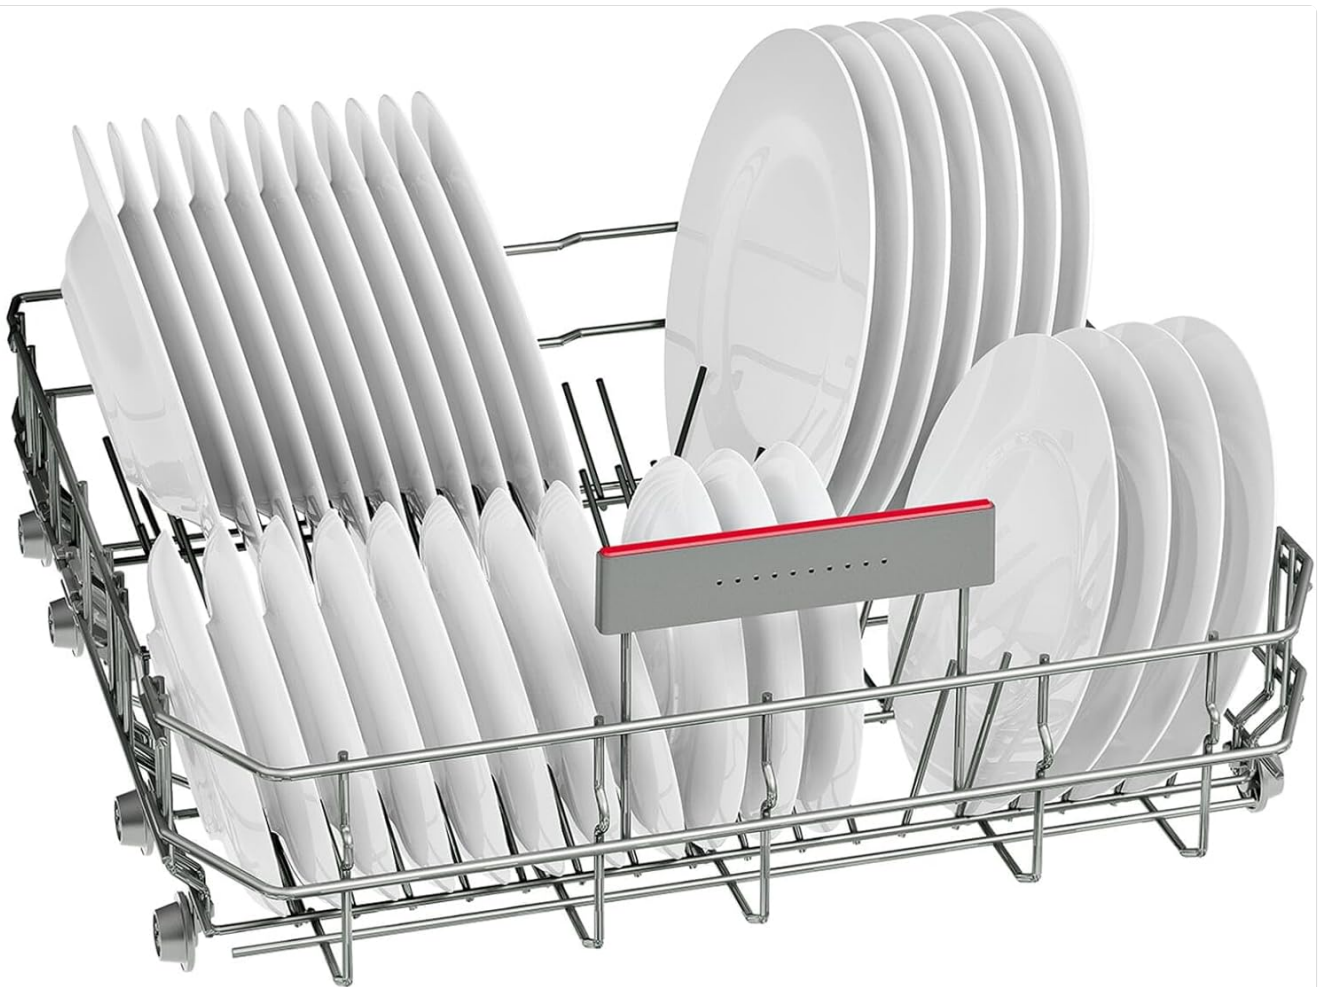

Dieses Szenebild ist beispielhaft. Alle Informationen entnehmen Sie bitte der Artikelbeschreibung.

Figure 6: VarioDrawer for cutlery and small items.

Maintenance and Care

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

Cleaning the Filter System

The dishwasher features a self-cleaning filter with a 3-wave filter system. Periodically check and clean the filter to prevent blockages and ensure efficient washing.

Machine Care Program

Utilize the dedicated machine care program to clean and descale the interior of your dishwasher, maintaining hygiene and performance.

AquaStop Feature

The AquaStop system provides a Bosch guarantee against water damage throughout the lifetime of the appliance. This feature helps prevent leaks and ensures safety.



AquaStop

Kein Auslaufen mehr beim Geschirrspüler.

Figure 7: AquaStop system for water damage protection.

Troubleshooting

If you encounter issues with your dishwasher, refer to the following common troubleshooting tips before contacting service.

Common Issues and Solutions

- **Dishes not clean:** Check filter for blockages, ensure spray arms are not obstructed, verify proper loading, use correct detergent and rinse aid, select appropriate program.
- **Water not draining:** Check drain hose for kinks or blockages, clean the filter system.
- **Dishwasher not starting:** Ensure door is fully closed, check power supply, verify delayed start setting.
- **Unusual noises:** Check for foreign objects in the pump or spray arms, ensure dishes are not rattling against each other.

Error Codes

If an error code appears on the display, consult the full user manual for specific meanings and recommended actions. Often, turning the appliance off and on again can resolve minor electronic glitches.

Technical Specifications

Detailed specifications for the Bosch SMI4HVS00E dishwasher:

Feature	Value
Model Name	SMI4HVS00E
Form Factor	Partially Integrated
Dimensions (H x W x D)	81.5 cm x 59.8 cm x 57.3 cm
Item Weight	34.5 Kilograms
Voltage	240 Volts
Capacity	14 Place Settings
Energy Efficiency Class	D
Energy/Water Consumption	85 kWh / 9 liters (per 100 cycles / per cycle)
Noise Level	46 dB (A) re 1 pW
Noise in Silence Program	45 dB (A) re 1 pW
Control Type	Touch
Material	Stainless Steel
Color	Stainless Steel
Special Features	Flexible loading and smart control via Home Connect app.

Warranty and Support

Manufacturer Warranty

The Bosch SMI4HVS00E dishwasher comes with a **2-year manufacturer warranty**. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, spare parts, or warranty service, please contact Bosch customer support. Refer to the contact information provided in your product documentation or visit the official Bosch website for your region.

Note: Spare parts availability information is not available at this time. Software updates are not guaranteed.

