

TECKNET WD996

TECKNET Wireless Doorbell User Manual

Model: WD996

Brand: TECKNET

INTRODUCTION

Thank you for choosing the TECKNET Wireless Doorbell. This kit includes a waterproof transmitter (doorbell button) and two portable receivers, designed to provide a reliable and convenient notification system for your home or office. With a long wireless range, multiple chime options, and adjustable volume, this doorbell system offers flexibility and ease of use. Please read this manual thoroughly before installation and operation to ensure proper use and longevity of the product.

PACKAGE CONTENTS

- 1 x Wireless Doorbell Transmitter (Button)
- 2 x Wireless Doorbell Receivers
- Mounting Hardware (Screws, Anchors, Adhesive Tape)
- 1 x CR2032 Battery (pre-installed in transmitter)
- User Manual

Note: AA batteries for receivers are not included and must be purchased separately.

PRODUCT OVERVIEW

The TECKNET Wireless Doorbell system consists of a push-button transmitter and two chime receivers. The transmitter is IP66 waterproof, suitable for outdoor installation, and the receivers feature RGB lighting and multiple chime options.



Image: The complete TECKNET Wireless Doorbell kit, showing the two square receivers with RGB light rings and the rectangular doorbell button transmitter.

Key Features:

- **Extended Battery Life:** Up to 4.5 years for the transmitter, with low battery reminder.
- **Portable & Wireless:** No wiring or electrical sockets required for receivers.
- **RGB LED Light:** Visual notification with customizable light effects.
- **60 Chimes & 5 Volume Levels:** Wide selection of melodies and adjustable sound output (0-110dB).
- **Silent Mode:** Option to mute the chime for quiet environments.
- **IP66 Waterproof Transmitter:** Durable and weather-resistant for outdoor use.
- **Long Wireless Range:** Up to 1300 ft (400m) in open areas.
- **Dual Receivers:** Ensures stable signal and wider coverage.

Kabellose Türklingel, die bei Ihnen bleibt



Büro



Haus



Lagerhaus



Garten

Image: Examples of where the wireless doorbell can be used, including office, home, warehouse, and garden settings.

SETUP AND INSTALLATION

1. Transmitter (Doorbell Button) Installation

1. **Choose Location:** Select a flat, vertical surface near your door. Ensure the surface is clean and dry.
2. **Mounting Options:**

- **Adhesive Tape:** Peel off one side of the double-sided adhesive tape and stick it to the back of the transmitter. Peel off the other side and firmly press the transmitter onto the desired surface for at least 30 seconds.
- **Screws:** Open the back cover of the transmitter. Mark the positions for drilling holes using the back cover as a template. Drill two holes, insert wall anchors (if needed), and secure the transmitter's back cover with the provided screws. Snap the front part of the transmitter onto the secured back cover.

3. **Battery Check:** The transmitter comes with a pre-installed CR2032 battery. Ensure the plastic insulation tab is removed before use.

IP66 Wasserdicht und Dauerhaft Sender



IP66 Wasserdicht

 **-20°C**   **60°C**
(-4°F bis 140°F)
Betriebstemperatur

Image: Close-up of the doorbell transmitter highlighting its IP66 waterproof rating and operating temperature range of -20°C to 60°C.

2. Receiver Setup

1. **Insert Batteries:** Open the battery compartment on the back of each receiver. Insert 3 x AA batteries into each receiver, ensuring correct polarity (+/-). Close the battery compartment.
2. **Placement:** Place the receivers in desired locations within your home or office. They can be placed on a table, shelf, or mounted on a wall. Consider central locations for optimal sound distribution.

Tragbare und Kabellose Türklingel

Sie werden nie wieder Besucher verpassen



Keine Steckdose erforderlich



Image: Examples of receiver placement in various indoor settings, demonstrating its portability and lack of need for a power outlet.

2 Empfänger sorgen für ein stabileres Signal



Signalverbesserung



Lauterer Klang



Umfangreiche Nutzung



Image: Diagram illustrating the use of two receivers to extend coverage over a 400m range, ensuring a stable signal throughout a large property.

3. Pairing (If Needed)

The transmitter and receivers are typically pre-paired at the factory. If they do not connect automatically, or if you wish to pair additional transmitters/receivers, follow these steps:

1. Press and hold the volume button on the receiver for 5 seconds until you hear a "ding" sound and the LED indicator flashes. This indicates the receiver is in pairing mode.
2. Within 5 seconds, press the doorbell transmitter button. The receiver will chime, indicating successful pairing.
3. Repeat for any additional receivers or transmitters.

OPERATING INSTRUCTIONS

1. Changing Chime Tunes

The doorbell offers 60 different chime melodies. To change the chime:

- Press the "Music" button (note icon) on the side of the receiver to cycle through the available melodies.
- Once you find your desired melody, press the doorbell transmitter button to confirm and set it.

2. Adjusting Volume

There are 5 adjustable volume levels, ranging from 0dB (silent) to 110dB. To adjust the volume:

- Press the "Volume" button (speaker icon) on the side of the receiver to cycle through the volume levels.
- Stop at your desired volume level.

3. Silent Mode (Mute)

To activate silent mode (0dB), repeatedly press the "Volume" button until the volume reaches its lowest setting. In silent mode, the receiver will only provide a visual RGB light notification when the doorbell is pressed.



Lautloser Modus



0-110 dB einstellbar
Treffen Sie Ihre Wahl



0dB



25dB



55dB



85dB



110dB

Image: Visual representation of the silent mode feature and various volume levels (0dB, 25dB, 55dB, 85dB, 110dB) suitable for different environments.

4. RGB Light Indicator

The receivers feature an RGB LED light ring that illuminates when the doorbell is pressed, providing a visual alert. This is particularly useful in noisy environments or for individuals with hearing impairments.

RGB LED Licht



RGB
Lichtanzeige



60
Klingeltöne



5
Lautstärkestufen



Lautloser
Modus



Image: A receiver displaying its RGB LED light, alongside icons representing 60 ringtones, 5 volume levels, and silent mode.

MAINTENANCE

1. Battery Replacement

- **Transmitter (Button):** The transmitter uses a CR2032 battery, which can last up to 4.5 years. When the battery is low, the doorbell's performance may degrade. To replace, open the back cover, remove the old battery, and insert a

new CR2032 battery with the correct polarity.

- **Receivers:** Each receiver requires 3 x AA batteries. When the battery is low, the receiver may indicate this visually (e.g., flashing light) or with reduced performance. Open the battery compartment, replace the old batteries with new AA batteries, ensuring correct polarity.

Ultralange Lebensdauer von bis zu 4,5 Jahren

Kein häufiger Batteriewechsel erforderlich



Erinnerung an niedrigen Batteriestand

AA-Batterien nicht im Lieferumfang enthalten

Image: Graphic illustrating the long battery life of up to 4.5 years for the doorbell system and a visual reminder for low battery status.

2. Cleaning

Wipe the doorbell transmitter and receivers with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may

damage the surface or internal components. The transmitter is IP66 waterproof, but avoid submerging it in water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Doorbell does not chime.	- Low or dead batteries in transmitter or receiver. - Receiver is in silent mode. - Transmitter and receiver are not paired. - Too far apart or too many obstacles.	- Replace batteries in both units. - Adjust receiver volume. - Re-pair the transmitter and receiver (refer to Setup section). - Move receiver closer to transmitter or reduce obstacles.
Short wireless range.	- Interference from other electronic devices. - Thick walls or metal structures. - Low battery in transmitter.	- Relocate receivers away from interference sources. - Adjust receiver placement for better signal reception. - Replace transmitter battery.
Receiver light flashes but no sound.	Receiver is in silent mode (0dB volume).	Increase the volume level on the receiver.

SPECIFICATIONS

Feature	Detail
Model Number	WD996
Brand	TECKNET
Transmitter Battery	1 x CR2032 (included)
Receiver Battery	3 x AA (per receiver, not included)
Wireless Range	Up to 1300 ft / 400m (open air)
Chime Tones	60
Volume Levels	5 (0dB to 110dB)
Waterproof Rating (Transmitter)	IP66
Operating Temperature	-20°C to 60°C (-4°F to 140°F)
Receiver Dimensions	8.1 x 8.1 x 3.6 cm
Item Weight	240 g (total package)

WARRANTY AND SUPPORT

TECKNET products come with a standard warranty. For detailed warranty information, technical support, or customer service inquiries, please visit the official TECKNET website or contact their customer support team directly. Please have your product model number (WD996) and purchase details ready when contacting support.

For more information, visit: [TECKNET Official Website](#)

© 2024 TECKNET. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question