

[manuals.plus](#) /› [COOPERS](#) /› [COOPERS Android 15 Tablet CP20PRO User Manual](#)

COOPERS CP20PRO

COOPERS Android 15 Tablet CP20PRO User Manual

Model: CP20PRO

INTRODUCTION

This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your COOPERS Android 15 Tablet CP20PRO. Please read this manual thoroughly before using your tablet to ensure proper function and longevity.

WHAT'S IN THE Box

Verify that all items are present in the package:

- COOPERS Android 15 Tablet CP20PRO
- Wireless Keyboard
- Wireless Mouse
- Protective Case
- Stylus
- Type-C Cable
- User Manual (this document)



Image: The COOPERS Android 15 Tablet CP20PRO displayed with its full set of accessories, including a pink wireless keyboard, mouse, stylus, protective case, and charging cable.

SETUP

1. Charging the Tablet

Before first use, fully charge the tablet using the provided Type-C cable and a compatible power adapter (not included). The charging port is typically located on the side of the tablet.

2. Powering On/Off

- **To Power On:** Press and hold the Power button (usually on the side) until the screen lights up.
- **To Power Off:** Press and hold the Power button, then select "Power off" from the options on the screen.
- **To Restart:** Press and hold the Power button, then select "Restart" from the options.

3. Initial Setup

Upon first power-on, follow the on-screen prompts to:

- Select your language.
- Connect to a Wi-Fi network (2.4G or 5G supported).

- Sign in with your Google account or create a new one. This is necessary to download apps from the Google Play Store.
- Set up screen lock (PIN, pattern, or password).

4. Connecting Accessories

The COOPERS CP20PRO tablet comes with a wireless keyboard, mouse, and stylus for enhanced productivity and interaction.

Wireless Keyboard & Mouse:

1. Ensure the keyboard and mouse are charged or have fresh batteries.
2. Turn on the keyboard and mouse (usually a switch on the device).
3. On your tablet, go to **Settings > Connected devices > Bluetooth**.
4. Turn on Bluetooth and scan for available devices.
5. Select the keyboard and mouse from the list to pair them. Follow any on-screen prompts.

Stylus:

The included stylus is typically a passive stylus and does not require pairing. Simply use it to interact with the touch screen as you would with your finger.



Image: A user interacting with the COOPERS Android 15 Tablet CP20PRO using the included wireless keyboard and mouse, demonstrating its 2-in-1 functionality.

OPERATING THE TABLET

1. Navigation and Gestures

The Android 15 operating system uses intuitive touch gestures:

- **Tap:** Select an item or open an app.
- **Tap & Hold:** Access contextual menus or move icons.
- **Swipe:** Scroll through pages, navigate between home screens, or dismiss notifications.
- **Pinch-to-Zoom:** Enlarge or shrink content like photos and web pages.

2. Display Settings

Adjust screen brightness, font size, and eye protection mode for optimal viewing comfort. Access these settings via **Settings > Display**.

10.1 inch IPS Display

 **10.1 inch**
Touch Screen

 **1280*800**
Resolution

 **16:10**
Golden ratio

 **Vivid IPS**
Display



Widevine L1 Support

Widevine L1 support enables tablet to easily access FHD and UHD videos in high-resolution streaming media. Such as Netflix, Amazon Prime Video, Hulu.etc



Image: The tablet's 10.1-inch IPS display showcasing its 1280x800 resolution and Widevine L1 support for streaming services.

3. Connecting to Wi-Fi

To connect to the internet, go to **Settings > Network & internet > Wi-Fi**. Select your desired network and enter the password if required. The tablet supports both 2.4GHz and 5GHz Wi-Fi bands.

4. Installing Applications

Your tablet is Google GMS certified, allowing full access to the Google Play Store. Open the **Play Store** app, search for desired applications, and tap "Install" to download them.

GMS certified with stable and smooth service and many your favourite apps



Android™ 15



1280*800



2.0/8.0MP



18GB RAM



128GB ROM



2.4G+5G+WIFI6



Image: The tablet's interface displaying the Google Play Store, indicating access to a wide range of applications.

5. Camera Usage

The tablet features a 2MP front camera and an 8MP rear camera. Open the **Camera** app to take photos or record videos. Tap the screen to focus and press the shutter button to capture.

Dual Camera

 **2MP**
Front Camera

 **8MP**
Rear Camera



Record Beautiful Moments



Image: Detail of the tablet's 8MP rear camera and an example of a photo taken with the tablet, showing its ability to capture moments.

6. Storage Management

The tablet comes with 128GB of internal storage, expandable up to 2TB via a microSD card (not included). To manage storage, go to **Settings > Storage**. You can view used space and free up storage by uninstalling apps or deleting files.



Image: The tablet highlighting its 128GB ROM, 18GB RAM, and expandable storage, suitable for various applications.

MAINTENANCE

1. Cleaning

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid abrasive materials or harsh chemicals. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.

2. Software Updates

Regularly check for and install software updates to ensure optimal performance, security, and access to new features. Go to **Settings > System > System update**.

3. Battery Care

- Avoid extreme temperatures, as they can degrade battery life.
- Do not let the battery completely drain frequently.
- Use the provided Type-C cable for charging.

TROUBLESHOOTING

Tablet Not Turning On

- Ensure the tablet is sufficiently charged. Connect it to a charger for at least 30 minutes.
- Press and hold the Power button for 10-15 seconds to force a restart.

Wi-Fi Connection Issues

- Toggle Wi-Fi off and on in **Settings**.
- Restart your Wi-Fi router.
- Forget the network and reconnect.
- Ensure you are within range of the Wi-Fi signal.

Apps Crashing or Freezing

- Close and reopen the app.
- Clear the app's cache: **Settings > Apps > [App Name] > Storage & cache > Clear cache**.

- Update the app from the Google Play Store.
- Restart the tablet.

Slow Performance

- Close unnecessary background apps.
- Clear cached data regularly.
- Ensure sufficient free storage space.
- Restart the tablet periodically.

SPECIFICATIONS

Feature	Detail
Model	CP20PRO
Operating System	Android 15
Screen Size	10.1 Inches IPS Touch Screen
Screen Resolution	1280 x 800 Pixels
Processor	2.0 GHz Quad-core
RAM	18GB (4GB fixed, 14GB virtual)
Internal Storage (ROM)	128GB
Expandable Storage	Up to 2TB via microSD card
Wireless Connectivity	2.4G/5G WiFi (802.11ac), Bluetooth
Cameras	Front: 2MP, Rear: 8MP
Battery	6000mAh (Average 8 hours life)
Dimensions (LxWxH)	9.5 x 0.3 x 6.5 inches
Weight	2.66 pounds

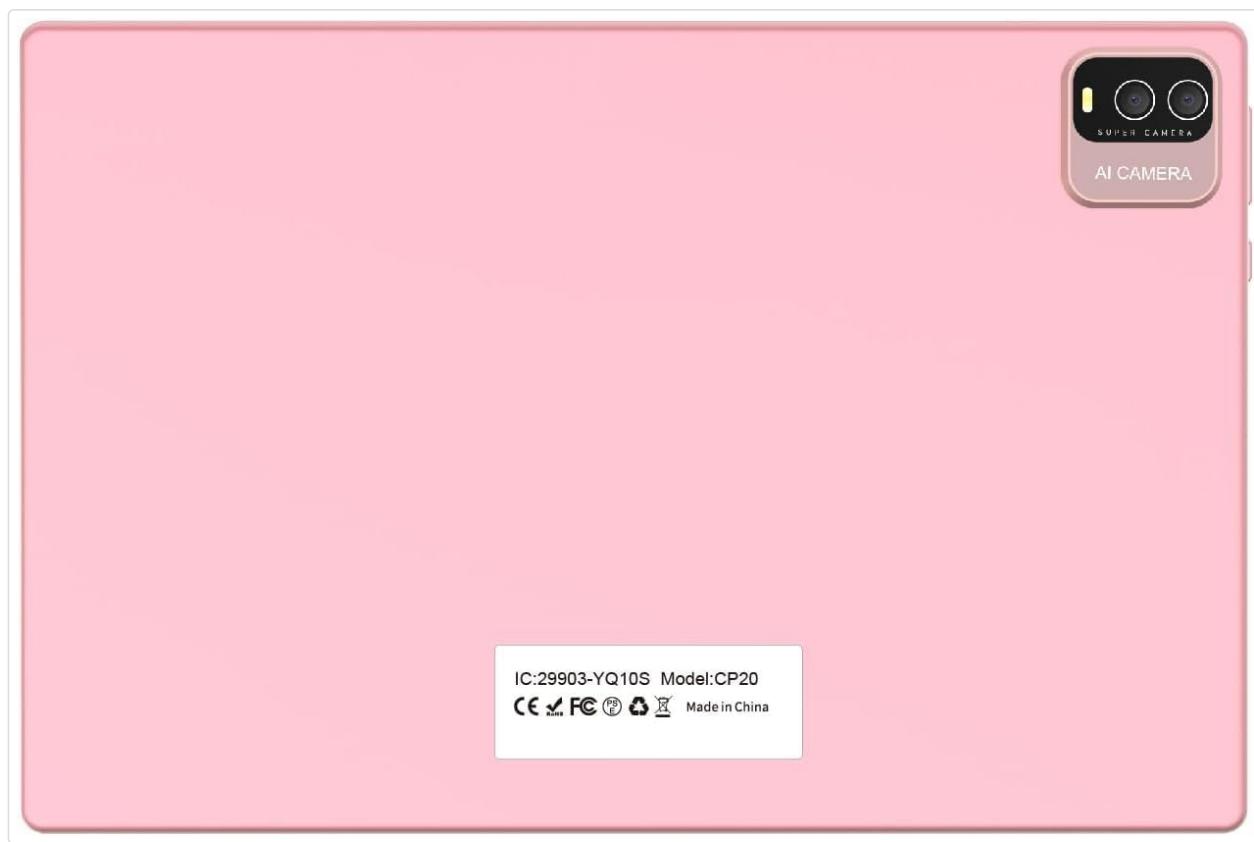


Image: The rear view of the COOPERS Android 15 Tablet CP20PRO, displaying its model number and camera design.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact COOPERS customer service directly. Details are typically available on the manufacturer's official website or through your retailer.


Keep your purchase receipt as proof of purchase for warranty claims.

© 2025 COOPERS. All rights reserved.

Related Documents - CP20PRO

<p>User Manual (Simplified Version)</p> <p>Start preparation</p> <ol style="list-style-type: none">Press and hold the power button to enter the setting screen after powering on.Select the screen language and select the language option you need.Turn on the Wi-Fi function. (Note: The tablet can only connect to the Wi-Fi of the Star Router. Please make sure that only support 2.4GHz can only connect to the Star Router.)Date setting: set the current date and time, and then click the "Next" button.Time zone: set the time zone, and then click the "Next" button.Google services: slide down to view at service content and then click the "Next" button.Protect Your Tablet: click the "You have nothing" or the "Star" button and the settings will be completed. (Note: If you click the "Star" button, the screen will be set to the factory settings.)After the setup is completed and you have successfully entered the desktop. <p>Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p>	<p>Shenzhen Peicheng Technology CP20PRO Tablet: Simplified User Manual & Setup Guide</p> <p>Get started with your Shenzhen Peicheng Technology CP20PRO tablet. This simplified user manual covers initial setup, Wi-Fi connection, Google services, and essential FCC compliance information.</p>
---	--

	<p>Coopers CP20 Tablet PC User Manual and Support</p> <p>Comprehensive guide for the Coopers CP20 tablet PC, covering setup, features, and support. Includes technical specifications and troubleshooting.</p>
	<p>CP10 Tablet User Guide</p> <p>User guide for the CP10 tablet, covering setup, basic settings, network connection, Bluetooth pairing, app management, multimedia, and troubleshooting.</p>
	<p>BERGSTROM G724 Portable DVD Player User Manual and Instructions</p> <p>Comprehensive instructions and safety guidelines for the BERGSTROM G724 Portable DVD Player, covering specifications, operation, troubleshooting, and maintenance.</p>
	<p>Foldable EMS Neck Massager - Instructions for Use</p> <p>This document provides comprehensive instructions for the Foldable EMS Neck Massager (Item No: M858/62948), detailing its operation, safety precautions, and maintenance. Learn how to use this device for effective neck massage and relief.</p>

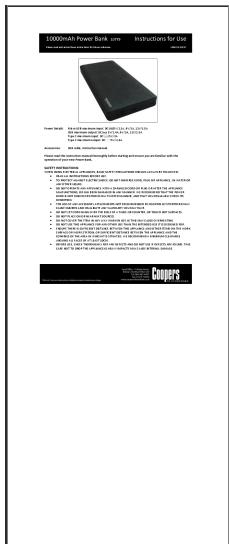 A screenshot of the user manual for the Coopers 10000mAh Power Bank 10779. The page is titled '10000mAh Power Bank 10779 Instructions for Use'. It features a small image of the power bank in the top left. The text is a standard user manual with sections for 'Power Bank', 'Safety Instructions', and 'Care Instructions'. The 'Care Instructions' section includes a 'Charging' sub-section with tips like 'Charge the power bank in a cool, dry place' and 'Do not expose the power bank to extreme temperatures'. The 'Coopers' logo is in the bottom right corner.	<p>Coopers of Stortford 10000mAh Power Bank 10779 User Manual</p> <p>Comprehensive user manual for the Coopers of Stortford 10000mAh Power Bank, model 10779. This guide provides essential safety instructions, detailed operation procedures, charging guidelines, battery status indicators, and care instructions to ensure optimal performance and longevity of your portable power bank.</p>
---	---