

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [MILLENNIUM](#) /
- › [Millennium ChessGenius Pro Electronic Chess Board User Manual](#)

MILLENNIUM ChessGenius

Millennium ChessGenius Pro Electronic Chess Board User Manual

Model: ChessGenius

INTRODUCTION

The Millennium ChessGenius Pro is an advanced electronic chess board designed for players of all skill levels, from beginners to experts. It features an intuitive AI engine, a vibrant color display, and magnetic pieces for a stable and engaging chess experience. This manual provides comprehensive instructions for setting up, operating, and maintaining your ChessGenius Pro.



Figure 1: The Millennium ChessGenius Pro Electronic Chess Board.

WHAT'S INCLUDED

Your Millennium ChessGenius Pro package includes the following items:

- Electronic Chess Board
- 34 Magnetic Chess Pieces (including 2 extra queens for pawn promotion)
- Storage Bag for pieces
- Quick Start Guide



Figure 2: All items included with your ChessGenius Pro.

FEATURES

- **AI Engine:** Challenges players from beginner to master, with an Elo rating range of 350-2200.
- **Extensive Training Library:** Includes over 20,000 openings for study and practice.
- **Sensor Technology:** Registers moves instantly with a light press on the squares.
- **Portability:** Compact and lightweight, powered by AA batteries (AC power available separately) for on-the-go play.
- **Built-in AI Chess Tutor:** Provides move suggestions, legal options, and smart hints to enhance learning.
- **User-Friendly Interface:** Easy setup and engaging program suitable for all ages.

- **Magnetic Pieces:** Ensures pieces remain stable on the board during play or transport.
- **Color Display:** A bright LCD screen shows game information, moves, and hints clearly.

SETUP

Powering the Device

The ChessGenius Pro can be powered by four AA batteries or an optional AC adapter (sold separately).

1. Locate the battery compartment on the underside of the board.
2. Open the battery cover and insert four AA batteries, ensuring correct polarity.
3. Alternatively, connect the optional AC adapter to the power port on the side of the board.



Figure 3: Battery compartment for AA batteries.

Initial Setup and Power-On

1. Place the chess pieces in their starting positions on the board. The magnetic base of the pieces will help them stay in place.
2. Press the power button (usually marked with a circle and vertical line) to turn on the device. The color LCD display will illuminate.
3. The display will show the initial chess board setup and may prompt you to select a language or game mode.



Figure 4: Magnetic pieces ensure stability.

OPERATING INSTRUCTIONS

Basic Gameplay

To make a move, gently press down on the square of the piece you wish to move, then press down on the destination square. The board's sensor technology will register your move. The color display will update to show the move and the current state of the game.

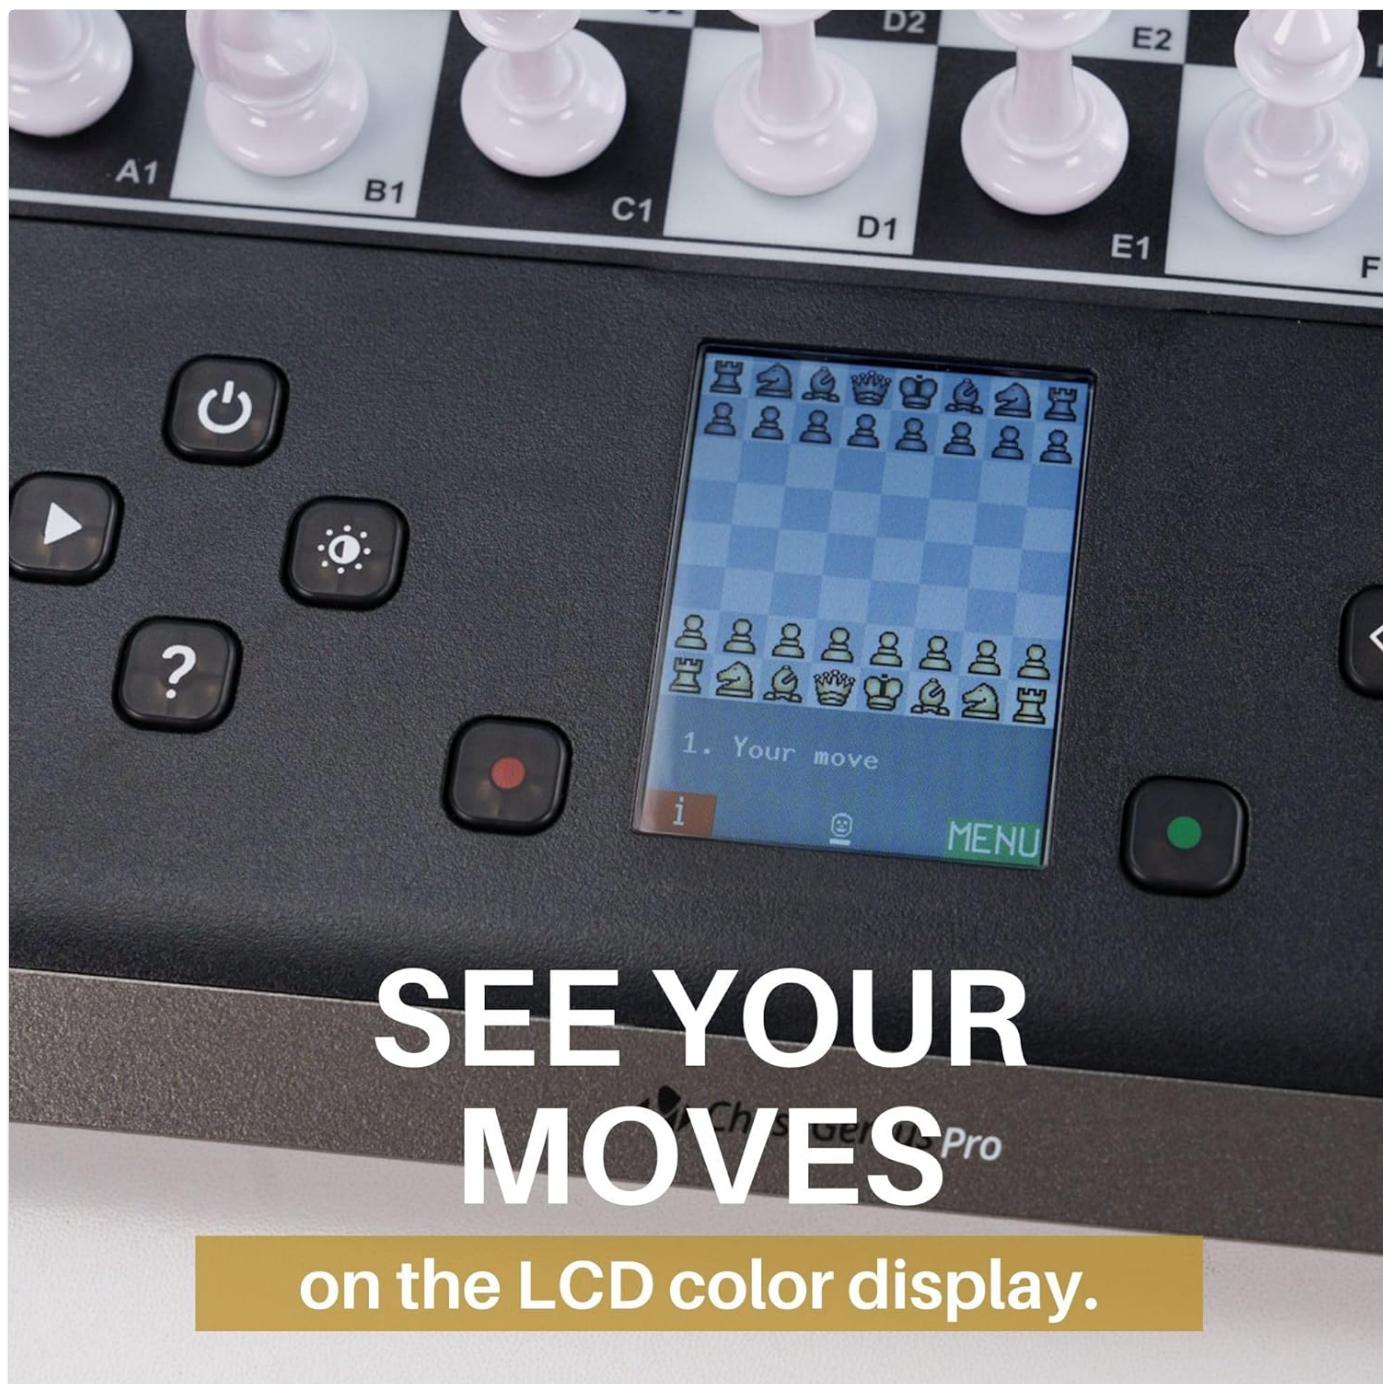 


Figure 5: Clearly see your moves on the LCD color display.

Navigating Menus and Play Levels

Use the arrow buttons and 'SELECT' button to navigate through the menus on the LCD display. You can adjust various settings, including play levels, game modes, and access training features.

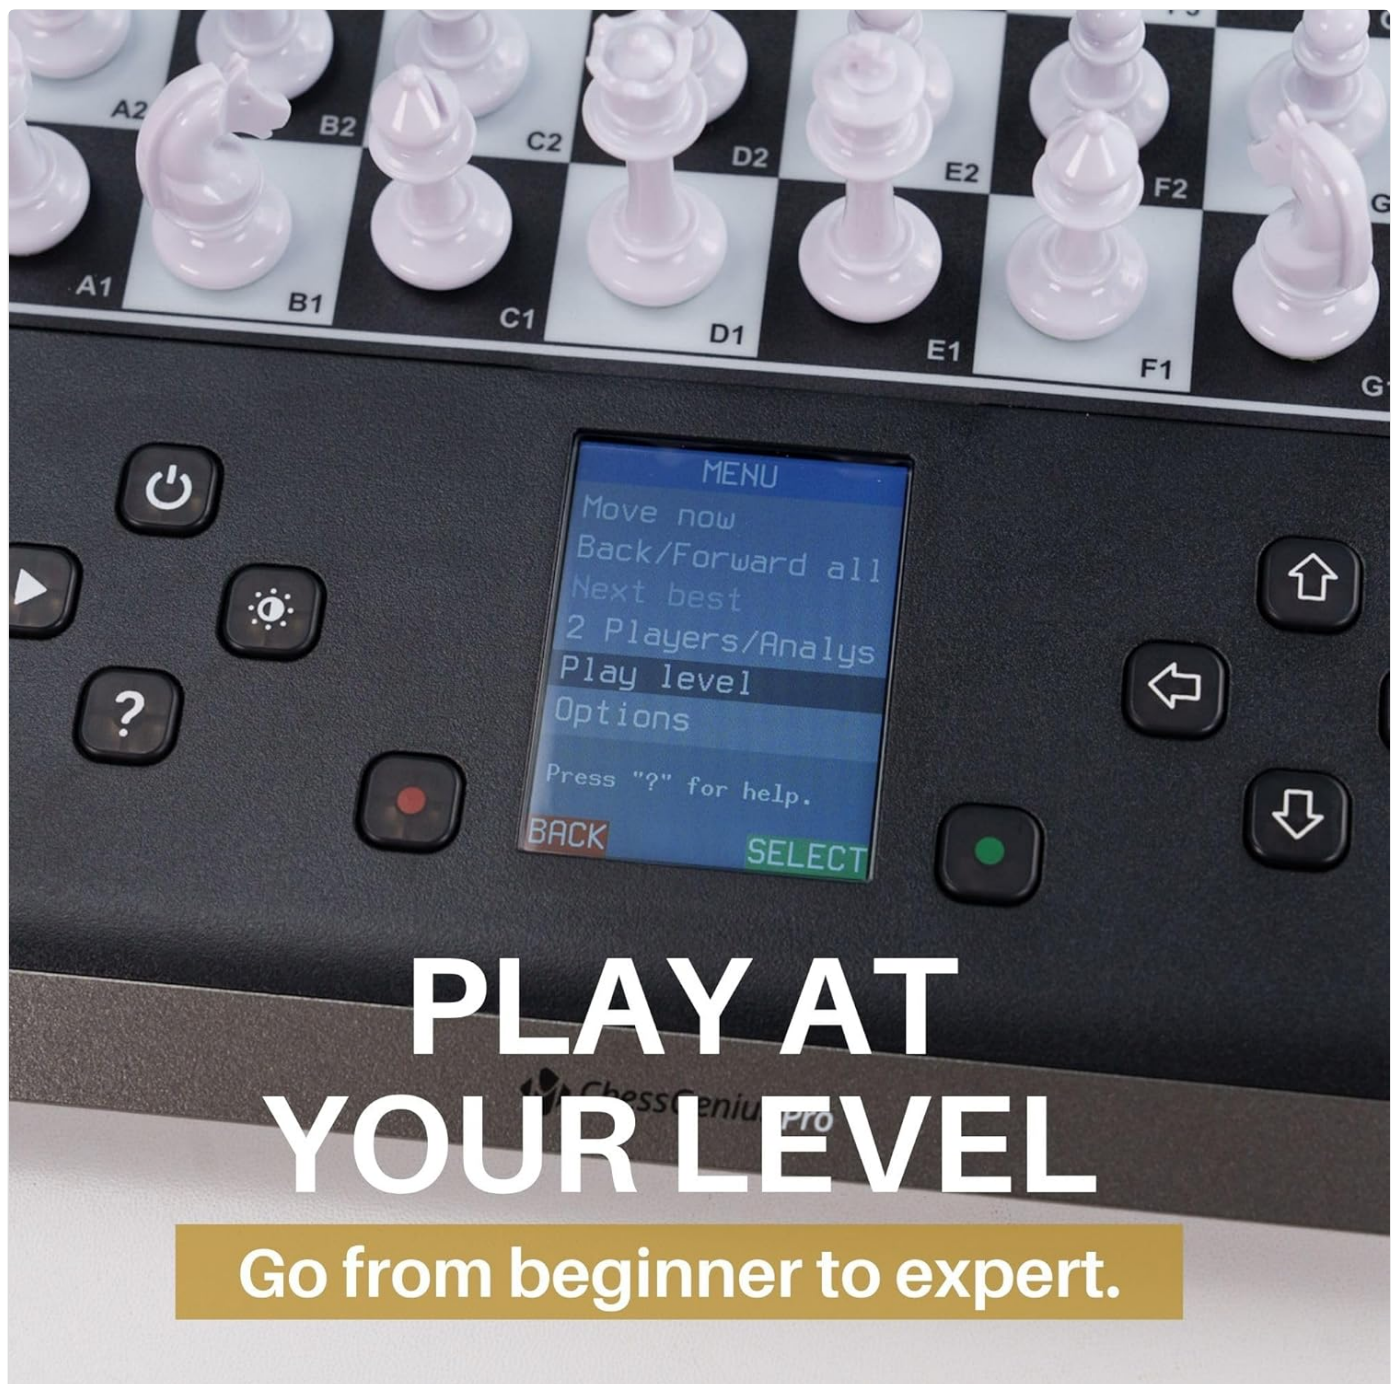 


Figure 6: Menu options allow you to play at your level.

- **Play Level:** Select from a wide range of Elo ratings (350-2200) to match your skill.
- **Hints:** Request move suggestions or legal options from the built-in tutor.
- **2 Players/Analysis:** Switch between playing against the AI or using the board for 2-player games and analysis.

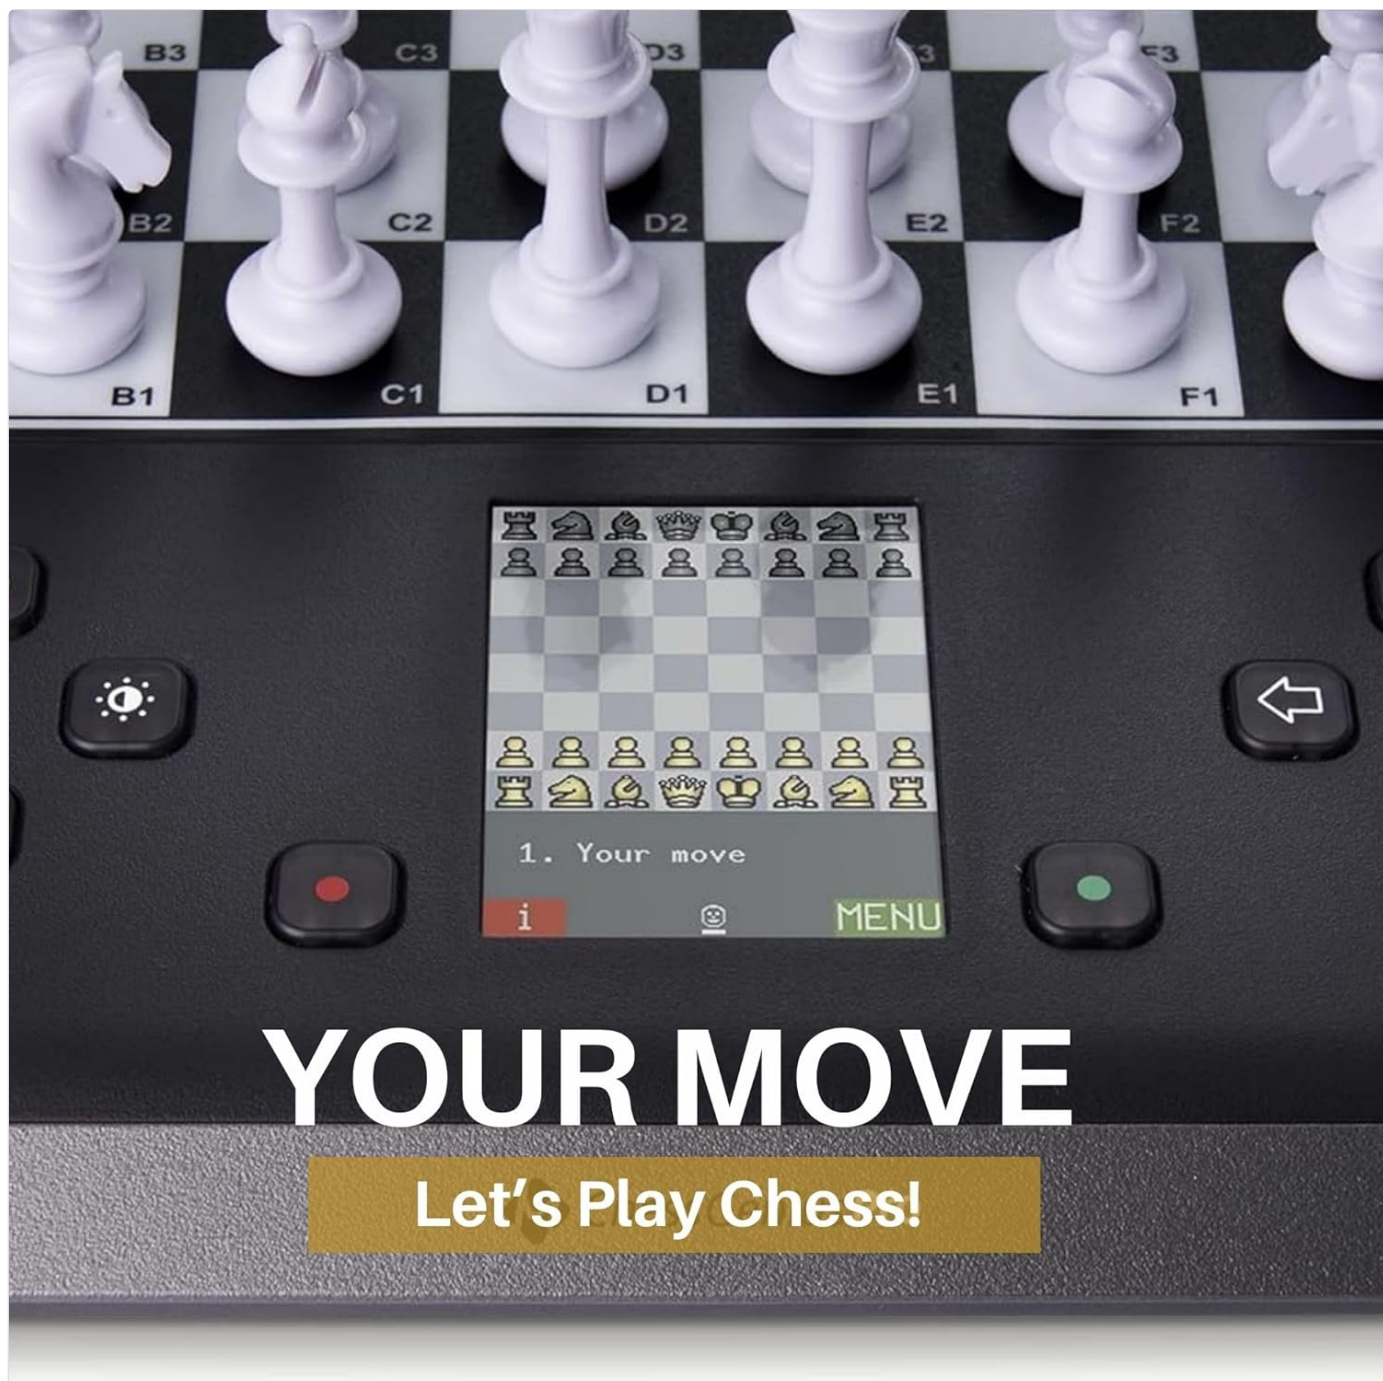 


Figure 7: The display indicates whose turn it is.

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video 1: ChessGenius Pro - 2 Minute Demo - Fun for All Levels & Ages. This video provides a quick overview of the ChessGenius Pro's features and demonstrates its ease of use for players of all skill levels.

MAINTENANCE

Cleaning

To ensure the longevity and optimal performance of your ChessGenius Pro, follow these cleaning guidelines:

- Wipe the board surface with a soft, dry cloth. Avoid abrasive cleaners or solvents.

- Clean the chess pieces with a soft, damp cloth if necessary, then dry thoroughly.
- Ensure no liquids enter the electronic components or battery compartment.

Battery Replacement

When the display indicates low battery or the device does not power on, replace the AA batteries as described in the "Powering the Device" section under Setup.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low or no batteries; incorrect battery insertion; AC adapter not connected (if used).	Replace batteries, check polarity, or ensure AC adapter is securely connected.
Moves are not registering.	Pieces not pressed firmly enough; foreign object on sensor square.	Ensure a firm press on the squares. Check for debris on the board surface.
Pieces feel loose or fall easily.	Magnets may be weak (less common for Pro model); board not on a stable surface.	Ensure the board is on a flat, stable surface. If issues persist, contact support.
Display is dim or unreadable.	Low battery; brightness setting too low.	Replace batteries. Adjust display brightness using the dedicated button.




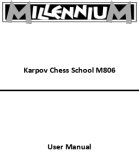 


SPECIFICATIONS

- **Item Weight:** 2 pounds
- **Item Model Number:** ChessGenius
- **Manufacturer Recommended Age:** 3 years and up
- **Release Date:** February 5, 2024
- **Manufacturer:** Millennium 2000 GmbH

WARRANTY & SUPPORT

For warranty information or technical support regarding your Millennium ChessGenius Pro, please contact the seller, Chess House, directly through your purchase platform or their official website. They can provide assistance with product issues, returns, or replacement parts.

Millennium Electronic Chess Boards are known for their high-quality construction and user-friendly interfaces. For further assistance, refer to the Quick Start Guide included in your package.

 <p>Lucas Chess Version 1.29a</p>	<p>Lucas Chess 1.29a: Guide to Using Millennium eONE Chess Boards</p> <p>Comprehensive guide to installing and using Lucas Chess software with Millennium eONE electronic chess boards, covering setup, engine selection, and position input via Bluetooth.</p>
 <p>Quick Start Guide M815 ChessGenius Pro</p>	<p>Millennium M815 ChessGenius Pro Quick Start Guide</p> <p>Get started quickly with your Millennium M815 ChessGenius Pro chess computer. This quick start guide provides essential instructions for setup, language selection, and playing your first game. Learn about basic operations and access the full manual.</p>
 <p>Quick Start Guide M841 eONE</p>	<p>Millennium eONE M841 Quick Start Guide</p> <p>A quick start guide for the Millennium eONE M841 chess computer, covering initial setup, charging, controls, and gameplay. Includes instructions in multiple languages.</p>
 <p>Karpov Chess School M806</p> <p>User Manual</p>	<p>Millennium Karpov Chess School M806: User Manual and Chess Computer Guide</p> <p>User manual for the Millennium Karpov Chess School M806 electronic chess computer. Learn setup, game modes, special features, and technical specifications.</p>
 <p>MILLENNIUM</p> <p>EUROPE Chess Champion M800</p> <p>User Manual</p>	<p>MILLENNIUM Europe Chess Champion M800 User Manual</p> <p>User manual for the MILLENNIUM Europe Chess Champion M800 electronic chess computer. Learn setup, game rules for Chess, Checkers, Reversi, and more, special features, and troubleshooting. Supports models M803 and M807.</p>
 <p>Supreme T2</p> <p>Guía de inicio rápido</p>	<p>Millennium Supreme T2: Guía de Inicio Rápido</p> <p>Guía de inicio rápido para el tablero de ajedrez electrónico Millennium Supreme T2. Aprenda a configurar, conectar, jugar y gestionar sus partidas con instrucciones claras y recursos útiles.</p>