

## techno line WT375

# Technoline WT375 Radio-Controlled Digital Alarm Clock User Manual

Model: WT375 | Brand: Technoline

## INTRODUCTION

---

Thank you for choosing the Technoline WT375 Radio-Controlled Digital Alarm Clock. This compact and feature-rich device provides accurate timekeeping, indoor temperature display, and a convenient alarm function with snooze. Its E-Ink display offers excellent readability. Please read this manual carefully to ensure proper setup and operation.



Figure 1: Front view of the Technoline WT375 Digital Alarm Clock.

## KEY FEATURES

- High-quality radio-controlled timekeeping (no manual time setting required).
- E-Ink / E-paper display for superior readability.
- Switchable display mode (normal to negative).
- 12/24 hour time format display.
- Date display.
- Indoor temperature display in Celsius (°C) or Fahrenheit (°F).
- Alarm with snooze function.
- Low battery indicator.

## PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- 1 x Technoline WT375 Digital Alarm Clock
- 1 x User Manual (this document)

**Note:** 2 x AAA Micro LR03 batteries are not included and must be purchased separately.



Figure 2: Product packaging, indicating included items and features.

## SETUP

### 1. Battery Installation

1. Locate the battery compartment on the back of the alarm clock.
2. Open the battery compartment cover.
3. Insert 2 x AAA (LR03) batteries, ensuring correct polarity (+ and -).
4. Close the battery compartment cover securely.

Upon battery installation, the clock will automatically begin searching for the radio-controlled time signal (DCF-77). This process may take several minutes. Ensure the clock is placed away from sources of interference such as electronic devices or metal objects.

### 2. Initial Time Synchronization

The WT375 is a radio-controlled clock, meaning it automatically synchronizes its time with a precise atomic clock signal.

- Place the clock near a window for better signal reception.
- The signal reception icon (often a tower or waves) will flash during synchronization.

- Once synchronized, the icon will become solid, and the correct time, date, and day will be displayed.
- If the signal is not received within 24 hours, try relocating the clock.

## OPERATING INSTRUCTIONS

### Button Functions



Figure 3: Side view illustrating button placement.

Button	Function (Short Press)	Function (Long Press)
--------	------------------------	-----------------------

Button	Function (Short Press)	Function (Long Press)
<b>MODE</b> (often on the back/side)	Cycle through display modes (Time, Date, Temperature).	Enter time/alarm setting mode.
<b>+ / UP</b>	Increase value in setting mode; Toggle 12/24 hour format (outside setting mode).	Manually initiate DCF signal search.
<b>- / DOWN</b>	Decrease value in setting mode; Toggle °C/°F temperature unit (outside setting mode).	Toggle normal/negative display mode.
<b>ALARM / SET</b> (often on the back/side)	Activate/Deactivate alarm.	Enter alarm setting mode.
<b>SNOOZE / LIGHT</b> (top button)	Activate snooze during alarm; Briefly illuminate display.	Stop alarm for the day.

## Setting the Alarm

1. Press and hold the **ALARM / SET** button until the alarm time starts flashing.
2. Use the + or - buttons to adjust the hour. Press **ALARM / SET** to confirm.
3. Use the + or - buttons to adjust the minute. Press **ALARM / SET** to confirm and exit alarm setting.
4. To activate or deactivate the alarm, short press the **ALARM / SET** button. An alarm icon will appear/disappear on the display.

## Using the Snooze Function

When the alarm sounds, press the **SNOOZE / LIGHT** button on top of the clock. The alarm will temporarily stop and sound again after approximately 5 minutes.

To stop the alarm completely for the day, press any other button (e.g. **MODE**, +, -) or long press the **SNOOZE / LIGHT** button.

## Changing Display Modes (Normal/Negative)

The WT375 features an E-Ink display that can switch between a normal (dark digits on light background) and a negative (light digits on dark background) display mode.

- Long press the **- / DOWN** button to toggle between the normal and negative display modes.



Figure 4: The WT375 display in negative mode.

## MAINTENANCE

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** When the low battery indicator appears on the display, replace both AAA batteries promptly to ensure continued accurate operation.
- **Storage:** If storing the clock for an extended period, remove the batteries to prevent leakage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not displaying time / blank screen.	No batteries or incorrect battery polarity.	Ensure batteries are inserted correctly with proper polarity. Replace batteries if depleted.
Time is incorrect or not setting automatically.	Poor DCF-77 signal reception.	Relocate the clock closer to a window or away from electronic interference. Manually initiate signal search (long press '+').
Alarm not sounding.	Alarm not activated or alarm volume too low (if adjustable).	Ensure the alarm icon is displayed. Check alarm settings. (Note: This model has fixed alarm volume).
Temperature reading seems inaccurate.	Clock placed near heat sources or direct sunlight.	Move the clock to a location with stable ambient temperature.

## SPECIFICATIONS

Feature	Detail
Model	WT375
Brand	Technoline
Display Type	Digital E-Ink / E-paper
Time Format	12/24 Hour selectable
Temperature Range (Internal)	-9.9 °C (14.2 °F) to +50 °C (122.0 °F)
Recommended Temperature Range	0 °C (32 °F) to +40 °C (104 °F)
Temperature Resolution	0.1 °C
Temperature Accuracy	± 0.5 °C for 0 °C - 40 °C
Power Source	2 x 1.5V AAA Micro batteries (not included)
Dimensions (L x W x H)	5.9 x 3.81 x 5.9 cm (2.32 x 1.5 x 2.32 inches)
Weight	69 grams (approx. 2.43 oz)
Material	Acrylonitrile Butadiene Styrene (ABS)
Special Features	Radio-controlled time, Calendar display, Alarm, Snooze, E-Ink display, Low battery indicator

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official Technoline website.

**Manufacturer:** technoline

**Country of Origin:** China

© 2025 Technoline. All rights reserved.