

KODAK PM00-149A

KODAK Mini Shot 2 ERA 4PASS 2-in-1 Instant Camera and Photo Printer

Model: PM00-149A

INTRODUCTION

The KODAK Mini Shot 2 ERA is a versatile 2-in-1 device that functions as both an instant camera and a portable photo printer. Utilizing 4PASS technology, it produces high-quality, laminated prints directly from captured images or photos transferred via Bluetooth from your smartphone. This manual provides essential information for setting up, operating, and maintaining your device.



Image: KODAK Mini Shot 2 ERA camera with included photo paper cartridges.

SETUP

What's in the Box

Your KODAK Mini Shot 2 ERA package typically includes:

- KODAK Mini Shot 2 ERA Camera
- Initial Photo Paper Cartridge (8 sheets)
- Additional Photo Paper Cartridges (e.g., 60 sheets)
- Wrist Strap
- USB-C Type Charging Cable
- User Guide

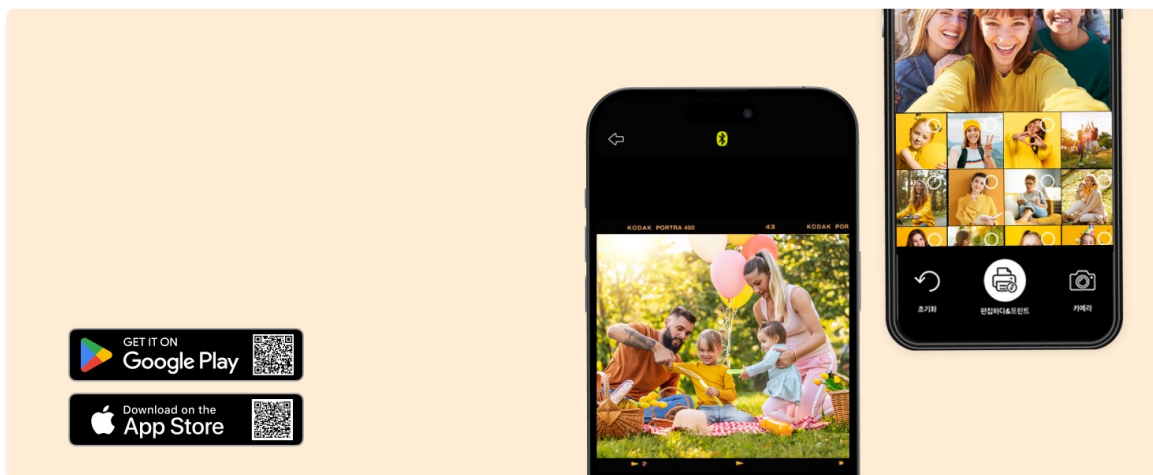 


Image: Overview of items included in the product box.

Inserting/Changing Photo Paper Cartridge

To insert or replace the photo paper cartridge:

1. Locate the cartridge slot on the side of the camera.
2. Gently open the cartridge cover.
3. Insert the new cartridge, ensuring it is oriented correctly. The cartridge is designed to fit only one way.
4. Push the cartridge in until you hear a 'click' sound, indicating it is securely in place.
5. Close the cartridge cover.



Image: Visual guide for inserting the photo paper cartridge.

Charging the Device

The KODAK Mini Shot 2 ERA uses a rechargeable Lithium Ion battery. Connect the provided USB-C cable to the charging port on the device and to a compatible USB power source. The indicator light will show the charging status.

App Installation and Bluetooth Connection

To print photos from your mobile device, download the official KODAK Photo Printer app. The app is compatible with Apple iPhone, iPad, and Android devices. Once installed, enable Bluetooth on your mobile device and pair it with your KODAK Mini Shot 2 ERA camera.



Image: KODAK Photo Printer app interface on a smartphone, showing Bluetooth connection to the camera.

Powering On/Off

Press and hold the power button located on the top of the device to turn the camera on or off. An indicator light will illuminate when the device is powered on.

Taking Photos

The KODAK Mini Shot 2 ERA features auto-focus and face detection to assist in capturing clear images. Point the camera at your subject and press the shutter button. The LCD screen on the back will display the captured image.



KODAK Mini Shot
(initial 8 sheets of Photo Paper)



Additional 30 sheets



KODAK Mini Shot
Get more with us

Image: Auto Focus and Face Detection in action on the camera's display.

Printing Photos

After capturing an image with the camera, the LCD screen will present options to print or cancel. Select 'Print' to initiate the printing process. You can also select the number of copies to print. For printing photos from your mobile device, use the KODAK Photo Printer app to select and send images via Bluetooth.

Your browser does not support the video tag.

Video: Demonstration of printing an image directly from the KODAK Mini Shot 2 ERA camera.

Print Quality and Lamination

The KODAK Mini Shot 2 ERA utilizes 4PASS technology to produce 24-bit / 16.7 million color prints with refined saturation and enhanced color display. Each print is multi-layered and laminated, making it fingerprint and water-resistant for durability.

4PASS

Superior Image Quality



Image: Visual representation of 4PASS superior image quality.

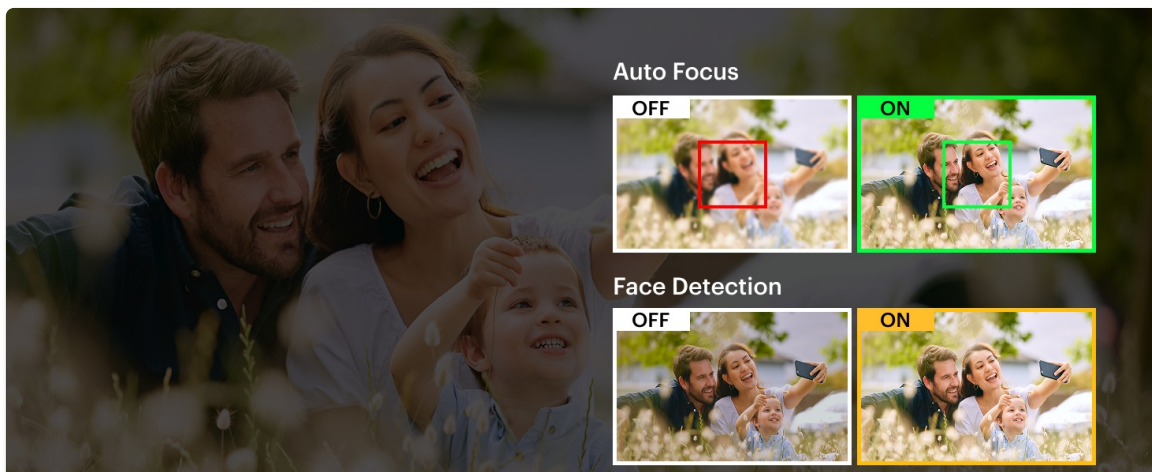 


Image: Example of a water-resistant print from the KODAK Mini Shot 2 ERA.

Editing and Framing Photos (via App)

The KODAK Photo Printer app allows you to edit your photos and add various frames before printing. This feature enables customization to match different styles and preferences.

Check more frames on **KODAK** photo printer app!



One Camera,
Frames to Match Every Style!



Image: Examples of frames and editing options within the KODAK Photo Printer app.

Removing Print Borders

Prints from the KODAK Mini Shot 2 ERA may have a perforated tab at one end. This tab can be easily removed to achieve a borderless print, or kept for a classic bordered look.

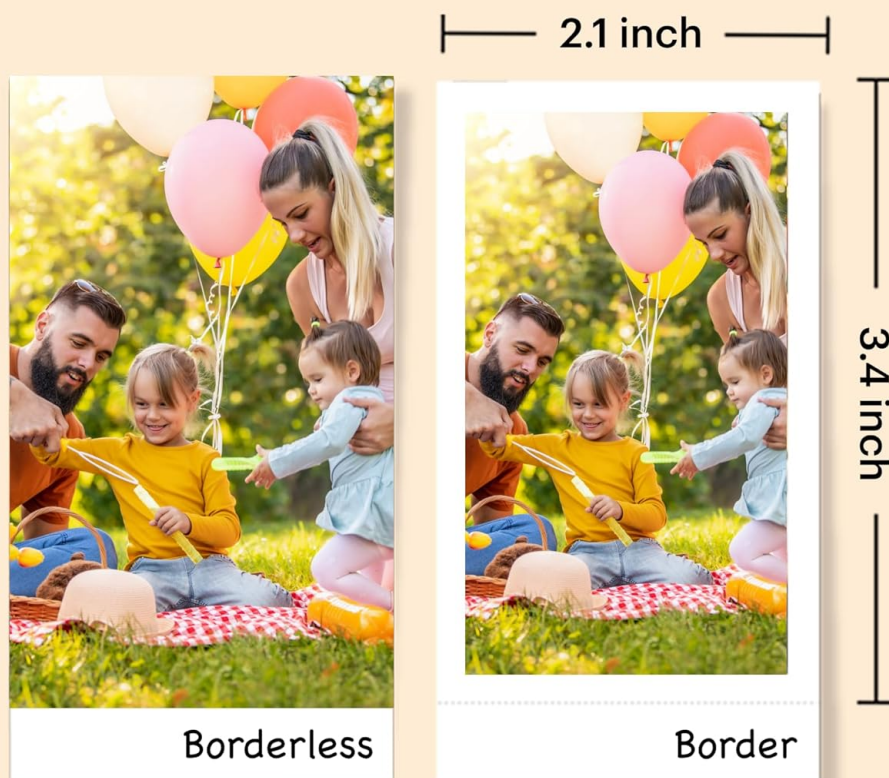 


Image: Comparison of borderless and bordered photo prints.

MAINTENANCE

Cleaning

To clean the exterior of your camera, use a soft, dry cloth. Avoid using liquid cleaners or abrasive materials. For the lens, use a specialized lens cleaning cloth.

Storage

Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the lens is protected when not in use. Keep photo paper cartridges sealed in their original packaging until ready for use to maintain print quality.

Cartridge Handling

When handling photo paper cartridges, avoid touching the print surface of the paper to prevent fingerprints or smudges that could affect print quality.

TROUBLESHOOTING

Common Issues

- **Poor Print Quality:** Ensure the photo paper cartridge is correctly inserted and not expired.

Avoid pulling the paper during the printing process.

- **Connectivity Issues:** Verify Bluetooth is enabled on both devices and that the camera is within range. Try restarting both the camera and your mobile device.
- **Paper Jams:** Carefully open the cartridge slot and gently remove any jammed paper. Ensure the cartridge is properly seated.
- **Camera Not Powering On:** Check the battery level and ensure the device is charged.

For further assistance, refer to the full user guide or contact KODAK customer support.

SPECIFICATIONS

Feature	Detail
Model Name	Mini Shot 2 ERA 4PASS
Item Model Number	PM00-149A
Brand	KODAK
Film Format Type	Instant
Compatible Devices	Smartphone
Item Weight	1.59 pounds (721 Grams)
Package Dimensions	10.75 x 7.52 x 2.24 inches
Batteries	2 Lithium Ion batteries required (included)
Max Shutter Speed	1/2000 seconds
Shutter Type	Focal Plane Shutter
Included Components	Paper

ENVIRONMENTAL CONSIDERATIONS

KODAK is committed to environmental responsibility:

- Photo paper cartridges are made of 100% recycled plastic.
- The use of a USB-C cable reduces electrical waste.
- Product packaging is made from recycled paper.

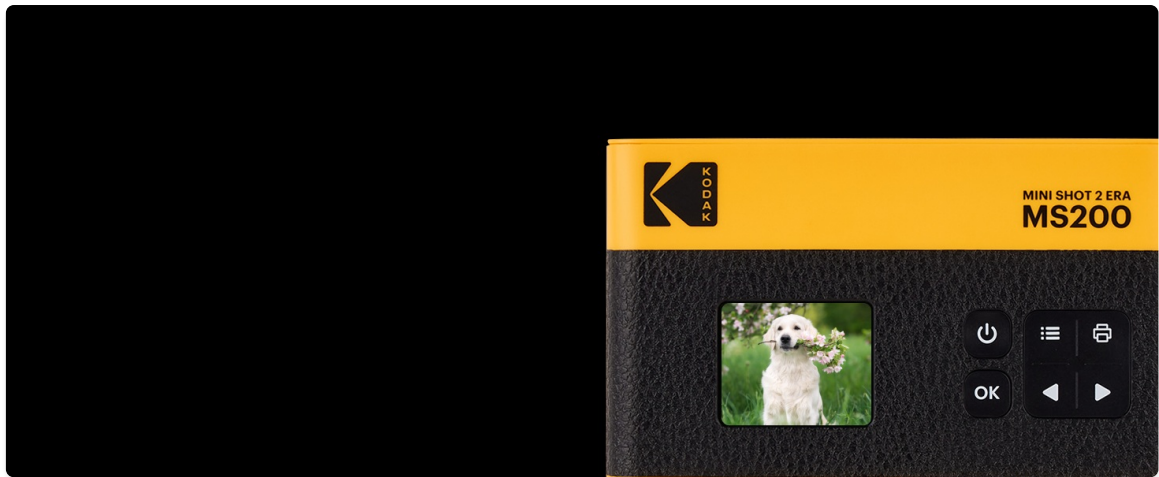 




 
Image: KODAK's commitment to sustainability with recycled materials and reduced waste.

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the detailed warranty card included in your product packaging or visit the official KODAK Photo Printer website. Contact information for customer support can typically be found in the user guide or on the manufacturer's website.

© 2023 KODAK. All rights reserved.

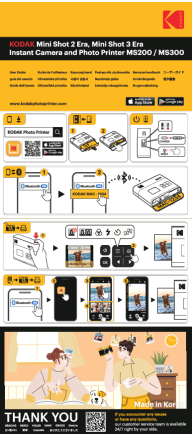

Related Documents - PM00-149A

	Kodak Mini Shot 3 Retro User Manual User manual for the Kodak Mini Shot 3 Retro 2-in-1 portable wireless instant camera and photo printer. Includes instructions on setup, printing, and maintenance.
	Kodak Mini Shot 3 Retro Instant Camera and Photo Printer User Manual Comprehensive user manual for the Kodak Mini Shot 3 Retro and Mini Shot 2 Retro instant camera and photo printers, detailing features, operation, and troubleshooting.
	KODAK Mini Shot 2 Era & Mini Shot 3 Era Instant Camera and Photo Printer MS200/MS300 User Guide User guide for the KODAK Mini Shot 2 Era and Mini Shot 3 Era instant camera and photo printers (MS200/MS300). This guide covers setup, Bluetooth connection, photo printing, and warranty information.



[KODAK MEMO SHOT ERA MS100 User Guide - Setup, Features, and Warranty](#)

Comprehensive user guide for the KODAK MEMO SHOT ERA MS100 instant camera printer. Learn about setup, app connection, printing, warranty, and support.

	<p>KODAK M50 Monochrome Thermal Instant Printer User Manual</p> <p>Comprehensive user manual for the KODAK M50 Monochrome Thermal Instant Printer (ver 3.0), covering specifications, setup, operation, Bluetooth pairing, app usage, warranty information, and compliance details. Learn how to use your KODAK M50 printer.</p>
	<p>KODAK Mini 2 Instant Photo Printer User Guide</p> <p>User guide for the KODAK Mini 2 Instant Photo Printer, covering smartphone app installation (Android and iOS), NFC and Bluetooth connection methods, printing process, important notes, troubleshooting, status indicators, and FCC compliance information.</p>