

JVD 8662154-VDE

JVD Soho 1 Litre Electric Kettle Instruction Manual

Model: 8662154-VDE

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions carefully before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and personal injury, do not immerse cord, plugs, or electric kettle in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot water.
- Ensure the lid is securely closed before operating.
- This appliance is for household use only.

2. PRODUCT OVERVIEW

The JVD Soho Electric Kettle is designed for efficient and safe water boiling. It features a 1-litre capacity, 1500W fast boil, stainless steel inner, and safety features like auto shut-off and boil-dry protection.



This image shows the JVD Soho electric kettle from the front, highlighting its black finish and the clear water level indicator on the side.



A view of the JVD Soho electric kettle with its lid securely closed, ready for operation.



The JVD Soho electric kettle with its lid open, demonstrating the wide opening for easy filling and cleaning.



A top-down perspective of the kettle with the lid open, clearly showing the hygienic stainless steel inner wall.



The JVD Soho electric kettle displayed on a kitchen countertop, demonstrating its aesthetic integration into a home environment.

3. SETUP AND FIRST USE

Unpacking

- Remove all packaging materials from the kettle and its base.
- Ensure all components are present: kettle body and power base.

Before First Use

Before using your kettle for the first time, it is recommended to clean it by following these steps:

1. Fill the kettle with clean water up to the MAX fill line.
2. Boil the water.
3. Discard the boiled water.
4. Repeat this process 2-3 times to ensure the kettle is thoroughly clean.



This image displays the JVD Soho electric kettle alongside its separate 360-degree rotational power base and attached power cord.

4. OPERATING INSTRUCTIONS

1. **Fill the Kettle:** Open the lid and fill the kettle with the desired amount of fresh water. Do not fill below the MIN mark or above the MAX mark indicated on the water level indicator. Ensure the lid is securely closed after filling.
2. **Place on Power Base:** Place the kettle firmly onto its power base.
3. **Connect to Power:** Plug the power cord into a suitable wall outlet.
4. **Switch On:** Press the ON/OFF switch (usually located near the handle) downwards. The indicator light will illuminate, signifying that the kettle is heating.
5. **Boiling:** The kettle will begin to heat the water.
6. **Automatic Shut-Off:** Once the water reaches boiling point, the kettle will automatically switch off, and the indicator light will extinguish.
7. **Pouring:** Carefully lift the kettle from its base and pour the hot water. Exercise caution as the kettle body and steam can be very hot.
8. **Re-boiling:** If you need to re-boil, wait a few moments for the internal thermostat to reset before pressing the switch again.

Boil-Dry Protection

The kettle is equipped with a boil-dry protection feature. If the kettle is accidentally switched on without sufficient water, it will automatically turn off to prevent damage. If this occurs, allow the kettle to cool down for several minutes before refilling with water and operating again.



The JVD Soho electric kettle positioned on a serving tray, illustrating its compact size suitable for various settings.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your kettle.

- Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- Do not immerse the kettle body or power base in water or any other liquid.
- Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
- The interior stainless steel can be cleaned with a soft brush or sponge if needed.

Descaling

Over time, mineral deposits (limescale) may build up inside your kettle, especially in hard water areas. This can affect performance and taste. Descale your kettle regularly (e.g., monthly or bi-monthly depending on

water hardness).

1. Fill the kettle with a mixture of one part white vinegar and two parts water, or use a commercial descaling solution according to its instructions.
2. Bring the mixture to a boil.
3. Allow the solution to soak in the kettle for at least 30 minutes, or longer if scale is heavy.
4. Discard the solution and rinse the kettle thoroughly with fresh water several times.
5. Boil fresh water in the kettle and discard it 2-3 times to remove any residual vinegar or descaling solution taste.

6. TROUBLESHOOTING

- **Kettle does not turn on:**

- Ensure the power cord is securely plugged into a working wall outlet.
- Check if the kettle is properly seated on its power base.
- Verify that the ON/OFF switch is pressed down.
- If the kettle recently boiled dry, allow it to cool down before attempting to use it again.

- **Water is not boiling:**

- Ensure the kettle is filled above the MIN level and below the MAX level.
- Check if the lid is securely closed.
- If the kettle has significant limescale buildup, descaling may improve performance.

- **Kettle switches off before boiling:**

- This could indicate excessive limescale buildup. Descale the kettle.
- Ensure the kettle is not overfilled.

7. SPECIFICATIONS

Brand	JVD
Model Name	8662154-VDE
Capacity	1 Litre
Wattage	1500 Watts
Material	Stainless Steel (Inner)
Colour	Black
Special Features	Automatic Shut-Off, Boil Dry Protection, Water Level Indicator
Product Dimensions	23L x 19.5W x 15.5H Centimeters
Item Weight	850 g

8. WARRANTY INFORMATION

This JVD Soho Electric Kettle comes with a manufacturer's warranty. Please refer to your purchase

documentation, receipt, or the product packaging for specific warranty terms, duration, and conditions. Keep your proof of purchase for any warranty claims.

9. CUSTOMER SUPPORT

For any questions, concerns, or assistance with your JVD Soho Electric Kettle, please contact the retailer where you purchased the product or refer to the manufacturer's official website for support contact details.